

C3023BELTSTATIONOPERATOR'SINSTRUCTIONS

INTRODUCTION

TheDavidClarkCompany(DCCI)C3023BeltStationprovidesremoteaccesstotheU3815A HeadsetStation/RadioInterfaceModule.TheBeltStationisalightweig ht,belt-wornunitwitha positiveaction,push-to-talk(PTT)switch,aheadsetlistenlevelcontrol,aquick -disconnect headsetjackanda15'coilcordforconnectiontoaU3815A.

CONNECTION:

- 1) ConnecttheC3023totheU3815Aasfollows:
 - a. Alignkey-wayslotonC3023cordconnectorwithkeyinconnectoronU3815Alabeled "RemotePTT".
 - b. InsertC3023cordconnectoruntilfirmlyseated.
 - c. HandtightenswivelnutonC3023cordconnector. NOTE:DONOTOVERTIGHTEN.
- 2) AffixC3023tosuitablelocationonclothing.
- 3) Donheadsetandpositiontheboommountedmicrophonedirectlyinfrontofmouth, within 1/8" of lips.



NOTE: Inordertoproperlycancelbackgroundnoiseand provide clear communications, placement of the MICROPHONE must be within 1/8" of lips.

OPERATION

- 1) Themicrophoneisactivated/deactivatedbypushingtheswitchontheearcupofthe headset. Itisnotnecessarytoholdthisswitch.Pushtoactivate,pushagaintodeactivate.
- 2) AdjustthelistenlinelevelcontrolontheC3023toacomfortablelevel.
- 3) Forintercommodeactivatemicrophoneandspeakintothemicrophoneatnormaltoneand level. Speaking loudly will cause distortion in system.

- 4) Totransmitovertheradio,depressandholdthePTTswitchlocatedontheC3023Belt Station(microphonemustbeactive–inintercommode).Radiotransmissionislimit edto thisheadsetonly.
- 5) RadioreceiveaudiowillbeheardbyallheadsetswithintheSeries3800Inte rcomSystem, exceptduringtransmission.
- 6) VoicesidetoneoftransmissionisheardbyallheadsetswithintheSeries3800 Intercom System.

SPECIFICATIONS:

Housing:allmetal,affordsRFIprotection.

Housingsize:3-1/4"Lx2-1/4"Wx1"D

CommunicationCord:Coilcordnominallength2'retracted,15'extended5pinMSconnector. HeadsetConnector:1/4"phonejackmateswith1/4"phoneplugonH3300Seriesheadsetcord. PTTSwitch:momentary,positivedetenttype,actuationforce2lbs.,500,000cyclelife Weight:19oz.approximately.