



SERIES 9900 WIRELESS INTERCOM SYSTEM

VOX BELT STATIONS
U9910-BSW & U9911-BSC
VOX ADJUSTMENTS



SERIES 9900 WIRELESS INTERCOM SYSTEM



First, ensure that your VOX Belt Station power is on, and that it is linked with a controller or gateway.



SERIES 9900 WIRELESS INTERCOM SYSTEM



*Stand in the noisy environment where you will be using the system, but **do not speak.***



SERIES 9900 WIRELESS INTERCOM SYSTEM



Turn the VOX control full counter-clockwise.



You will hear a continuous tone.



SERIES 9900 WIRELESS INTERCOM SYSTEM



While continuing not to speak, slowly turn the VOX knob clockwise until the tone stops.



VOX is now optimally set for your environment.



SERIES 9900 WIRELESS INTERCOM SYSTEM



The tone will stop automatically after 5 seconds of not changing the VOX knob position.



SERIES 9900 WIRELESS INTERCOM SYSTEM



If you move to another location, you may wish to repeat this process.



SERIES 9900 WIRELESS INTERCOM SYSTEM

VOX SUMMARY

Full clockwise rotation will completely turn off the microphone



Turn clockwise for higher noise environments



SERIES 9900 WIRELESS INTERCOM SYSTEM

VOX SUMMARY

Full counter-clockwise rotation will completely open the mic line (“hot-mic”)



Turn counter-clockwise for lower noise environments

