



**SERIES 9900 WIRELESS INTERCOM SYSTEM**

**NON-VOX BELT STATION**

**U9912-BSW**

**PURGING INSTRUCTIONS**



## SERIES 9900 WIRELESS INTERCOM SYSTEM

First, turn off the Belt Station power by pressing the power button on the side of the unit



POWER  
BUTTON



## SERIES 9900 WIRELESS INTERCOM SYSTEM

Next, push and hold the PTT switch on the front of the unit.



PTT BUTTON



## SERIES 9900 WIRELESS INTERCOM SYSTEM

Then, push and **hold** the power button, powering the unit up, **while continuing to hold the PTT switch**



## SERIES 9900 WIRELESS INTERCOM SYSTEM



To complete the process, when the LED indicator turns **red**, release the power button...



...then release the PTT switch. The LED indicator will **flash red** For 15 to 20 seconds, followed by a voice prompt, "Connection Lost."

