

MARINE INTERCOM

U9921-GUV

PURGING INSTRUCTIONS





First, <u>turn off</u> the Belt Station power by <u>pressing the power button</u> on the side of the unit







Next, <u>push</u> and <u>hold</u> the <u>PTT</u> <u>switch</u> on the front of the unit.



PTT BUTTON





Then, <u>push</u> and <u>hold</u> the <u>power</u> <u>button</u>, powering the unit up, **while continuing to hold the PTT switch**






To complete the process, **when the LED indicator turns** <u>red</u>, <u>release the power button...</u>



...then <u>release the PTT switch</u>. The LED indicator will <u>flash red</u> For 15 to 20 seconds, followed by a voice prompt, "Connection Deleted."



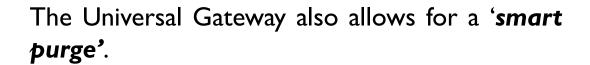

This would involve a scenario involving a system with more than four (4) Belt Stations linked to a Gateway.

In such a scenario, a smart purge would achieve a purge of only those Belt Stations linked but not connected with full-duplex audio.





To execute a smart purge, <u>hold the link button</u> for about 30 seconds, until the LED blinks red, indicating a lost connection.



A voice prompt can now be heard through all Headsets connected to registered-but-unlinked Belt Stations, "Connection Deleted."



