



SERIES 9900 WIRELESS INTERCOM SYSTEM

VEHICLE INTERCOM

U9922-G38

PURGING INSTRUCTIONS



SERIES 9900 WIRELESS INTERCOM SYSTEM

First, turn off the Belt Station power by pressing the power button on the side of the unit



POWER
BUTTON



SERIES 9900 WIRELESS INTERCOM SYSTEM

Next, push and hold the PTT switch on the front of the unit.



PTT BUTTON



SERIES 9900 WIRELESS INTERCOM SYSTEM



Then, push and **hold** the power button, powering the unit up, **while continuing to hold the PTT switch**



SERIES 9900 WIRELESS INTERCOM SYSTEM



To complete the process, **when the LED indicator turns red, release the power button...**



PTT BUTTON

POWER
BUTTON

...then release the PTT switch. The LED indicator will **flash red** For 15 to 20 seconds, followed by a voice prompt, "Connection Deleted."



SERIES 9900 WIRELESS INTERCOM SYSTEM



The 3800 Gateway also allows for a '*smart purge*'.

This would involve a scenario involving a system with more than four (4) Belt Stations linked to a Gateway.

In such a scenario, a smart purge would achieve a purge of only those Belt Stations linked but not connected with full-duplex audio.



SERIES 9900 WIRELESS INTERCOM SYSTEM



To execute a smart purge, hold the link button for about 30 seconds, until the LED blinks **red**, indicating a lost connection.



LINK
BUTTON

A voice prompt can now be heard through all Headsets connected to linked-but-unconnected Belt Stations, “Connection Deleted.”



SERIES 9900 WIRELESS INTERCOM SYSTEM



The purged Belt Stations are now ready to link again, when needed, to any 9900 Series Gateway.

