


**PE133F SERIES** 4MP HD IP Eyeball Dome Camera



FLIR®

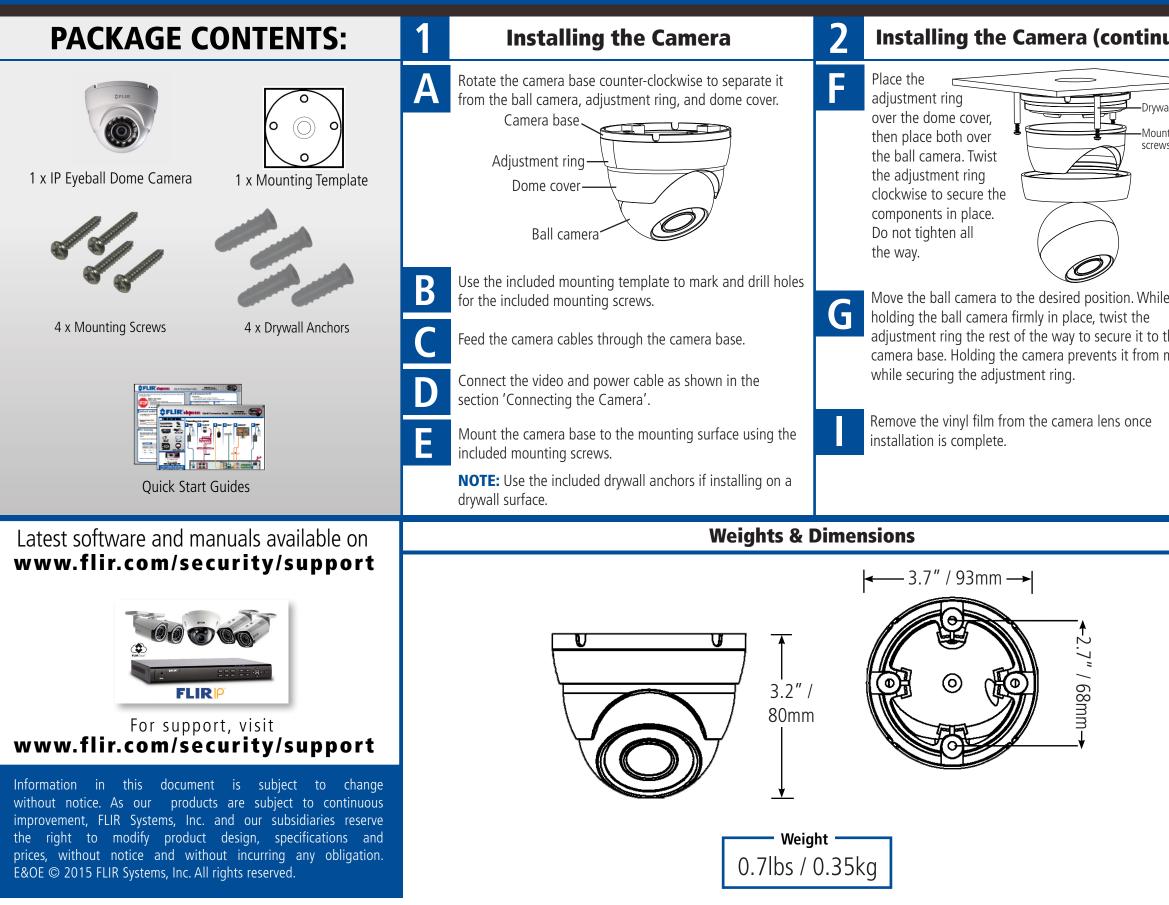

ued)	<b>3 Connecting the Camera</b>
all anchors ting s he moving	<ul> <li>I.Ethernet Port (PoE): Connect the camera to an NVR or a router or switch on your network using Cat5e or better Ethernet cable (not included). PoE Class 3 supported.</li> <li>I.Power Input: If not using PoE, connect the camera to a 12V DC power source. See power requirement specification in datasheet.</li> </ul>
	Safety Precautions
	<ul> <li>Use an appropriate low voltage power cable to prevent fire or electrical shock.</li> <li>Make sure to install the camera in an area that can support the camera weight.</li> <li>There are no user serviceable parts inside the camera. Please do not disassemble the camera.</li> <li>Do not clean the lens cover with an abrasive cleaning material. Please use a lint free micro-fiber cloth to clean the lens cover.</li> <li>Camera is rated for outdoor use (IP66), but is not intended for submersion in water.</li> </ul>
	FCC Notice
	This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense. PE133F_SERIES_QCG_EN_R1