



Alarm Output Module

The Alarm Output Module (AOM) enables you to use weather station alarms or commands from your computer to automatically start or stop external devices such as indicator lights, audio alarms, sprinkler controllers, relays, or other low-voltage AC or DC loads. The AOM works with the GroWeather[™], Energy EnviroMonitor[™], or the Heath EnviroMonitor[™]. The GroWeatherLink[®] and Energy WeatherLink[®] also allow you to control two alarm outputs manually (by turning them on or off from the software), though the software is not required for basic operation.

CAUTION: WHILE WE HAVE MADE EVERY EFFORT TO INSURE THAT THE ALARM OUTPUT MODULE WILL WORK RELIABLY, YOU SHOULDNOT USE IT IN SITUATIONS INVOLVING POTENTIAL PROPERTY LOSS OR HAZARDS TO HEALTH OR SAFETY OF PEOPLE OR LIVESTOCK. DAVIS INSTRUMENTS CANNOT BE HELD LIABLE FOR ANY FAILURE OF THE ALARM OUTPUT MODULE.

COMPONENTS

The AOM includes the following components. Please make sure you have all listed components before continuing.

- ♦ Alarm Output Module
- ◆ Alarm Output Module Cable, 2-foot (0.6 m)
- Power Y-Cable
- ✤ AC-Power Adapter
- Two Cable Ties
- Three #6 x 1" (25 mm long) Self-Threading Screws
- Four Adhesive Pads



TOOL AND MATERIALS NEEDED

You will need some of the following tools and materials.

✤ Relays

You may need to obtain your own relays in order to switch equipment at voltages higher than 28 volts or power levels above 10 Watts or to provide time delays or other logic functions. Application notes discussing this further are available from Davis Instruments.

- Medium Phillips Screwdriver
- Small Slotted Screwdriver

TYPICAL AOM INSTALLATIONS

The AOM may be connected to either the sensor interface module or to the Interface Cable Adapter Module. The two illustrations below show typical AOM installations.



AOM CONNECTED TO INTERFACE CABLE ADAPTER MODULE

OPENING AND CLOSING THE ALARM OUTPUT MODULE

Remove the cover by pushing down on the tabs at the top until you can remove the tabs from the slots.



REMOVING THE COVER

Reattach the cover as shown below. Make sure the tabs on top of the cover snap back into their slots, locking the cover in place



REATTACHING THE COVER

ALARM OUTPUT MODULE OPERATION

The section below provides technical information on the operation of the Alarm Output Module. Installation instructions appear separately below.

Circuit Operation



AOM CIRCUIT DIAGRAM

The Console sends to the Sensor Interface Module (SIM) a serial data word containing one bit for each alarm signal and user- and system-controlled output. From the SIM (or the Interface Cable Adapter Module) this is sent to the Alarm Output Module. The data are sent twice, once in true form and once inverted, and are shifted into the AOM's Input Register.

When the Verify circuit confirms that the correct number of bits has been sent and that the two data sets match correctly, it generates a LOAD pulse to transfer the data into the Output Register. All 16 bits of this register are available at terminal strip J3 for selection as outputs. Four of the 16 are jumper-selected by the user to drive the photo-coupled outputs and appear as contact closures A, B, C, and D (closure indicated by lighted red LEDs).

Setting the ENABLE switch off causes all contacts to open (the LEDs continue to indicate the state of the selected alarms).

The LOAD command pulse is sent back to the Console, where "quality of data transfer" is determined and sent to the Link software. LOAD also flashes the yellow indicator to show that a good transfer has occurred.

Two Set/Reset (RS) Flip-flops can be used to latch the four outputs. Latch 1 is SET by output A and RESET by B. Latch 2 is SET by output C and RESET by D. The Latch contents are available as output contact closures L1 and L2 (set ON = closed).

The OK circuits check that a good transfer has occurred within the past 10 seconds or so, that the power voltage is good, and that the ENABLE switch is on. This validity check result is indicated by the green LED and is available as the OK output contact (OK = closed).

Available Outputs

The AOM provides four output contacts which may be selected from the conditions listed below. Each output (except time, daily ET, and the "User" outputs) remains active as longs as the alarm condition exists. The time and daily ET outputs remain active for one minute. The "User" outputs must be activated and deactivated by the user via the WeatherLink Software for that station. Also shown in the table below are the pin assignments for each of the three consoles. The "Radio Power" output is used to control switching of power to radio when in the power-conserving mode (see "AOM Connections for Radio Power-Conserving Options" on page 12).

Alarm Output	J3 Pin	GROWEATHER CONSOLE	ENERGY EM CONSOLE	HEALTH EM Console
	16	Time	Time	Air Temp-Low
	15	Daily ET	Temp-Hum Index	Air Temp-High
	14	Dew Point	Dew Point	Inside Temp-Low
	13	Radio Power	Radio Power	Inside Temp-High
	12	Hum-Low	Air Temp-Low	Outside Hum-Low
	11	Hum-High	Air Temp-High	Outside Hum-High
	10	Air Temp-Low	Hum-Low	Inside Hum-Low
	9	Air Temp-High	Hum-High	Inside Hum-High
	8	Soil Temp-Low	Wind Chill	UV Dose
	7	Soil Temp-High	Wind Speed	Outside Temp-Hum Index
	6	User 1	User 1	Wind Speed
	5	Temp-Hum Index	Daily Rain	Temp-Hum-Sun-Wind Index
	4	Wind Chill	Not Used	Daily Rain
	3	Wind Speed	Not Used	Inside Temp-Hum Index
	2	User 2	User 2	Wind Chill
	1	Daily Rain	Barometer	UV Index

ALARM SIGNAL PIN ASSIGNMENTS (J3)

Contact Specifications

The "contact" closure is provided by a photo-coupled MOS device. Because it is a solid-state device, it is not subject, as long as the load conditions are within specification, to arcing and contact-welding as are mechanical relays. The Control Output and Status contacts are rated as follows:

Nominal Load Voltage:	28V AC or 48V DC, Maximum
Peak Voltage:	±100 V, Maximum
Load Current	±300 mA, Maximum at 77° F (25° C), derated to 150mA at 176° F (80° C)
ON Resistance	4 Ohms, Maximum

Basic AOM Information

The AOM outputs are updated by the console at intervals of approximately 3 seconds. The data are sent twice and checked for agreement before being output, providing a measure of error detection. Note the following information concerning the jumpers, LEDs, switches, and jacks found on the AOM board:

Normally-Open/Closed Jumper (J7)

Jumper J7 enables the user to select whether the output "contacts" are normally-open or normally-closed. One jumper selects the mode for all four contacts.

- Yellow LED Indicator (LOAD) The yellow LED flashes briefly for each successful transfer of alarm data from the console to the output contacts (LOAD pulse).
- Green "Status" LED Indicator and Contact Output (OK) The green LED is lighted and the contact is closed to indicate that the following are true:
 - Power is on at the AOM.
 - A correct update has been made within the last 10 seconds.
 - The "enable" switch is set to "ON."
- ◆ Alarm Outputs (A, B, C, D) and Red LED Indicators

The AOM has four alarm output contacts (A, B, C, D) to which you may connect external devices. Each output contact may be connected to a different alarm signal by connecting the jumper wire from the desired alarm output to the appropriate pin jack on jumper J3 (See "Programming the AOM" on page 9). The red LED indicators display the status of each of the four selected alarm signals. When the LED is lighted, the output is closed (if the ENABLE switch is set to ON).

◆ Latch Circuit Outputs (L1 and L2) and Red LED Indicators

The AOM includes two latch circuits; each has one output contact and a red LED indicator. The latches are set and reset by selected alarms, enabling the user to set up two simple control circuits in which each output "contact" is set on by one alarm and set off by another. (For example, start a fan when the high temperature alarm becomes active and keep it running until the low temperature alarm becomes active.) The red LED indicators display the status of each of the latches. When the LED is lighted, the output is closed.

If using latch circuits, jumper J7 must be placed in the NORMALLY-OPEN position.

- Latch Circuit L1 is set on (output CLOSED) by alarm output A and reset by alarm output B.
- Latch Circuit L2 is set on (output CLOSED) by alarm output C and reset by alarm output D.
- "ENABLE" switch (in the upper right corner of the AOM board) The ENABLE switch opens all outputs when set to "OFF". The indicators continue to display the condition of the selected alarms or remote control lines.
- Power Connector (A2)
 To provide power to the AOM, you must connect the AOM power adapter to connector A2.
- ✤ AOM Cable Connector (A1)

To enable the console to update the status of the AOM outputs, you must run the AOM Cable from connector A1 on the AOM to connector S6 on the sensor interface module (SIM) or the interface cable adapter module (ICAM).

✤ Alarm Signal Selection Panel (J3 and J5)

The row of pin jacks at J3 enables you to program specific alarms for each of the four alarm outputs. Each of the numbered pin jacks at J3 is assigned to an alarm on the station (see "Connecting alarm signals to alarm outputs" on page 9 for a list of the pin assignments for each station). The four pin jacks next to the solid white rectangles provide locations to "park" unused jumper wires.

Terminal J5 contains four jumper wires, one for each alarm output (A, B, C, D).To connect an alarm signal to one of the alarm outputs, insert the desired jumper wire from J5 in the appropriate pin jack on J3.

AOM Cover Label

The label on the cover of the AOM provides spaces in which you may write the name of the alarm condition connected to each output (A,B, C, D) and each latch circuit (L1, L2). You may also mark the appropriate check box to indicate whether the AOM is configured so the outputs are normally open or closed.

OPERATION OF THE ALARM OUTPUT MODULE

Operation of the AOM requires the following, each of which is described in a separate section below:

- Programming the AOM (page 9)
- ◆ Connecting the Outputs (page 11)
- Connecting the AOM to the System and Powering the AOM (page 12)
- Mounting the AOM (page 14)

Programming the AOM

Programming the AOM involves three main steps: connecting alarm signals to alarm outputs, selecting between normally-open and normally-closed operation, and setting the ENABLE switch.

✤ Connecting alarm signals to alarm outputs

To connect an alarm to an alarm output, insert the desired jumper wire from J5 into the appropriate pin jack at J3. Use the table on page 9 to determine pin assignments. Once you make your alarm output pin assignments, you may find it useful to write them in the left-hand column of the table on page 9. Write the letter of the alarm output next to the number of the pin to which that output is assigned.



CONNECTING ALARMS TO ALARM OUTPUTS

Selecting between normally-open and normally closed operation If you select normally-open operation, each of the four alarm outputs will close when the alarm connected to that output is active. If you select normally-closed operation, each of the four alarm outputs will open when the alarm connected to that output is active. If using either of the two latch circuit outputs, you must select normally-open operation. To select normally-open operation, place the jumper plug over the two pins closest to the side labeled "OPEN." To select normally-closed operation, place the jumper plug over the two pins closest to the side labeled "CLOSED."



SETTING JUMPER J7

✤ Setting the ENABLE switch

Make sure the ENABLE switch is set to the "ON" position. Otherwise, the outputs will remain open.



ENABLE Switch (JUMPER WIRES NOT SHOWN)

Connecting the Outputs

The output devices are photo-coupled MOS transistors. They provide floating "contacts" suitable for low-voltage AC or DC loads, as specified in "Contact Specifications" on page 6. Each output contact is connected between the two like-colored terminals (A, B, etc.) of terminal block J4 (labelled CONTACTS).

To make connection to the outputs install the two wires from the external circuit, one to each terminal of the pair, in J4. To place wires into the cage clamp, strip about 5/16" (8 mm) of the insulation off each wire in the cable. Use a small screwdriver to push down on the lever next to the cage clamp, insert the exposed wire into the opening created, and release the lever. When you release the lever, the wire(s) will be held in place by the cage clamp If the external load voltage is DC, insert the more-positive voltage wire in the + side of the terminal pair.



When finished, gather all wires together and secure them to the cable tie lug using a cable tie. as shown below. When tightening the cable tie, make sure the wires are on top of the lug.



AOM Connections for Radio Power-Conserving Options

For power conservation when using a solar-battery-powered wireless Weather-Link, the AOM is used to switch radio power ON for only brief intervals. Make the connections for this case as follows:

- 1. Insert the jumper wire for output D (at J5) into pin jack 13 (at J3).
- 2. Connect the yellow wire from the Solar Power Kit to the D+ terminal (at jumper block J4). Connect the green wire to D-.
- 3. Strip approximately 5/16" (8 mm) of insulation from the yellow and green wires, and insert at B3 (To Switch) on the regulator circuit. (Consult the Solar Power Kit manual for more details.)

Insert the yellow wire into the terminal labeled "Yel." Insert the green wire into the terminal labeled "Grn."

4. Strip approximately 5/16" (8 mm) of insulation from wires in the radio's power cable, and insert at B4 (Switched Power) on the regulator circuit. Insert the wire with the white stripe into the terminal labeled "Wht." Insert the black wire (no stripe) into the terminal labeled "Blk."

Connecting the AOM to the System and Powering the AOM

The AOM may be connected to either the sensor interface module (SIM) or the interface cable adapter module (ICAM), depending on your installation. (See "Typical AOM Installations" on page 3 for illustrations.) A 2' (0.6 m) AOM cable is provided to make this connection. You may also use a 40' (12 m) standard 6-conductor cable (available from Davis Instruments). The maximum cable length for this connection is 40 feet (12 m).

 Using the label sheets provided with your station, attach one of the S6/ALARM/A1 labels onto each end of the AOM cable.
 Make sure the S6 end of the label is closer to one end of the cable and the A1

Make sure the S6 end of the label is closer to one end of the cable and the A1 end of the label is closer to other end of the cable.

- 2. Attach the S6 end of the AOM cable to connector S6 on the SIM or the ICAM.
- 3. Attach the A1 end of the AOM cable to connector A1 on the AOM.
- 4. Attach one of the A2/ALARM POWER/P1 labels onto the end of the AC-power adapter cable or the power Y-cable, depending on which you are using (see "Powering the AOM" below).
- 5. Attach the jack at the end of your power source to connector A2 on the AOM.
- 6. Gather the AOM cable and the power cable together and secure them to the cable tie lug using a cable tie.

When tightening the cable tie, make sure the cables are on top of the lug.

Powering the AOM

You may use a separate AC-power adapter for the AOM and the console, or you may use the power Y-cable as shown below to connect power to both the console and the AOM from a single adapter.



USING THE POWER Y-CABLE

Mounting the AOM

You may mount the AOM against a wall or other vertical surface or you may simply set it down on a horizontal surface

Note: Consult the appropriate shelter manual if installing the AOM in either the Complete System Shelter or the Multi-Purpose Shelter.

To mount the AOM against a wall or other vertical surface, attach the base to the mounting surface using the #6 x 1" screws.

Use two screws (as pictured below) when attaching to a stud. Use three screws (as pictured below) in any other case. Tighten the screws until the base is securely fastened to the mounting surface. Do not overtighten.



Use two screws if attaching to a stud.

Use three screws if attaching anywhere else.

ATTACHING THE BASE TO THE MOUNTING SURFACE

 If you plan to place the AOM on a horizontal surface, attach one of the adhesive pads to each of the four raised circles on the underside of the base.



ATTACHING ADHESIVE PADS

Product Numbers: 7736

Davis Instruments' Part Number: 7395-085 Alarm Output Module Manual Rev. B Manual (7/7/99)

This product complies with the essential protection requirements of the EC EMC Directive 89/336/EC.

© Davis Instruments Corp. 1996. All rights reserved.

