
 
FURUNO°

RADAR FR/FAR-2805 Series Operator's Guide




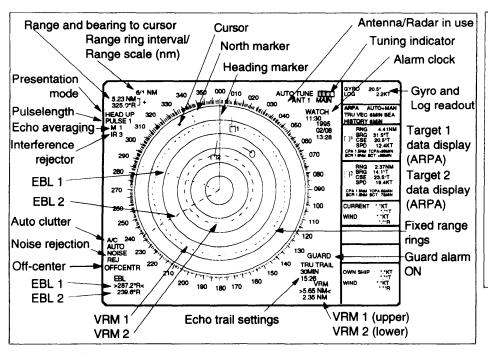


Turn on the Power Switch and wait for 3 minutes. Then press ST-BY/TX switch on the Main Control Panel.



Make sure Gyro indication at the top right of the screen is correct.

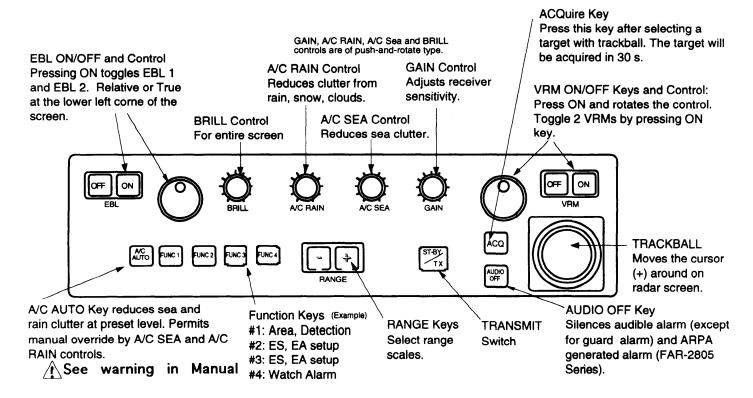



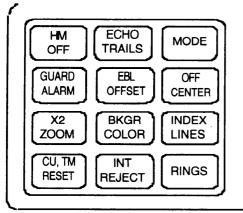

HM OFF: Temporarily erases the heading line.

ECHO TRAILS: Target afterglow. MODE: Head-up, Head-up/TB,

North-up, Course-up and True Motion.

GUARD ALARM: Guard alarm.

EBL OFFSET: Offcenters sweep

origin.

BKGR COLOR: Background color. OFF CENTER: Adjust the trackball and press [OFF CENTER] key. **INDEX LINES: Shows or erases**

parallel index lines.

X2 ZOOM: For R-type only.


CU, TM RESET: Resets heading line to 000° on Course-up. Resets OS to

50% radius in TM mode. INT REJECT: Reduces radar

interference.

RINGS: Adjusts the brightness of

range rings.

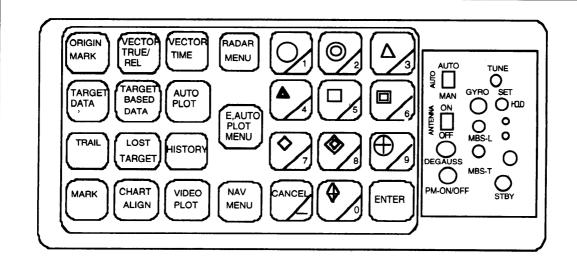

RADAR MENU: Sets RADAR parameters.

E-PLOT, AUTO PLOT MENU:

Electronic plotting and auto plotting (optional) menus.

NAV MENU: NAV parameters.

CANCEL: Hit once to cease plotting of

a specific target.

Press for 3 seconds to terminate all

tracked targets.

ORIGIN MARK: Reference point for range/bearing measurement.

VECTOR TRUE/REL: Selects true or

relative vectors.

VECTOR TIME: Sets vector length in

MARK: Waypoint settings.

CHART ALIGN: Offsets the electronic

chart (option).

VIDEO PLOT: For video plotter (option)

OTHER KEYS: Used for ARPA

