


PRIMA FACIE® QUICK UPLOAD GUIDE

With PrimaView™

1.1.9 (SV-PRIMAFACIE / PRIMAFACIE32G)

1.4.7 (SV-PRIMAFACIE32E)

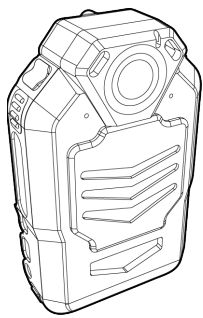

Prima Facie







USB Driver



Local Agent


Desktop or Server with PrimaView Server Installer

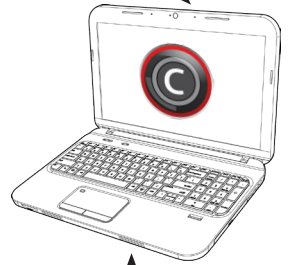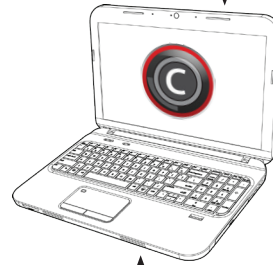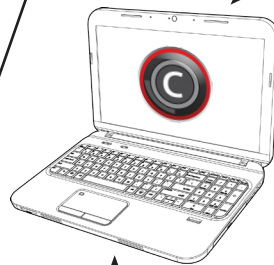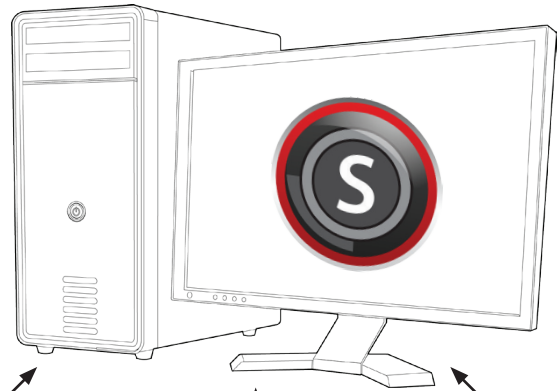

Work Stations with PrimaView Client Installer

Without PrimaView

Firmware versions before 1.1.9 use Transfer Agent

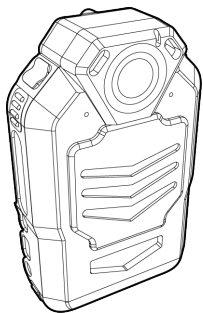


Prima Facie



USB Driver




Local Agent

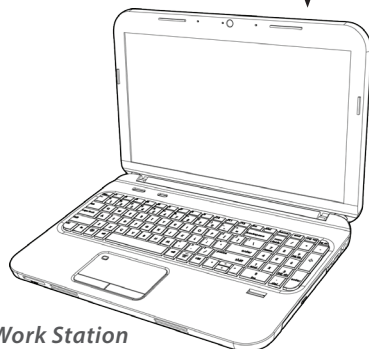


Work Station

Using the 8-Bay Dock (with or without PrimaView)

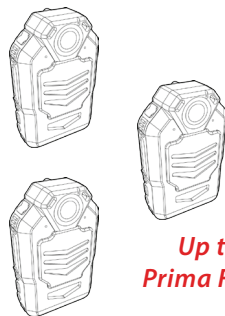

Up to 8
Prima Facie's

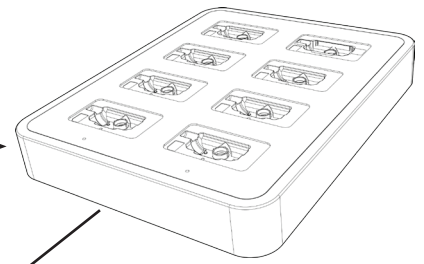

8-Bay Dock




Local Agent




USB Driver



Transfer Agent
Plus

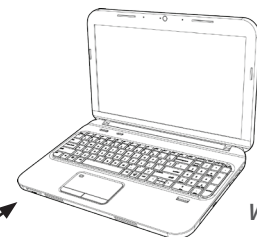

Work Station

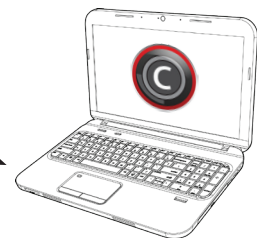

Work Station
with
PrimaView
Client Installer