

# Dish Network



(800) 982-9920  
www.vuqube.com  
info@vuqube.com

Note: When using Dish Network with the VuQube, you will need to reconfigure the satellite receiver to work with a portable antenna (Step 2). You will also need to locate 2 different satellites and store their locations in the VuQube memory (Steps 3 and 4).

Configuring the receiver is a one-time procedure if you are using it as a dedicated VuQube receiver.


If you use the receiver with both the VuQube and your home dish, you will need to reconfigure it each time you move it between the two dishes.

## 1 NAVIGATE TO THE POINT DISH SCREEN


1.1 Turn on receiver.




1.2 Press MENU.

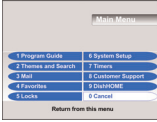


1.3 Press 6 for System Setup.

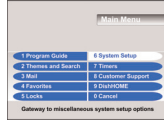


1.4 Press 1 for Installation

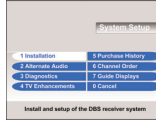

1.5 Press 1 for Point Dish/Signal

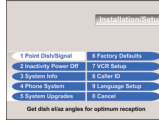


1.6 You should be at the Point Dish Screen

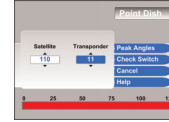


## 2 CONFIGURE THE RECEIVER

2.1 Highlight Check Switch and press SELECT.

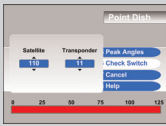


2.2 Make sure Super Dish and Alternate boxes are NOT selected.

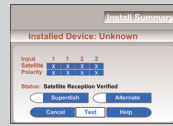

2.3 Highlight Test and press SELECT. This screen appears during test.



2.4 When test is complete, the Install Summary Screen should display No Switch Detected or Installed Device Unknown. (If you get a screen titled "Warning 836" with the option to save the settings, select SAVE.)

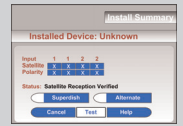


2.5 Highlight Cancel and press SELECT to return to the Point Dish Screen.



## 3 LOCK ONTO 110 SATELLITE

3.1 On the Point Dish Screen, choose the 110 satellite on your Dish Network receiver.

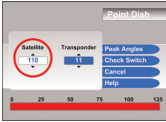

3.2 Determine your elevation from the Dish Network 110 Map at the bottom of this page.

3.3 Press ON to display the antenna's current elevation.




3.4 Use the UP and DOWN arrows to match the antenna's elevation (displayed on the VuQube remote) to the elevation you determined from the map.



**IMPORTANT!** You must watch the TV for signal strength while rotating the antenna in step 3.5.

3.5 Use the LEFT and RIGHT arrows to rotate the antenna and watch for signal strength to appear on the signal meter screen. When signal strength appears, use ALL FOUR arrows to maximize the satellite signal. (If you reach the rotational limit in one direction the remote will display Reverse Direction.)

MAKE SURE YOU ARE ON THE 110 SATELLITE.

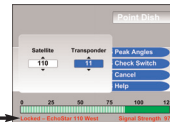


3.6 Press the Satellite 1 button until P1 appears. This position is now stored in memory.



## 4 LOCK ONTO 119 SATELLITE

4.1 On the Point Dish Screen, choose the 119 satellite on your Dish Network receiver.

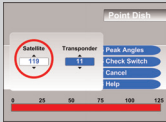

4.2 Determine your elevation from the Dish Network 119 Map at the bottom of this page.


4.3 Use the UP and DOWN arrows to match the antenna's elevation (displayed on the VuQube remote) to the elevation you determined from the map.



**IMPORTANT!** You must watch the TV for signal strength while rotating the antenna in step 4.4.

4.4 Use the RIGHT arrow to rotate the antenna and watch for signal strength to appear on the signal meter screen. When signal strength appears, use ALL FOUR arrows to maximize the satellite signal. (If you reach the rotational limit, the remote will display Reverse Direction.)

MAKE SURE YOU ARE ON THE 119 SATELLITE.

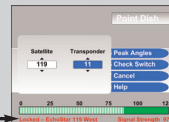

4.5 Press the Satellite 2 button until P2 appears. This position is now stored in memory.



## 5 DISH 500

5.1 Dish 500 programming is broadcast from both the 110 and 119 satellites. Once you have stored both the 110 and 119 satellite locations into the VuQube memory, you can easily switch between the two satellites depending on which satellite has your desired programming.

5.2 If you are watching programming on the 119, and want to watch programming on the 110, press P1.

If you are watching programming on the 110, and want to watch programming on the 119, press P2.



5.3 The VuQube will switch to the newly selected satellite and the program download screen will appear.

If this screen does not appear, reset the receiver: press and hold the POWER button on your receiver for 10 seconds.

(Although the VuQube will switch satellites properly, you may have to reset the receiver each time you switch satellites.)



5.4 When the program guide has downloaded, a picture will appear. You can now select your desired channel and enjoy!

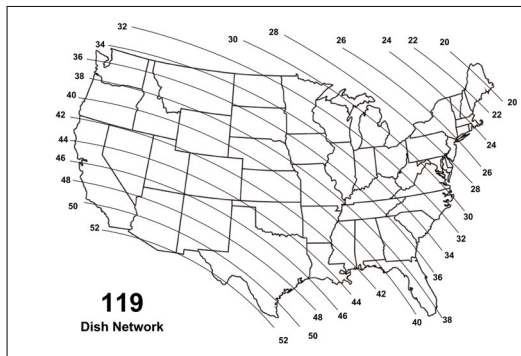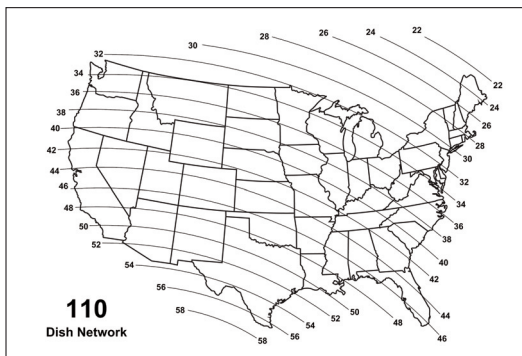

DIRECTV is a registered trademark of DIRECTV, Inc.  
Dish Network is an official trademark of EchoStar Communications Corporation.  
Bell ExpressVu is an official trademark of Bell Canada.  
DVB is a trademark of the DVB Digital Video Broadcast Project (1991-1996)