

# INSTALLATION INSTRUCTIONS

**Product**

7160-0198  
CLASS 8 VEHICLE BASE

**Revision**

Rev. A

**Form**

INST-436


The class 8 vehicle base will allow a user to mount a DS-52 base as a no-drill solution. The base will mount under the passenger side seat. Four positions of the DS-52 and four positions on the base provide the user with 16 different mounting positions.

## Mounting the Base

1. Remove and set aside the fasteners securing the passenger seat to the cab of the truck.
2. Remove and set aside the fasteners securing the seat belt strap from the side of the seat.
3. Slide only the base plate under the seat guiding the air line, if present, through the slot in the base plate.
4. Align the appropriate holes in the plate and seat with the holes in the cab of the truck. See sheet 2 for appropriate holes.
5. Secure the seatbelt strap to the seat.
6. Secure the seat to the cab of the truck.

## Mounting the DS-52

1. Secure the small foot bracket to the DS-52 using the supplied (2) 3/8-16 x 1.25-in carriage bolts, (2) 3/8-in flat washers, and (2) 3/8-in nylon lock nuts.
2. Position the DS-52 assembly over the preferred holes in the base plate.
3. Secure the DS-52 assembly to the base plate using the supplied (2) 3/8-in flat washers, (2) 3/8-in lock washers, and (2) 3/8-16 x 1.00 hex head cap screws.

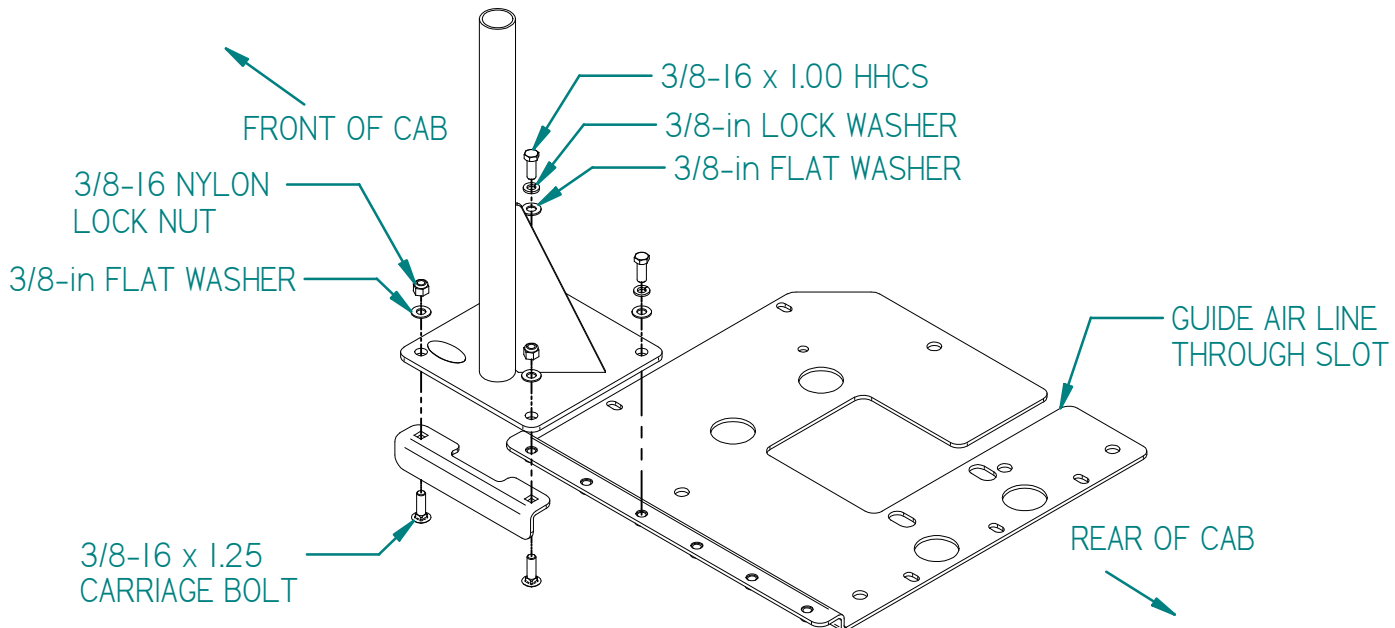

### Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868



Very Well Connected™

# INSTALLATION INSTRUCTIONS

## Product

7160-0198

CLASS 8 VEHICLE BASE


## Revision

Rev. A

## Form

INST-436

Class 8 Vehicle OEM	Hole Pattern
Freightliner	1
International	2
Kenworth	1
Mack	1
Perterbuilt	1
Volvo	3
Western Star	1

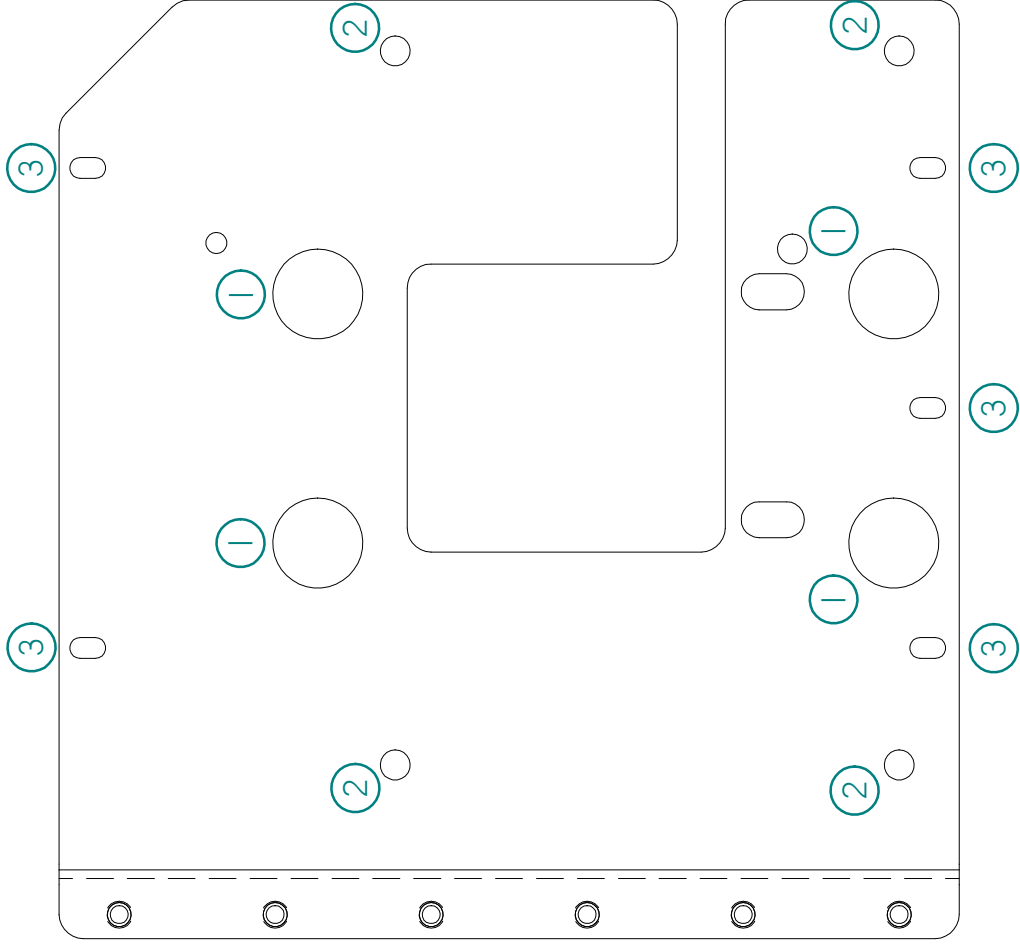

### Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868