



Very Well Connected™

INSTALLATION INSTRUCTIONS

Product

**Chevrolet Caprice Console 2014+
Chevrolet Caprice Console (short) 2014+***

**7160-0521-00, 7160-0521-01
7160-0579-00*, 7160-0579-01***

Revision

Rev. A

Form

INST-618

Printing Spec: PS-001

This instruction sheet is for the following products:

Item No. 7160-0521-00 2014 Chevy Caprice Console only


Item No. 7160-0521-01 2014 Chevy Caprice Console with Cupholder and Armrest

Item No. 7160-0579-00* 2014 Chevy Caprice Console (short) only

Item No. 7160-0579-01* 2014 Chevy Caprice Console (short) with Cupholder and Armrest

***NOTE:** Items with asterisk(*) are special order items. Please contact your sales representative/Gamber-Johnson for more details.

Figure 1(a): 7160-0521-01

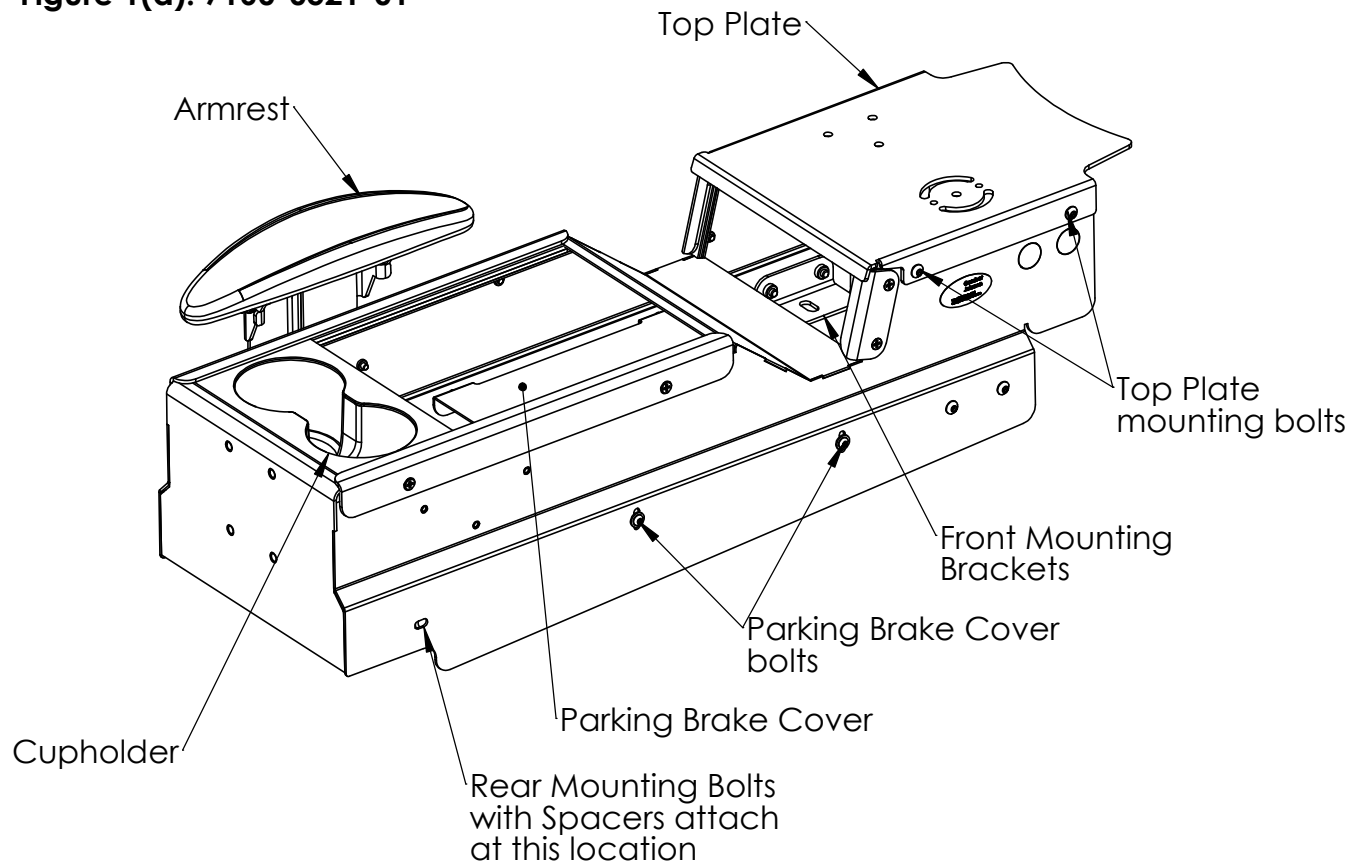


Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© Copyright 2012 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868

Figure 1(b): 7160-0579-01*

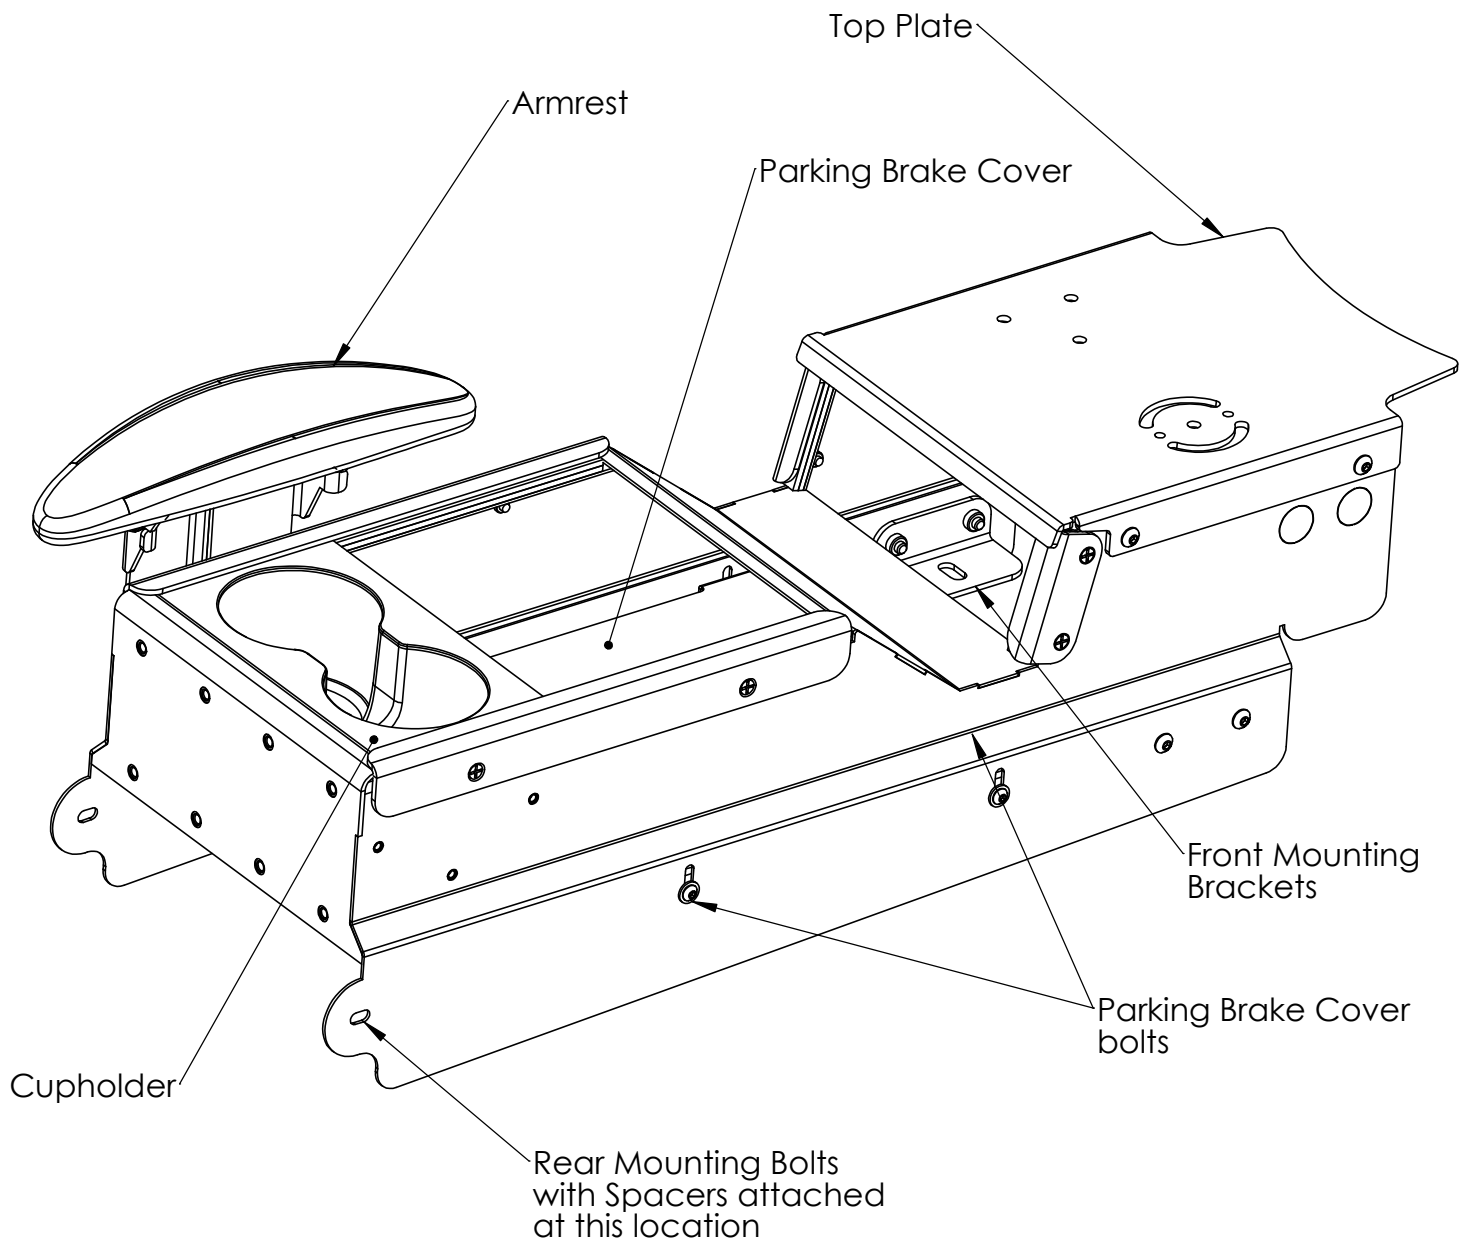

Note: The 7160-0579-00 and 7160-0579-01 are shorter versions (3" shorter) of the 7160-0521-00 and 7160-0521-01. They use the same mounting points as the longer box. Please follow below instructions for installing these consoles.

Vehicle disassembly:

1. Remove the OEM Top Plate by removing the 4 bolts using a 5/32" Allen wrench.



Figure 2

2. Remove the rectangular black plate and spacers that cover the parking brake mechanism.



Figure 3

3. Remove the 2 rear mounting point bolts with a 10mm socket from the vehicle center plastic cover.



Figure 4

Console Installation:

4. Loosen the 4 screws that hold the parking brake cover plate inside the console box with an 1/8" Allen wrench. Remove the top plate from the console box using a 5/32" Allen wrench. See Figure 1.

5. Place the console into position between the seats. See Figure 5.

(Gamber Johnson does not have a picture with the top plate removed for installaion)

6. Attach the front legs to the vehicle mount with the 1/4-20 x 3/4" bolts and flat washers included in the hardware bag. See Figure 6.

7. Attach the rear of the console box to the location that you removed the 2 bolts from earlier. Use the M6 x 45mm bolts, Spacers, and flat washers found in the hardware bag. See Figure 7.

8. Attach the Top Plate to the console box with the 1/4-20 screws removed earlier. See Figures 1 & 8.

9. Tighten the #10-32 screws that hold the parking brake cover in place. See Figures 1 & 8.



Figure 5



Figure 6



Figure 7



Figure 8