

Dual SS264W Stainless Steel Transducer connection to FCV295 or FCV1150

FCV295 & FCV1150
TAP SETTINGS

50 kHz = B
200 kHz = A




J4 HF

J5 LF

For both transducers, remove the 10 pin connector and then attach the blue, black and inner shield wires to the appropriate 3 pin WAGO connector as show below.



Black
Inner Shield
Blue

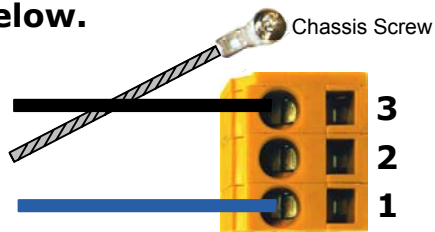

Chassis Screw

10 m
cable

10 m
cable

200 kHz

50 kHz



SS264W-200/20
or
SS264W-200/12

This connector
is not used in
this application.
Keep end
protected from
water & dirt.



SS264W-50/12
or
SS264W-50/20