

Very Well Connected™

INSTALLATION INSTRUCTIONS

Product

Revision

Form **INST-372**

PANASONIC CF19 DOCKING STATION & DOCKING STATION ACCESSORIES 7160-0207, 7160-0207-02, 7160-0207-03

Rev. A

Gamber-Johnson Model Numbers covered in this instruction sheet are:

7160-0207 : Docking Station (NO/RF) 7160-0207-02 : Docking Station (DUAL/RF) 7160-0207-03 : CF19 Cradle 7160-0215 : LED Assembly 7160-0049 : CF19 Screen Support 7160-0073 : CF19 Wedge

Panasonic recommends using a Lind Auto Adapter to power the docking station. It can be ordered from Gamber-Johnson (Item No. 11798).

For instructions on the features, setup and operation of the CF19 computer, refer to the manuals supplied by Panasonic with the computer.

No adjustments of the electrical components within the electrical enclosure are required. Opening the enclosure (except to install the Power Cable) will break a seal and void the product warranty.


Conducting a "bench test", (the assembly, interconnection and start-up of all components: Computer, Docking Station and any customer supplied equipment: printers, modems, scanners, etc.) is strongly advised to verify all electronic and software issues are resolved.

Suggested flow of work is to:

- 1. Install and verify the computer is operational.
- 2. Add customer supplied equipment (printers, modems, scanner etc.)

If installing inside a vehicle, positioning of all mounts and equipment in the vehicle before the actual install is also recommended to verify that mounting locations are practical.

Product Mounting Disclaimer Gamber-Johnson is not liable under any theory of contract or tort hw for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

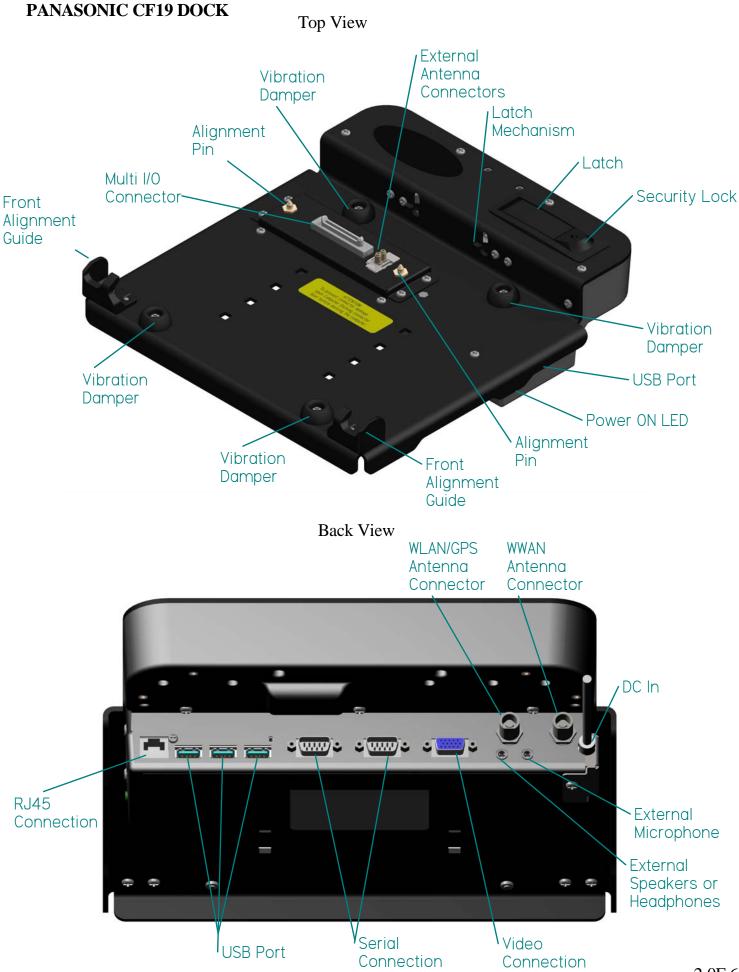

Installation of the Power Jack:

Remove the #6-32unc x .1/4" long scew that attaches the Power Cable Cover to the outside of the dock (fig 1). Attach the Power Cable Pull Strap (located in hardware bag) to the power jack (fig 2). Plug the power jack into the input jack located on the port replicator board and tuck the pull strap into the electrical box (fig 3). Replace the Power Cable Cover to hold the power jack in place (fig 4).



fig I

fiq 2

fig 3




fiq 4

Installing CF19 Computer into the Dock

Step 1: Make sure the sliding door, located on the bottom surface of the computer, has been opened to expose the computers' docking connector (fig 5). Make sure no loose or foreign objects are on the surface of the dock (fig 6).

fig 5

fiq 6



Step 3: Place the front edge of the computer into the dock. Two notches on the front edge of the computer case will fit onto the two hooks along the front edge of the dock (fig 8). Lower the back edge of the computer down onto the docking connector. Press down on the computer making sure the computer case is flat in the dock. Depress the latch to secure the computer. Lock the latch if necessary (fig 9).



fig 7





fig 8



fig 9

ReLocating Computer Carrying Strap

The CF19 computer is supplied, from Panasonic, with a carrying strap attached to the back edge of the computer case.

The computer can be installed into the dock with the strap attached to the back or front edge, but the strap will need to be unhooked when installed on the front of the comptuer, allowing each end of the strap to hang down over the sides of the dock. If the strap is not unhooked it will interfere with the docks' latching mechanism.

Important:


If the strap is relocated to the front or side edges, position the strap ends as shown. The rings on the ends of the straps must be positioned away from the front retainers. If the rings are incorrectly attached and touch the front retainers, the computer will not dock properly.



Strap attached to back of computer will lay over the top of the dock.

Work Table Wedge


The CF19 work table wedge (**7160-0073**) has rubber pads to provide a mobile slip free mounting surface. Four .281 square holes on the bottom surface allow mounting the work table wedge permanently to a surface if required. See drawing for mounting hole location.

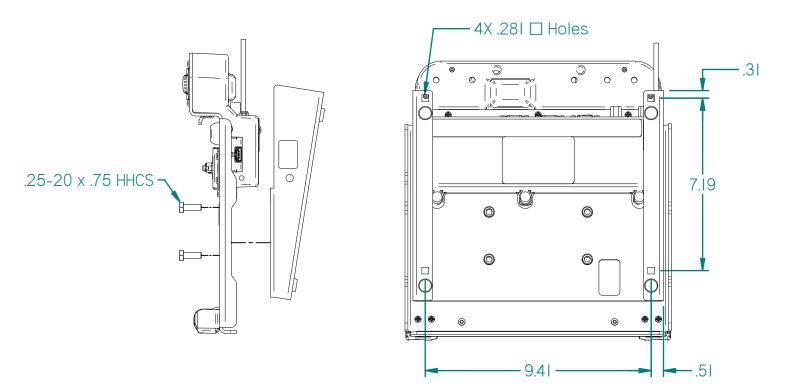

(Mounting Hole Location)

Vehicle Mounted Docks


CF19 vehicle docks (**7160-0207 & 7160-0207-02**) and cradle (**7160-0207-03**) are designed to be used with Gamber-Johnsons' motion attachments, poles and vehicle bases. See below for mounting dock to DS, MCS or 0-90 Clevis with (4) .25-20 x .75 long flat head screws.

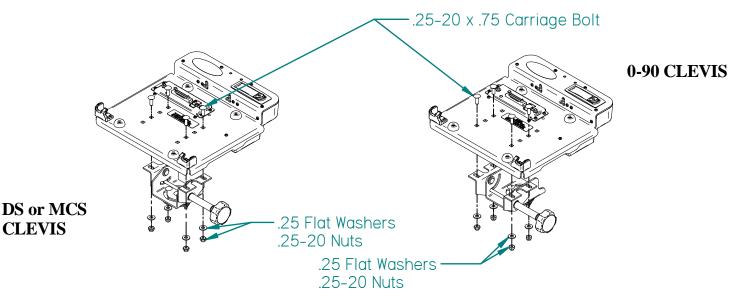

Cable Ties

For docking station 7160-0207 & 7160-0207-02

Cables are attached to ports on the back of the dock. Cable ties and cable tie holders are provided to secure the cables to the dock. Press the cable tie holder into the mounting holes on the dock. Insert the cable tie through the tie holder and tighten the cable tie around the cables as needed.

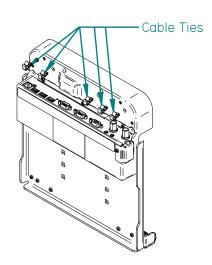

Screen Support

#8-32 X .38 Screws and Flat Washers

CF19 Accessories

7160-0049: CF19 Screen Support

Use two #8-32 x .38 long socket head screws and two #8 flat washers to attach the screen support to the back side of the CF19 Dock as shown.


7160-0215: LED Assembly

Position the LED assembly over two holes in the back cover, and attach using the #6-32unc x .38 screws that were provided with the LED assembly.

The LED is powered using the red and black wires on the back of the light base. The LED Assembly is designed to operate on 12volts DC.

In a negative ground vehicle:

Connect the RED wire to the positive pole of the vehicle battery or power distribution box. It is recommended that a user-supplied fuse holder and 1 amp fuse be installed on red the wire. Connect the Black wire to a suitable chassis GROUND or the NEGATIVE pole of the battery.

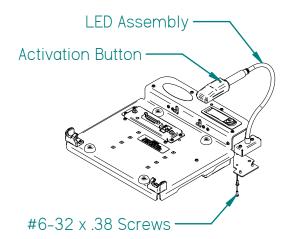

Turn on LED by pressing the Activation Button on the head of the LED Assembly.

The LED has three light options: White, Red and White/Red. Press the Activation Button to toggle through the options.

Hold the Activation Button down for approximately one second to turn the LED off. 6 0F 6