

Installation Manual

NAVIGATIONAL ECHO SOUNDER

FE-700

SAFETY INSTRUCTIONS	i
EQUIPMENT LISTS	ii
SYSTEM CONFIGURATION	iv
1. MOUNTING	1
1.1 Category of Equipment	1
1.2 Display Unit.....	1
1.3 Transducer	4
1.4 Distribution Box.....	6
1.5 Matching Box	7
1.6 Digital Depth Indicator (option) FE-720	7
1.7 Transducer Switch Box (option) EX-8.....	8
2. WIRING	9
3. CHANGING POWER SPECIFICATIONS.....	17
4. ADJUSTMENTS.....	19
4.1 Transducer Setting.....	19
4.2 Setting the Time	20
PACKING LISTS.....	A-1
OUTLINE DRAWINGS.....	D-1
INTERCONNECTION DIAGRAMS.....	S-1



© **FURUNO ELECTRIC CO., LTD.**

9-52 Ashihara-cho,
Nishinomiya, Japan

Telephone : 0798-65-2111
fax : 0798-65-4200

All rights reserved.

Printed in Japan

PUB.No. IME-23660-P2

(KAMI) FE-700

Your Local Agent/Dealer

FIRST EDITION : JAN . 2000

P2 : JUL . 05, 2004



00080891000



IME23660P20



SAFETY INSTRUCTIONS



WARNING



ELECTRICAL SHOCK HAZARD
Do not open the equipment unless totally familiar with electrical circuits and service manual.

Only qualified personnel should work inside the equipment.

Turn off the power at the switchboard before beginning the installation.

Fire or electrical shock can result if the power is left on.

Do not install the equipment where it may get wet from rain or water splash.

Water in the equipment can result in fire, electrical shock or equipment damage.

Be sure no water leaks in at the transducer mounting location.

Water leakage can sink the vessel. Also confirm that the transducer will not loosen by ship's vibration. The installer of the equipment is solely responsible for the proper installation of the equipment. FURUNO will assume no responsibility for any damage associated with improper installation.

Be sure that the power supply is compatible with the voltage rating of the equipment.

Connection of an incorrect power supply can cause fire or equipment damage. The voltage rating of the equipment appears on the label above the power connector.



CAUTION

Observe the following compass safe distances to prevent deviation of a magnetic compass:

	Standard compass	Steering compass
Display unit	0.50 m	0.40 m
Distribution Box	1.90 m	1.15 m
Matching Box	0.50 m	0.40 m
Transducer Switch Box (option)	1.00 m	0.60 m
Junction Box (option)	0.30 m	0.30 m
Digital depth indicator (option)	0.50 m	0.40 m

When handling the transducer cable, keep in mind following points.

- Keep the cable away from oil and fuel.
- Keep the cable away from the place where it may be damaged during the installation.
- Do not paint the cable.

The sheath of the transducer cable is made of chlorophrene rubber (or vinyl chloride). Therefore, do not paint the sheath with organic liquid (such as toluene) since it may harm the sheath.

EQUIPMENT LISTS

Standard Supply


Name	Type	Code no.	Qty	Remarks
Display Unit	FE-701	-	1	w/Installation Materials CP02-06400 (000-015-872) and Accessories FP02-04800 (000-015-469)
Distribution Box	FE-702	-	1	
Matching Box	MB-502	000-013-602	1	For 50B-6B
	MB-504	000-013-604		For 200B-8B
Transducer	50B-6B	-	1	w/15 m or 30 m cable
	200B-8B	-		w/15 m, 30 m or 50 m cable
Transducer Tank	TTF-5600	000-015-586	1	For 50B-6B
	TTF-2000	000-015-587		For 200B-8B
Spare Parts	SP02-04101	001-228-890	1 set	For distribution box
Installation Materials	CP02-06301	001-228-950	1 set	For distribution box

Optional Supply

Name	Type	Code no.	Qty	Remarks
Transducer Switch Box	EX-8	000-012-179	1	Flush mount, color specified
		000-012-176		Bulkhead mount, color specified
		000-012-183		7.5BG7/2, Flush mount
		000-012-182		7.5BG7/2, Bulkhead mount
		000-012-180		N.G, Flush mount
		000-012-181		N.G, Bulkhead mount
Cable Assy.	FM-C6FPS003-020	000-143-821	1	2 m cable w/ a 6P connector For EX-8
JUNCTION Box	JIS F8821-1MO 0-20A3P	000-804-877	1	
Transducer Tank	TTF-5001	000-015-877	1	For 50B-6B
	TTF-2001	000-015-878		For 200B-8B
	TTF-5002	000-015-885		For 50B-6B (w/Flange)
	TTF-2002	000-015-887		For 200B-8B (w/Flange)
Bulkhead Kit	OP02-78-1	001-229-270	1	2.5GY5/1.5
	OP02-78-2	001-229-280		7.5BG7/2
Flush Mount Kit (F)	OP02-79-1	001-229-290	1	N3.0
	OP02-79-2	001-229-300		2.5GY5/1.5
	OP02-79-3	001-229-310		7.5BG7/2
Flush Mount Kit (S)	OP02-80	001-229-320	1	
Data Recording Software for PC	02-522-990	001-229-090	1	For Windows 95/98/NT4.0
Digital Depth Indicator	FE-720	000-029-025	1 set	w/Installation Materials CP02-06700 (000-029-068) Spare Parts SP65-00601 (002-889-730) Accessories FP65-00400 (000-029-067)

Dimmer	MF-22L-1-100V	002-316-040	1	100 VAC-120 VAC, Flush mount type
	MF-22L-1-200V	002-316-100		200 VAC-240 VAC, Flush mount type
	MF-22L-2-100V	002-316-050		100 VAC-120 VAC, Bulk head type
	MF-22L-2-200V	002-316-130		200 VAC-240 VAC, Bulk head type
Terminal Box	DS-802	000-029-064	1 set	With Installation Materials CP65-00903 (000-029-064)
EGC Printer	PP-505-FE	000-055-892	1 set	
Gate Valve	GV-50B-6B	000-015-265	1	
	GV-200B-8B	000-015-273		

SYSTEM CONFIGURATION

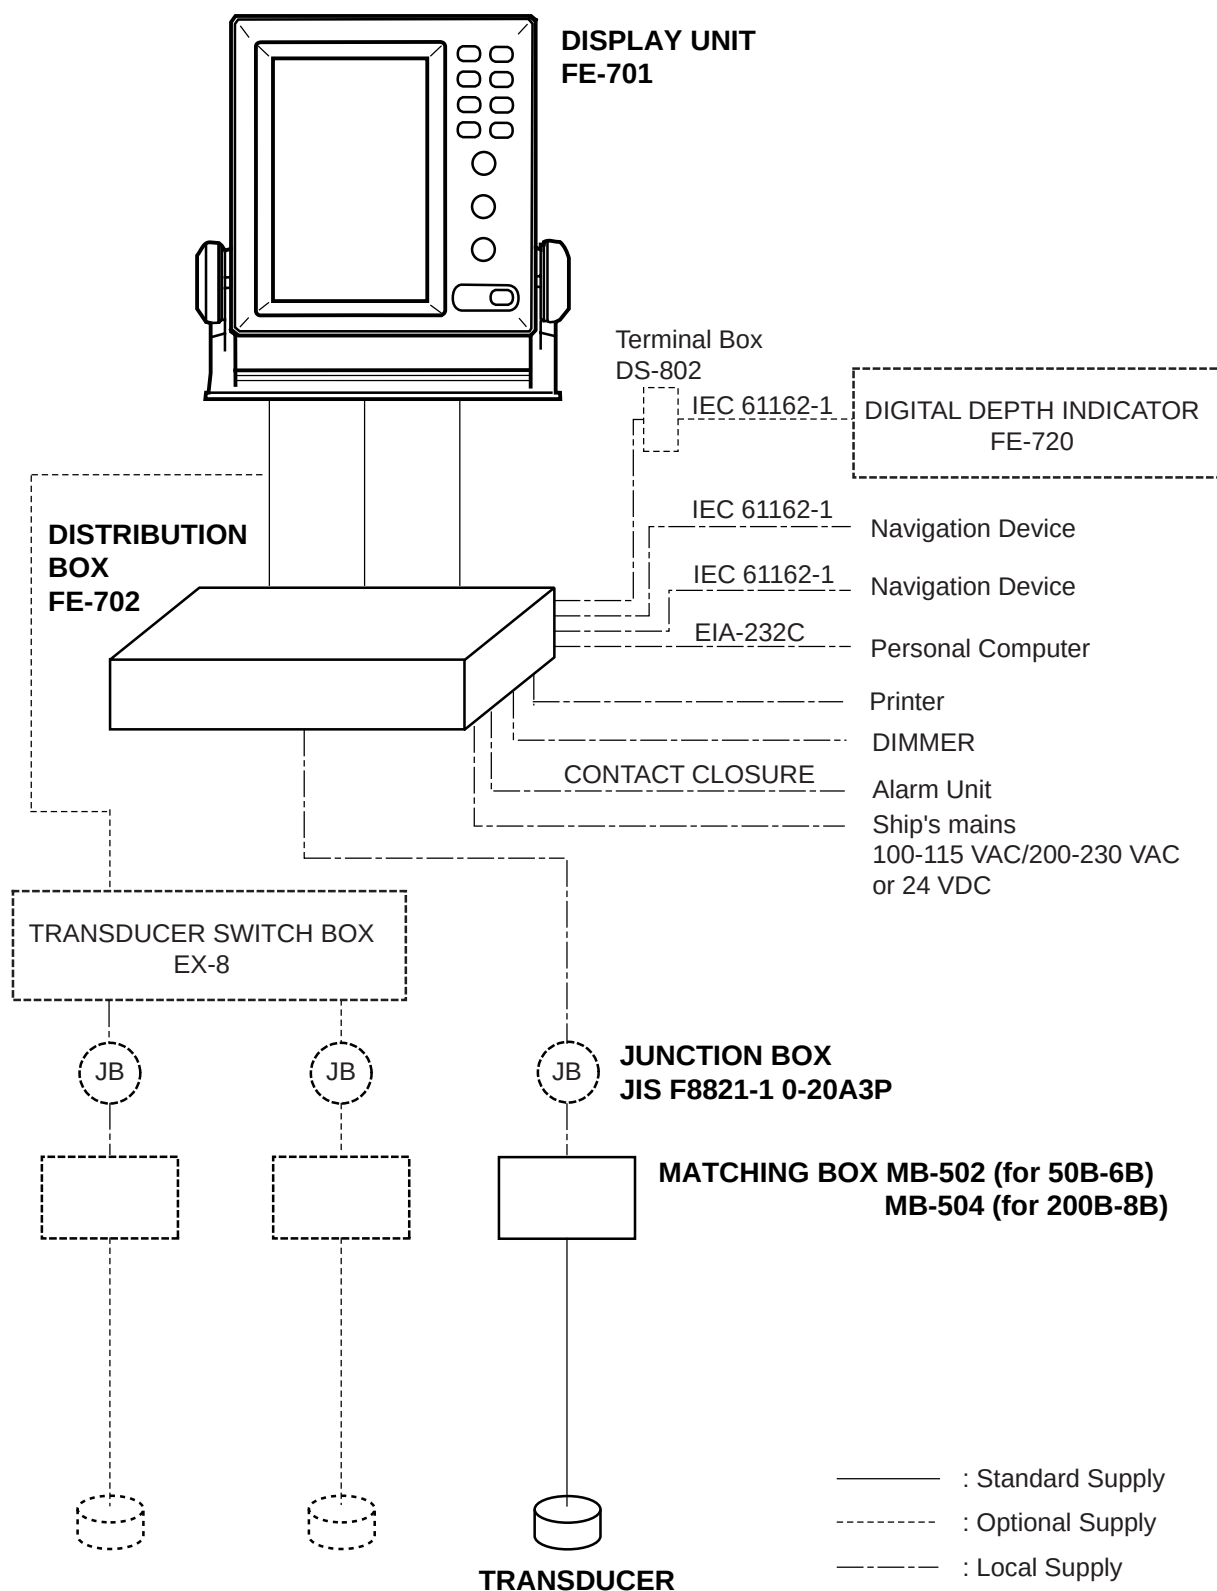

1. MOUNTING

1.1 Category of Equipment

Equipment for protected area

- Display Unit
- Distribution Box
- Matching Box
- Transducer Switch Box (option)
- Digital Depth Indicator (option)

Equipment to be submerged

- Transducer

1.2 Display Unit

1.2.1 Mounting consideration


The display unit can be installed on a desktop, on the overhead, on the bulkhead or flush mounted in a console or panel.

When selecting a mounting location for the display unit keep the following in mind.

- Keep the display unit out of direct sunlight.
- The temperature and humidity should be moderate and stable.
- Locate the unit away from exhaust pipes and vents.
- The mounting location should be well ventilated.
- Mount the unit where shock and vibration are minimal.
- Keep the unit away from electromagnetic field-generating equipment such as motors and generators.
- For maintenance and checking purposes, leave sufficient space at the sides and rear of the unit and leave slack in cables.
- A magnetic compass will be affected if placed too close to the display unit. Observe the following compass safe distances to prevent disturbance to the magnetic compass.


Standard compass: 0.50 meters

Steering compass: 0.40 meters

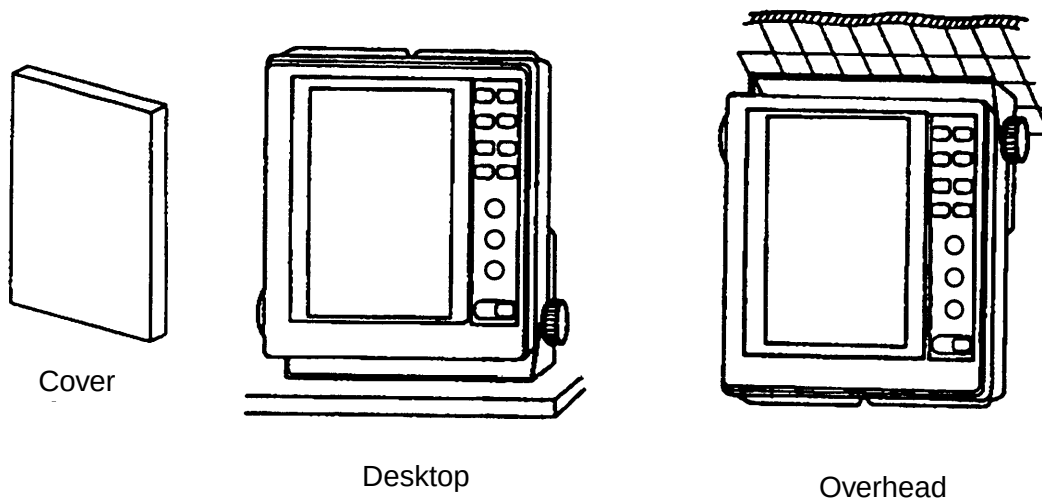


1.2.2 Removing the cover

While pressing the center of the cover with your thumbs as illustrated, pull the cover towards you to remove it.

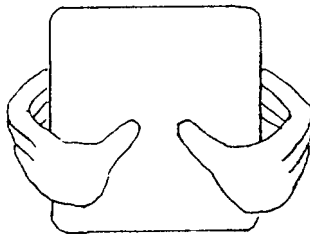

1.2.3 Desktop mounting

1. Fix the hanger with four tapping screws (5x20).
2. Screw knob bolts in display unit, set it to hanger, and tighten knob bolts.
3. Attach the dummy covers to the unused holes.

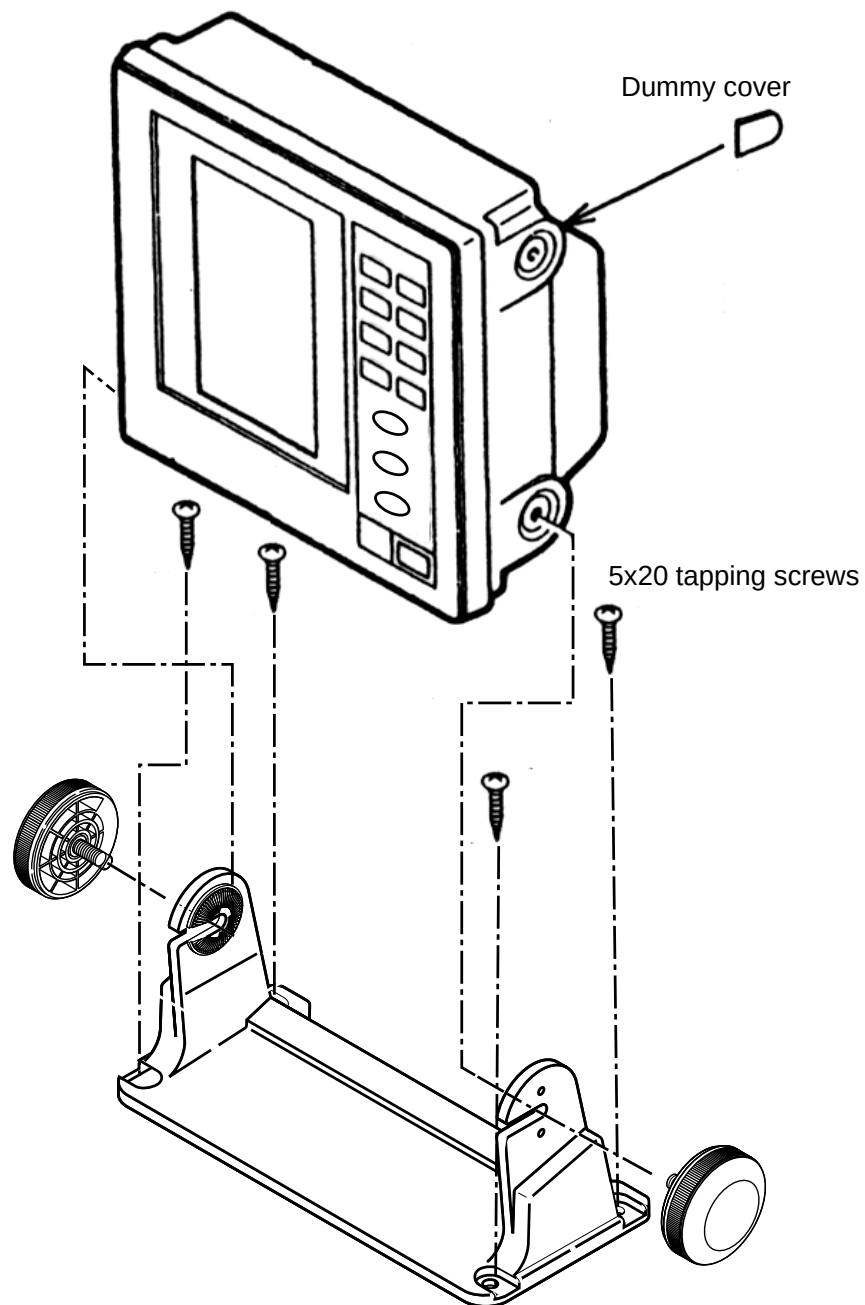

1.2.4 Flush mounting

There are two types of flush mount kits, F type and S type. For details, see the outline diagrams at the back of this manual.

F type

Flush Mount Kit (F): OP02-79-1 (001-229-290)
OP02-79-2 (001-229-300)
OP02-79-3 (001-229-310)

No.	Name	Type	Code no.	Qty	Remarks
1	Cosmetic panel	02-129-1041-0	100-279-270	1	OP02-79-1:N3.0
			100-279-280		OP02-79-2:2.5GY5/1.5
			100-279-290		OP02-79-3:7.5GY7/2
2	Hex bolt	M6X12	000-862-127	4	
3	Spring washer	M6	000-864-260	4	


1. Prepare a cutout in the mounting location whose dimensions are 210 (W) X 194 (H) mm.
2. Attach the cosmetic panel (02-129-1041-0) to the display unit with four hex bolts (M6X12) and four spring washers (M6).
3. Fix the display unit to the mounting location with four tapping screws (5X20).

S type

Flush Mount Kit (S): OP02-80 (001-229-320)

No.	Name	Type	Code no.	Qty	Remarks
1	Fixing plate	02-129-1045-0	100-279-300	2	
2	Wing bolt	M4X30	000-804-799	6	
3	Hex bolt	M6X12	000-862-127	4	
4	Spring washer	M6	000-864-260	4	
5	Wing nut	M4	000-863-306	6	

1. Prepare a cutout in the mounting location whose dimensions are 194 X 194 mm.
2. Insert the display unit to the cutout.
3. Attach two fixing plates (02-129-1045-0) to the display unit with four hex bolts (M6X12) and spring four washers (M6).
4. Screw six wing bolts (M4X30) to wing nuts (M4).
5. Fasten the display unit with six wing bolts and nuts.

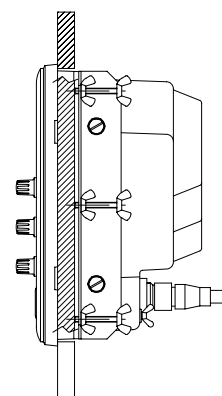

1.3 Transducer

The installation of the transducer and the tank should be accomplished by a dockyard referring to the installation drawings at the back of this manual. An example of transducer installation method is also shown in paragraph 1.3.2.

Note: Discussions should take place and agreement reached with the dockyard for sufficient reinforcement and watertightness of the hull to comply with the regulations concerned.

1.3.1 Mounting Location

To decide the location of the transducer, the following points should be taken into account.


- The most important matter is where the transducer is installed. The position should be free from aeration possibly occurring beneath the hull and also not affected by engine and propeller noise.
- It is known that air bubble streams start approximately from a quarter length from the bow, and spreads over the hull bottom approximately to three quarters. Air bubble streams vary in form and intensity according to ship's speed, draught, trim, shape of bow and hull, as well as sea state.
- In a laden ship, a position somewhere near a quarter of the ship's length from the stern often gives satisfactory results. As for vessels such as oil tankers whose fore draught is especially shallow, an after position about three quarters of ship's length from the stern is often suitable.
- It is recommended to install the transducer on the keel line or between 600 mm and 900 mm from the keel to minimize the effect of aerated water.
- Sitting near obstructions such as the forward propeller, bow thruster, water intake pipes and speed log sensor should be avoided.
- Select a place giving minimum mechanical vibration.
- Do not lay the transducer cable near or in parallel with other electric cables.

1.3.2 Example of Transducer Installation (TTF-5600)

Note: Never fail to remove the transducer and rubber gasket prior to welding the transducer tank to the hull.

1. Install the transducer tank on the hull. The tank bottom should be flush with the hull bottom. Feed the transducer cable through the cable gland.
2. Apply sealing tape to the threads of the gland nut for watertightness.
3. Pass the cable thru the gasket, washer and gland nut.
4. Fix the transducer to the tank with the transducer fixing flange.
5. Coat the gland nut with silicone grease.
6. Tighten the gland nut.

7. It is recommended to enclose the transducer cable in a conduit pipe for waterproofness and electrical shielding as well as for protecting the cable from mechanical damage. The conduit pipe should be fixed to the flange on the transducer tank. The pipe should be of such a length to clear the water level when the ship is fully loaded. The pipe end should be finished with filling compound. It is recommended to fill the pipe with sand between the transducer and the junction box (or matching box). This will protect the transducer from vibration and damage.

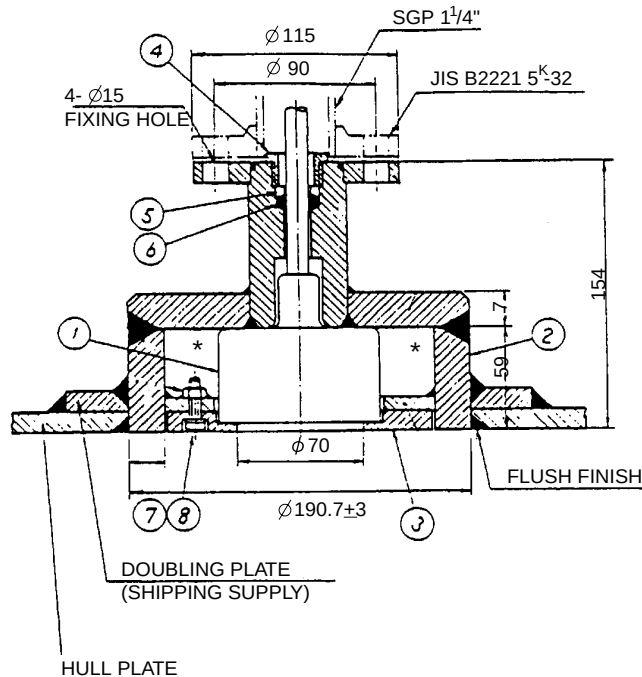

1	Transducer (50B-6B)
2	Transducer Tank
3	Fixing Flange
4	Gland Nut
5	Washer
6	Rubber Gasket
7	Hex. Bolt (M6x25)
8	Spring Washer (For M6)

Sea water comes into the area marked with "" inside the tank.

Transducer Tank for 50B-6B Transducer

1.4 Distribution Box

A magnetic compass will be affected if placed too close to the distribution box. Observe the following compass safe distance to prevent disturbance to the magnetic compass.

Standard compass: 1.90 meters

Steering compass: 1.15 meters

Fasten the distribution box with four tapping screws (6x30) referring to the outline drawing at the end of this manual.

1.5 Matching Box

The matching box should be selected depending on the transducer type;


- 50B-6B transducer: MB-502
- 200B-8B transducer: MB-504

Fasten the matching box with four Trapping screws (6x20: local supply). Compass safe distances are as follows; standard compass: 0.50 m, Steering compass: 0.40 m.


1.6 Digital Depth Indicator (option) FE-720

The indicator can be installed on a tabletop, on the overhead. Refer to outline drawings at the end of this manual for installation instructions. When selecting a mounting location, keep in mind the following points:

- Locate the unit away from exhaust pipes and vents.
 - The mounting location should be well ventilated.
 - Mount the unit where shock and vibration are minimal.
 - Locate the unit away from equipment which generates electromagnetic fields such as a motor or generator.
 - Allow sufficient maintenance space at the sides and rear of the unit and leave sufficient slack in cables, to facilitate maintenance and servicing.
 - Observe the following compass safe distances to prevent deviation of a magnetic compass.
Standard compass: 0.50 m, Steering compass: 0.40 m.
1. Fasten the hanger with four tapping screws (5x20).
 2. Fasten the digital depth indicator to the hanger with two knobs.

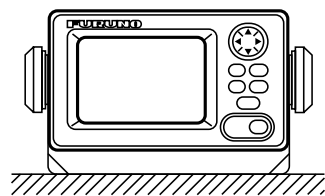

Tabletop

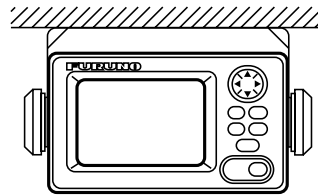

Overhead


■ Flush mounting

There are two types of flush mount kits, F type and S type. For details, see the outline diagrams at the back of this manual.

F type

Use the accessories FP65-00401 (See page A-3).


1. Prepare a cutout in the mounting location whose dimensions are 183 (W) X 92 (H) mm.
2. Attach the cosmetic panel (20-016-1051) to the indicator with Two hex bolts (M6X12) and two spring washers (M6).
3. Fix the indicator to the mounting location with four tapping screws (5X20).

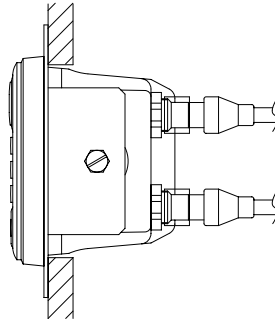

S type

Use the accessories FP65-00402 (See page A-3).

1. Prepare a cutout in the mounting location whose dimensions are 167 (w) X 92 (H) mm.
2. Insert the indicator to the cutout.
3. Attach two fixing plates (20-007-2401) to the indicator with two hex bolts (M6X12) and two spring washers (M6).
4. Screw four wing bolts (M4X30) to wing nuts (M4).
5. Fasten the indicator with four wing bolts and nuts.

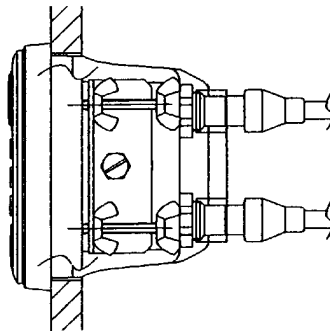


1.7 Transducer Switch Box (option) EX-8

If two transducers are installed, the transducers switch box is required. Locate the transducer switch box near the display unit considering length of the interconnection cable. Select the bright place where the panel of equipment can be watched. Use only the screws supplied on the terminal inside to make connections. Use of other screws may cause a short circuit. Compass safe distances are as follows; standard compass: 1.00 m, Steering compass: 0.60 m.

2. WIRING


Wiring

Connect three cable assemblies (supplied) between the display unit and distribution box.

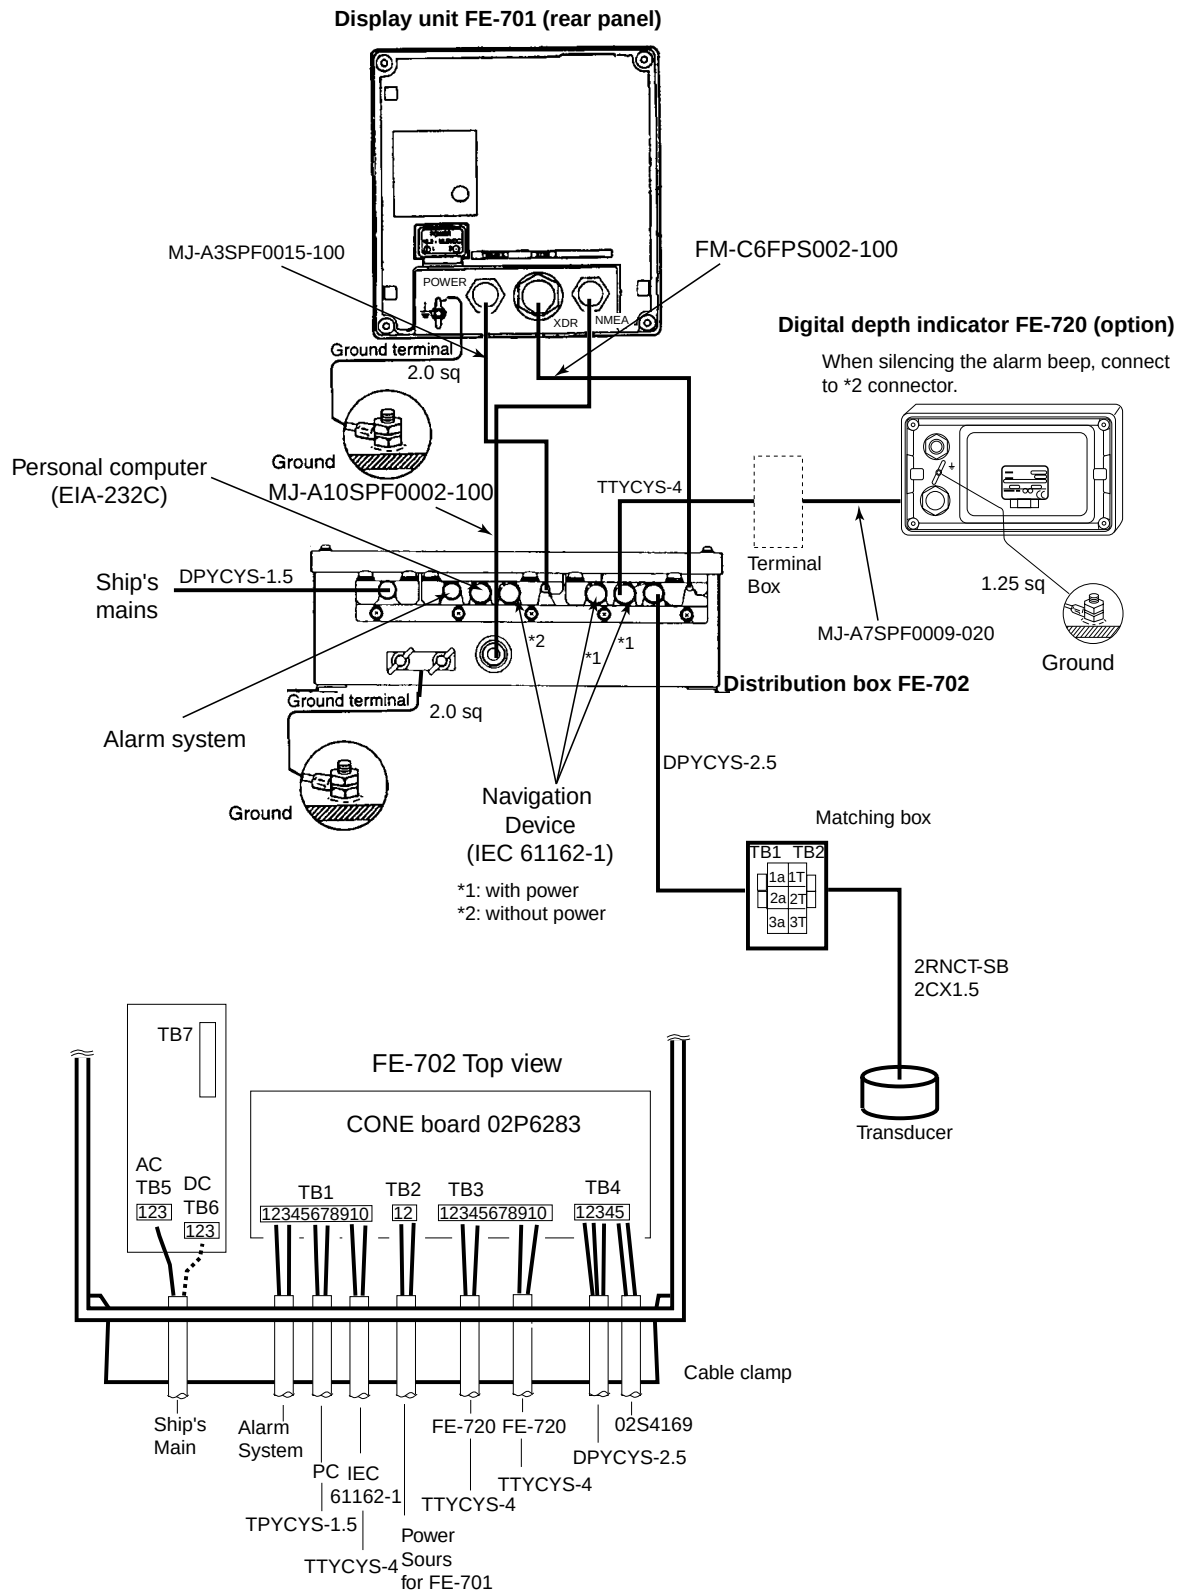


When the Transducer Switch Box EX-8 is used, the interconnection diagram is as follows.

Display unit FE-701 (rear panel)

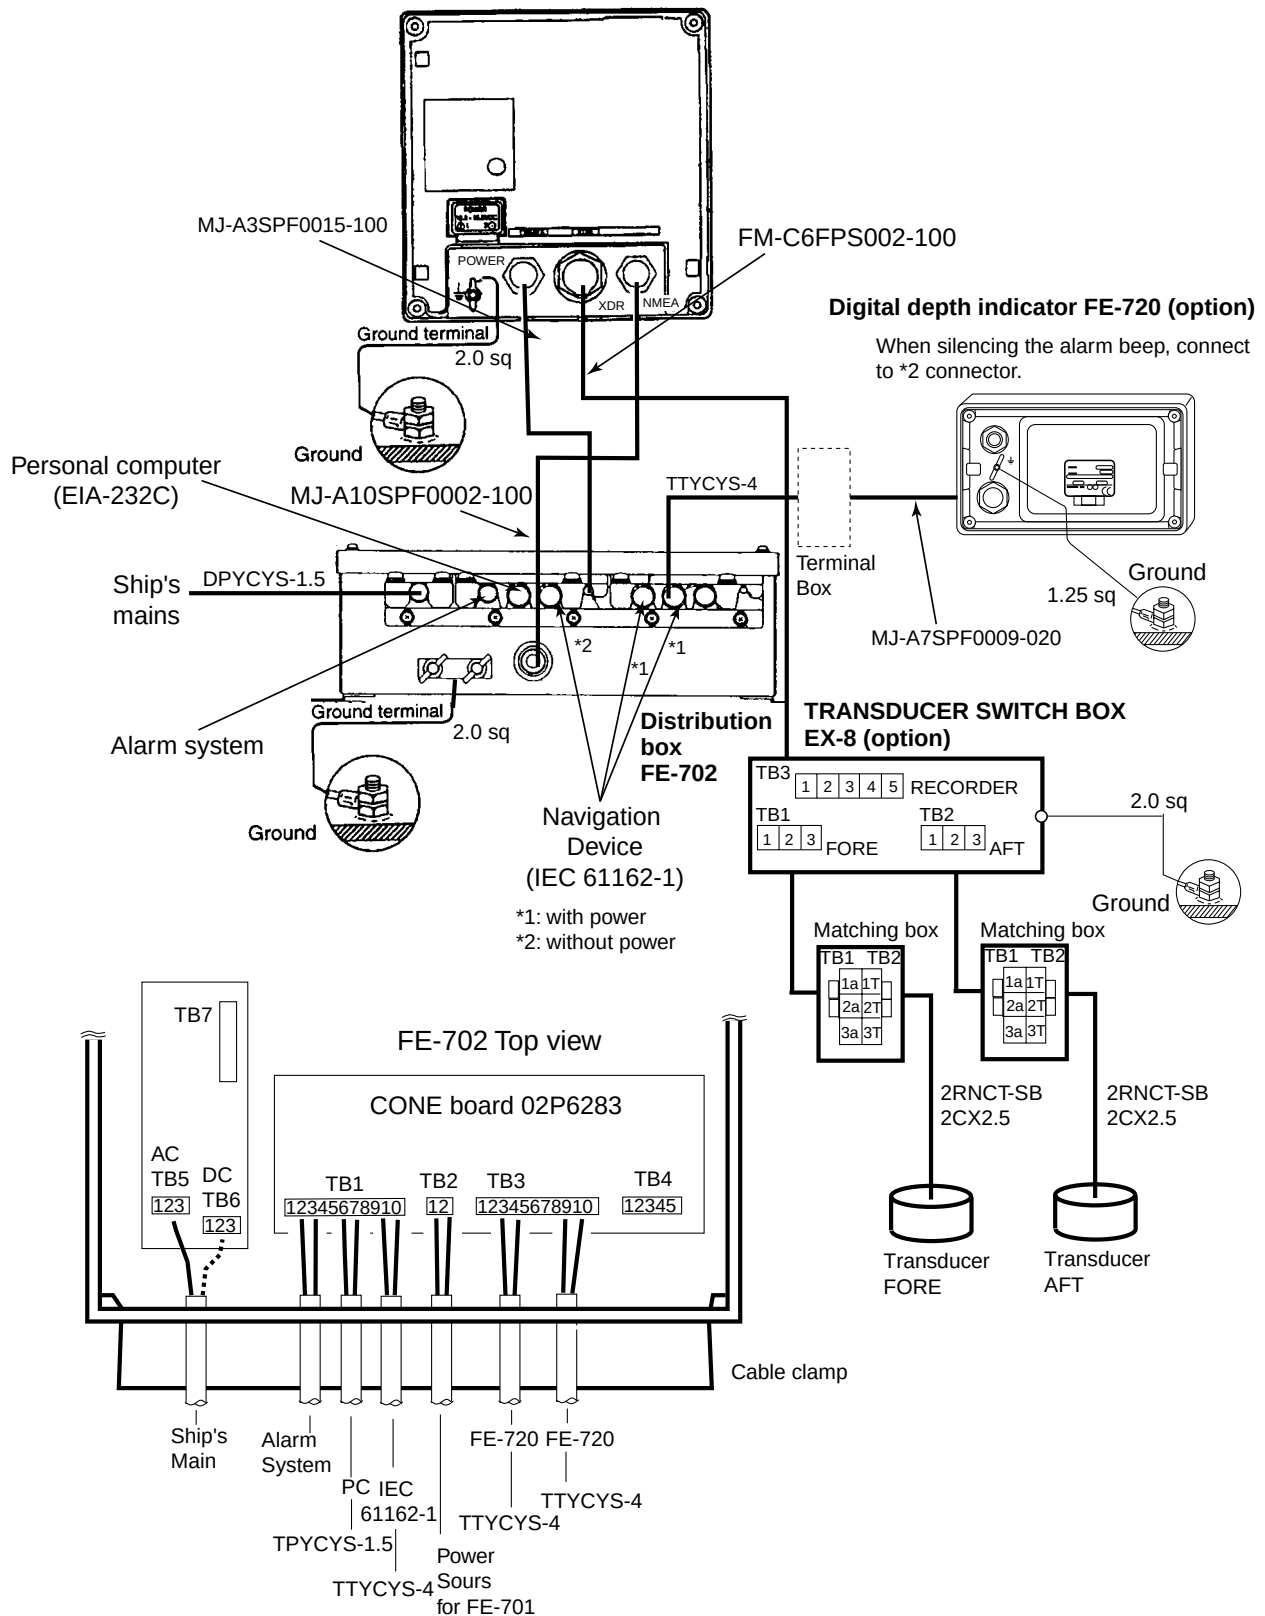


Cable Fabrication of DPYCYS-2.5, DPYCYS-1.5, MJ-A3SPF0015 , FM-C6FPS0002 and TPYCYS-1.5

Fabricate the power and other cables as illustrated below to connect them to the Distribution box.

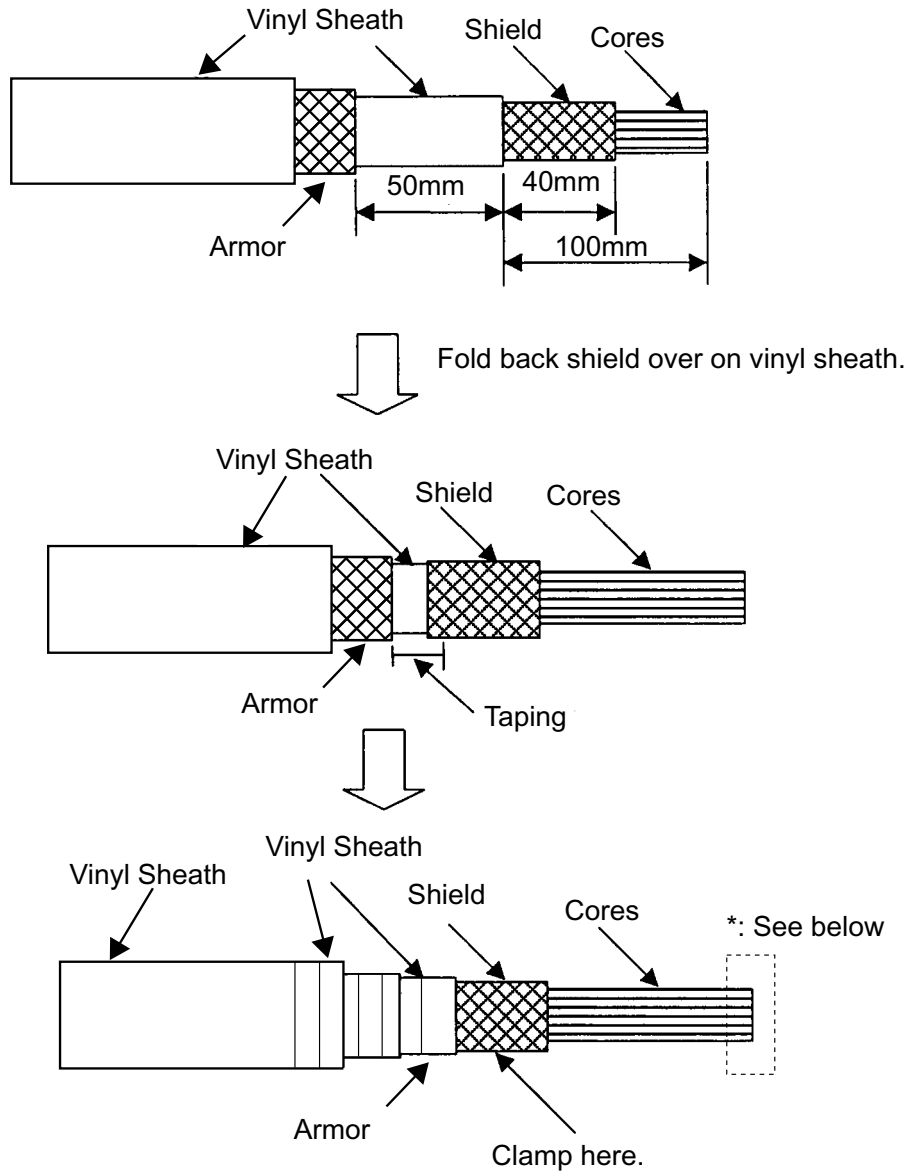


*: Depending on cables, fabrications are as follows.

- DPYCYS-2.5, DPYCYS-1.5, TPYCYS-1.5




- Others




Fabrication of cables


Several cables are required to supply at local. In this manual, JIS (Japan Industrial Standard) cables are specified. Use equipment cables referring to the figures below.

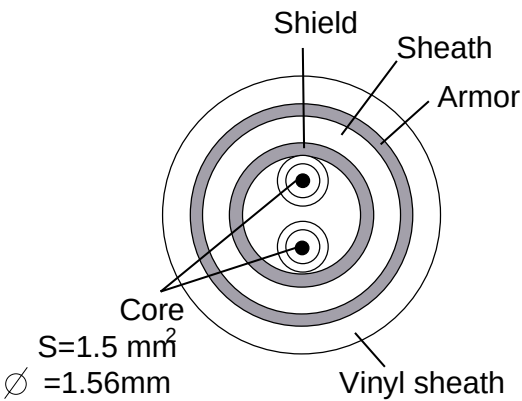

DPYCYS-1.5 sectional view

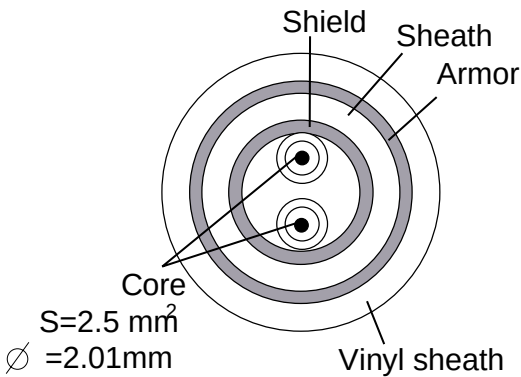

DPYCYS-2.5 sectional view



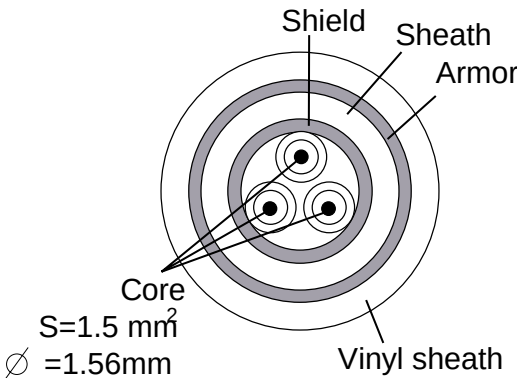


TPYCYS-1.5 sectional view

JIS Cables (Cross section)

Cable Fabrication of TTYCYS-4

TTYCYS is a Japan Industrial Standard (JIS) cable. Use the equipment one.

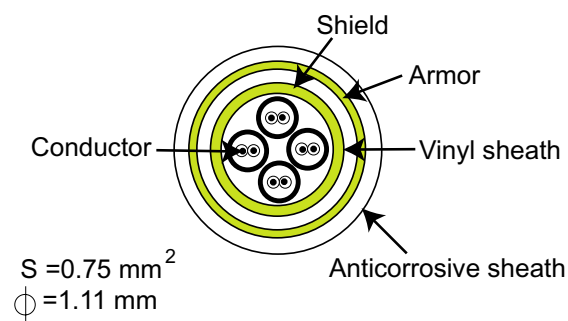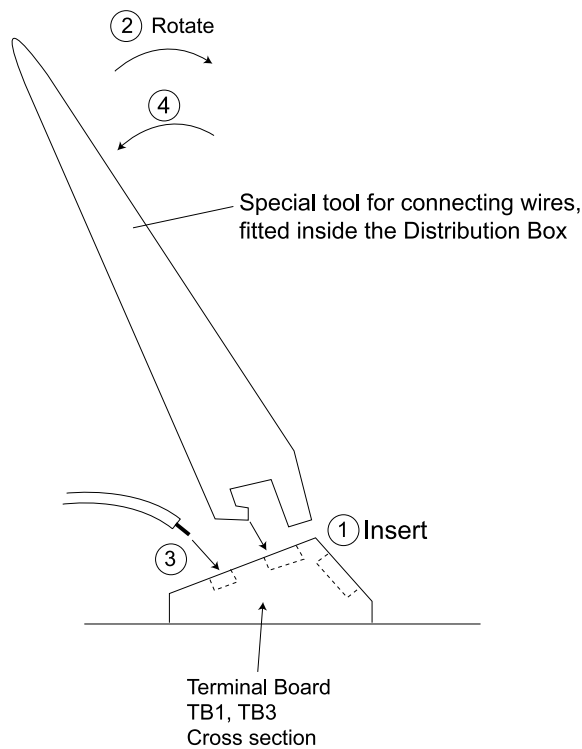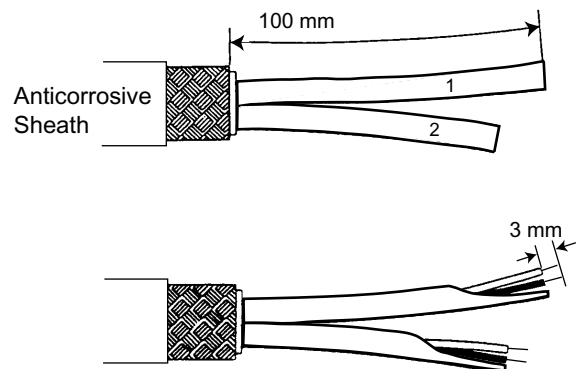

(Sectional view)

Fabrication of cable TTYCYS-4


Power Supply Cable from Ship's Mains

If the ship's mains is AC, the power supply cable must be connected to TB5 in the Distribution Box. In case of DC ship's mains, cable must be connected to TB6 in the Distribution Box. For further information, refer to page 16.

Attaching EMI core

Attach EMI core (supplied) to the power cable to prevent noise.

1. Tape the power cable where the EMI core is to be attached, to hold the core in place.
2. Fasten the core close to the power cable connector.

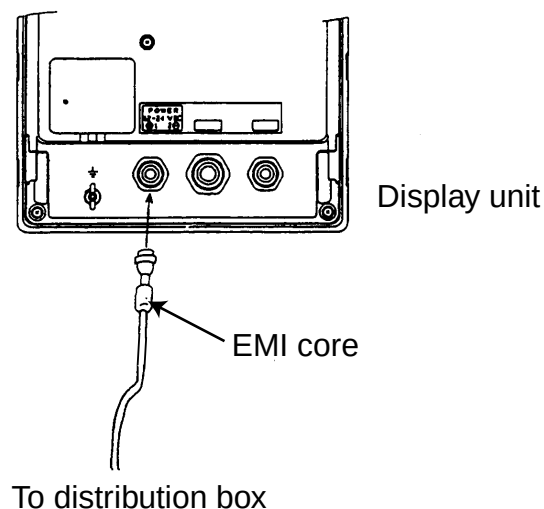

Transducer

Connect the transducer cable to the distribution box. If necessary, attach the junction box between the distribution box and matching box.

Ground

Connect the ground wire (2.0 sq.) from both the display unit and distribution box to ship's ground to prevent interference to the picture. Shorten the ground wire as much as possible.

The optional digital depth indicator FE-720 should be grounded by 1.25 sq. wire.


Note 1: Ground the equipment to prevent mutual interference.

Note 2: Use "closed-type" lugs (supplied) to make the ground connection at the display unit and distribution box. Do not use an "open-type" lugs.

Alarm system connection

The power error and shallow water alarms, which produce audio and visual alarms in the event of power failure and shallow water, can be output by connecting the distribution box to the ship's alarm system.

Connect the DPYCYS-1.5 cable between TB1 in the Distribution Box and the alarm system of the ship referring to the schematic diagram at the end of this manual.

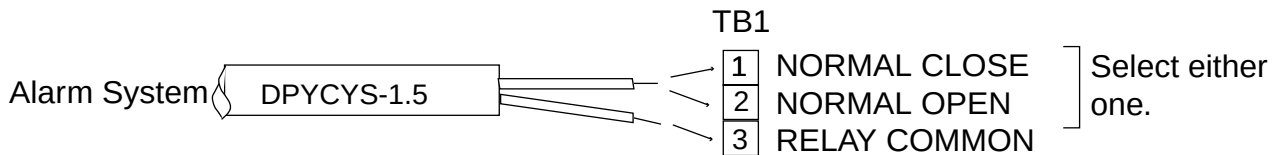


Digital Depth Indicator FE-720

There are two methods to connect the digital depth Indicator FE-720.

Case 1: Input signal from the main display unit to FE-720


The interconnection is as follows.

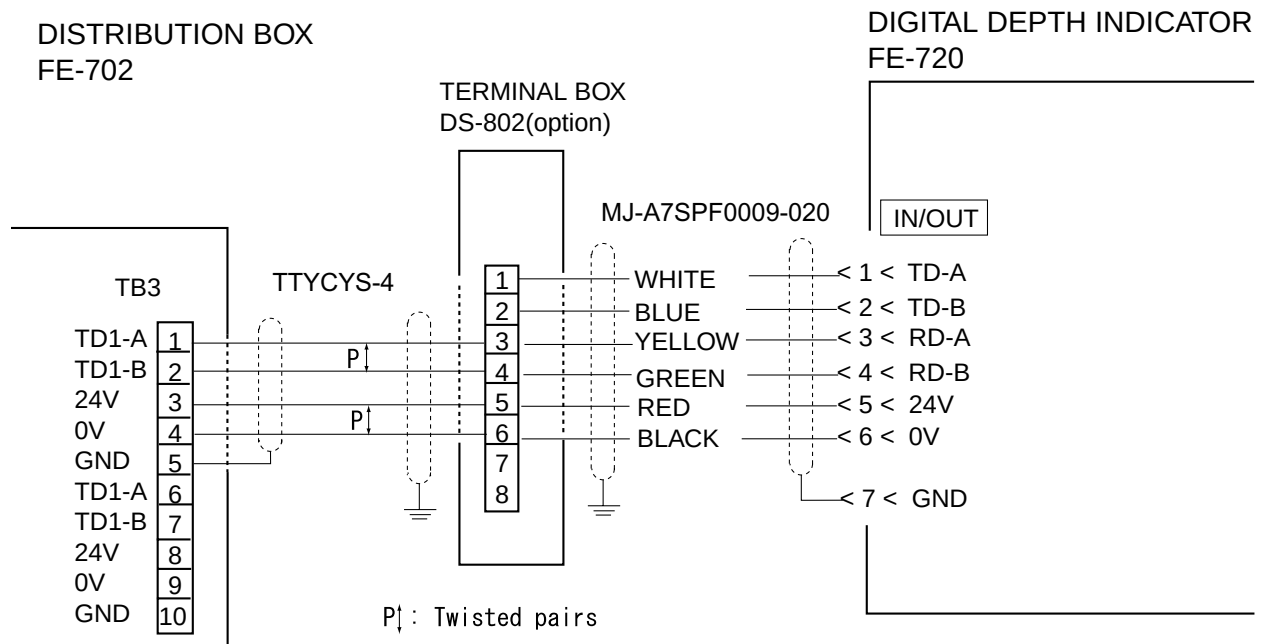

Case2: Silencing the alarm from the digital depth indicator FE-720

When the main display unit FE-701 activates an alarm, it can be deactivated at the FE-701 itself and also, it can be deactivated from the digital depth indicator FE-720. To do this, connect as follows.

Connection

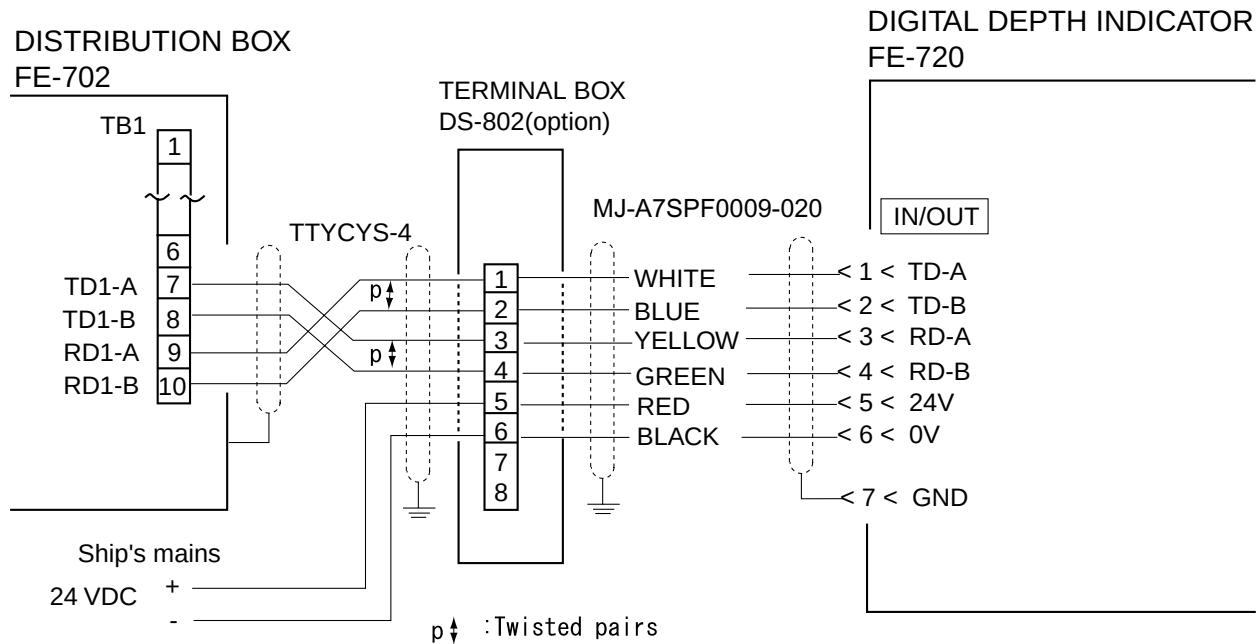

Note: In this case, a positioning device can not be connected.

FE-720 setting

In the menu of the FE-720, ALARM should be set to ON. If an alarm activates, press any key on the FE-720, then the alarm will be deactivated at the FE-701 and FE-720.

MENU	
DIM CONTROL	
LANGUAGE	PANEL ONLY
CONTRAST	ENGLISH
ALARM	ON
TEST	

3. CHANGING POWER SPECIFICATIONS

This unit is set at factory to operate from 200-230 VAC ship's mains. For connection to a 100-115 VAC or 24 VDC ship's mains, modification of the power section is necessary.

Note: Tick the appropriate box on the inside of the distribution box cover to denote the power use.

☐	200-230 VAC (50/60 Hz)
☐	100-115 VAC (50/60 Hz)
☐	24 VDC

Label inside the distribution box

100-115 VAC Ship's Mains

1. Connect the power cable to #1 & #3 on TB5 in the distribution box.
2. Modify the wiring on TB7 as below.

200-230 VAC (factory setting)

Terminal location on TB7	Color of cable from T1
1	Orange
2	Black




100-115 VAC

Terminal location on TB7	Color of cable from T1
1	Black
2	Orange

24 VDC Ship's Mains

1. Remove the cover of the distribution box.
2. Remove P3 connector from J4 on the CONE Board.
3. Reattach P3 connector to J3 on the CONE Board.
4. Connect the power cable to TB6.

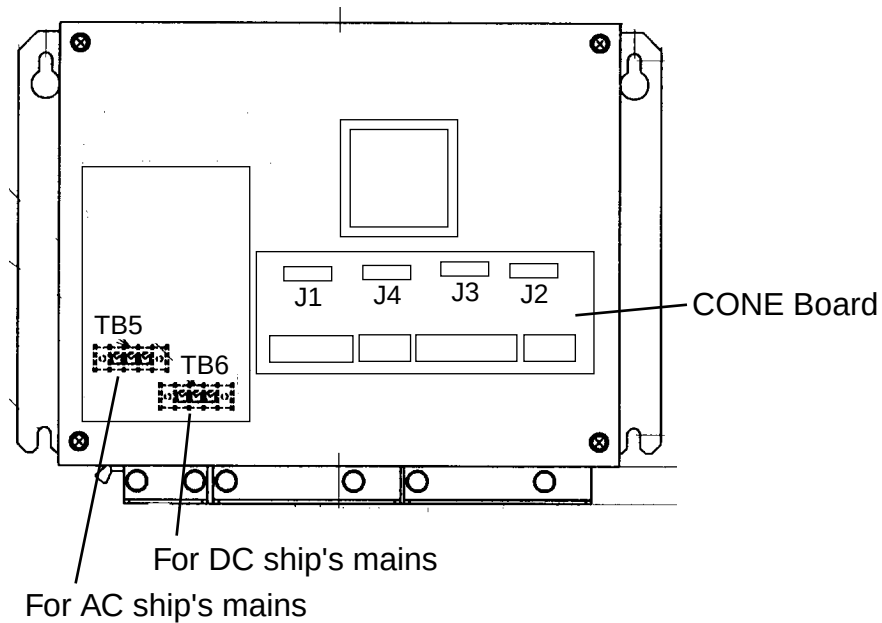

Distribution box, inside view

4. ADJUSTMENTS

This section provides the procedures for initial set up of the equipment. The type of transducer used should be properly set before operating the equipment.

4.1 Transducer Setting

Select the type of transducer used as follows.

1. Press the POWER Switch while pressing any key. Release the key when the following display appears.

EXTENSION MODE	
+ :	TRANSDUCER SETTING
- :	TEST
▲ :	CLEAR MEMORY
▼ :	DEMONSTRATION
SELECT MODE	

2. Press the [+] key to select TRANSDUCER SETTING.

TRANSDUCER SETTING				
XDR	FORE	N/A	50kHz	200kHz
XDR	AFT	N/A	50kHz	200kHz
▼▲: To select item				
- +: To set option				

3. Set as follows by using [▲] or [▼] to select an item and [+] or [-] to set option.
 - a) If only one transducer is installed, set XDR FORE field to 50 kHz or 200 kHz, according to actual installation. Leave the XDR AFT field as "N/A."
 - b) If two transducers are installed via the switch box EX-8, set XDR FORE field and XDR AFT field to 50 kHz or 200 kHz, according to actual installation.
4. Reset the power.

Note: The default settings in the TRANSDUCER SETTING window are N/A. At the first power-up after installation, the window appears to set transducer(s).

4.2 Setting the Time

1. Open the system menu 2 referring to the operator's manual.

SYSTEM MENU 2		
MENU SELECT	1	2 3
TIME ADJUST	INTERNAL EXTERNAL	
DAY	1	
MONTH	JAN	
YEAR	2001 (~2100)	
HOUR	0 (0~23)	
MINUTE	0 (0~59)	
SECOND	0 (0~59)	
01 JAN 2001 00:00:00		
▼▲: To select item - +: To set option Select other mode to exit.		

System menu 2

2. Press [▼] key to select TIME ADJUST.

INTERNAL: This mode uses the internal clock. Set day, month, year, hour, minute and second with [+] or [-] key.

EXTERNAL: This mode is used when connecting with the equipment which outputs ZDA format.
 At TIME DIFFERENCE field, select AUTO or MANUAL. MANUAL requires entry of time difference.


SYSTEM MENU 2		
MENU SELECT	1	2 3
TIME ADJUST	INTERNAL	EXTERNAL
TIME DIFFERENCE	AUTO	MANUAL
0:22:40		
▼▲: To select item - +: To set option Select other mode to exit.		

MENU SELECT	1	2 3
TIME ADJUST	INTERNAL	EXTERNAL
TIME DIFFERENCE	AUTO	MANUAL
TIME DIFF HOUR	0 (0~13)	
TIME DIFF MIN	0 (0~59)	
TIME DIFF SIGN	- +	
- - - - -		
▼▲: To select item - +: To set option		




PACKING LIST

02F1-X-9851 -1 1/1



FE-701

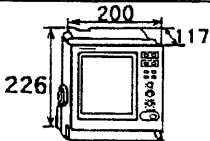NAME	OUTLINE	DESCRIPTION/CODE No.	Q'TY
ユニット UNIT			
指示器 DISPLAY UNIT		FE-701 000-015-871	1

付属品 ACCESSORIES

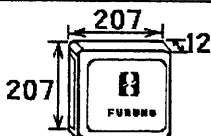ハードカバー HARD COVER		FP02-04802 001-389-020	1
ブラインドフィルム(K) BLIND FILM(K)		03-118-1103-0 100-185-380	1
+トラスタッピング +TAPPING SCREW		5X20 SUS304 1ヶ 000-802-081	4

工事材料 INSTALLATION MATERIALS

ケーブル組品 CABLE ASSY		MJ-A3SPF0015-100 000-142-974	1
ケーブル組品 CABLE ASSY.		FM-C6FPS002-100 000-142-781	1
ケーブル組品 CABLE ASSY.		MJ-A10SPF0002-100 64S4050 000-126-659	1
EMIコア EMI CORE		ESD-SR-15 000-134-410	1




DWG NO.

C2366-Z01-B

(略図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)

FURUNO

CODE NO.	001-228-950	02FI-X-9401 -0
TYPE	CP02-06301	1/1

工事材料表 INSTALLATION MATERIALS		FE-700 音響測探機 NAVIGATIONAL ECHO SOUNDER			
番号 NO.	名称 NAME	略図 OUTLINE	型名／規格 DESCRIPTIONS		数量 Q'TY 用途／備考 REMARKS
1	+トラスタップ・ソケット 1種 TAPPING SCREW		6X30 SUS304		4
			CODE NO.	000-802-085	
2	圧着端子 CRIMP-ON LUG		FV1.25-3 7カ		10
			CODE NO.	000-538-113	
3	圧着端子 CRIMP-ON LUG		FV2-S3.3 7カ		10
			CODE NO.	000-538-117	

DWG NO.

C2366-M01- A








FURUNO ELECTRIC CO., LTD

(略図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)




PACKING LIST

02FI-X-9852-4 1/1

FE-720/HK

NAME	OUTLINE	DESCRIPTION/CODE №	Q'TY
ユニット UNIT			
深度表示器 DIGITAL DEPTH INDICATOR		FE-720	1
		000-029-025**	
付属品 ACCESSORIES			
FP65-00401			
六角ボルト スリ割り HEX.BOLT(SLOTTED HEAD)		MX12 SUS304	2
		000-862-127	
ハネ座金 SPRING WASHER		M6 SUS304	2
		000-864-260	
化粧パネル COSMETIC PANEL		20-016-1051-0	1
		100-251-370	
付属品 ACCESSORIES			
FP65-00402			
ハネ座金 SPRING WASHER		M6 SUS304	2
		000-864-260	
六角ボルト スリ割り HEX.BOLT(SLOTTED HEAD)		MX12 SUS304	2
		000-862-127	
フラッシュマウント FIXING PLATE FOR FLUSH MOUNT		20-007-2401-0	2
		100-183-190	
蝶ボルト WING SCREW		M4X30 YBSC2 MBN12	4
		000-804-799	




注記) 1.コード末尾に[**]の付いたユニットは代表の型式/コードを表示しています。
DOUBLE ASTERISK DENOTES COMMONLY USED EQUIPMENT.

NAME	OUTLINE	DESCRIPTION/CODE №	Q'TY
蝶ナット WING NUT		M4 YBSC2 MBN12	4
		000-863-306	
付属品 ACCESSORIES			
FP65-00403			
+トラスタップ・ンネジ TAPPING SCREW		5X20 SUS304 1種 7ヶ	4
		000-802-840	
工事材料 INSTALLATION MATERIALS			
CP65-00801			
圧着端子 CRIMP-ON LUG		FV0.5-4 7(YEL)	20
		000-107-268	
その他工材 OTHER INSTALLATION MATERIALS			
ケーブル組品MJ CABLE ASSY.		MJ-A6SPF0003-020	1
		000-144-235	
ケーブル組品MJ CABLE ASSY.		MJ-A7SPF0009-020	1
		000-145-612	

(略図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)

FURUNO

CODE NO.	002-888-480	65AD-X-9403 -0
TYPE	CP65-00903	1/1

工事材料表 INSTALLATION MATERIALS		DS-80 ドップラースピードログ DOPPLER SPEED LOG 端子台箱用 FOR TERMINAL BOX			
番号 NO.	名称 NAME	略図 OUTLINE	型名／規格 DESCRIPTIONS	数量 Q'TY	用途／備考 REMARKS
1	トラスタッピングネジ 1種 TAPPING SCREW		5X25 SUS304 CODE NO. 000-802-082	4	
2	圧着端子 CRIMP-ON LUG		FV0.5-4 ｷ(YEL) CODE NO. 000-107-268	20	
3	圧着端子 CRIMP-ON LUG		FV2-M4 CODE NO. 000-536-716	30	




DWG NO. C7247-M03- A

FURUNO ELECTRIC CO., LTD

(略図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)

FURUNO

CODE NO.	001-228-890	02FI-X-9301 -0
TYPE	SP02-04101	BOX NO. P

SHIP NO.		SPARE PARTS LIST FOR		U S E			SETS PER VESSEL	
		FE-700 音響測探機 NAVIGATIONAL ECHO SOUNDER						
ITEM NO.	NAME OF PART	OUTLINE	DWG. NO. OR TYPE NO.	QUANTITY			REMARKS/CODE NO.	
				WORKING		SPARE		
				PER SET	PER VES			
1	ヒューズ FUSE		FGMB 3A 125V	1		3	000-104-909	
2	ヒューズ FUSE		FGMB 0.5A 125V	1		3	000-114-994	
3	ヒューズ FUSE		FGMB 1A 250V	1		3	000-142-771	
MFR'S NAME		FURUNO ELECTRIC CO.,LTD		DWG NO.		C2366-P01- A		1/1

(略図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)




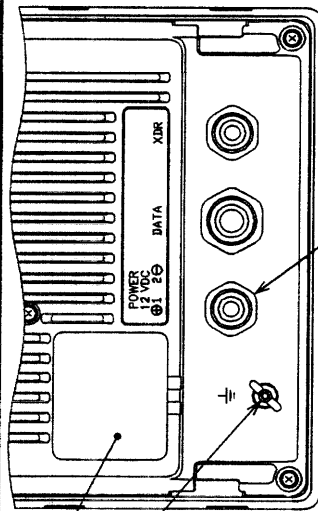


表 1 TABLE 1

寸法区分 (mm) DIMENSION	公差 (mm) TOLERANCE
L ≤ 50	±1.5
50 < L ≤ 100	±2.5
100 < L ≤ 500	±3

矢 視 A
VIEW A

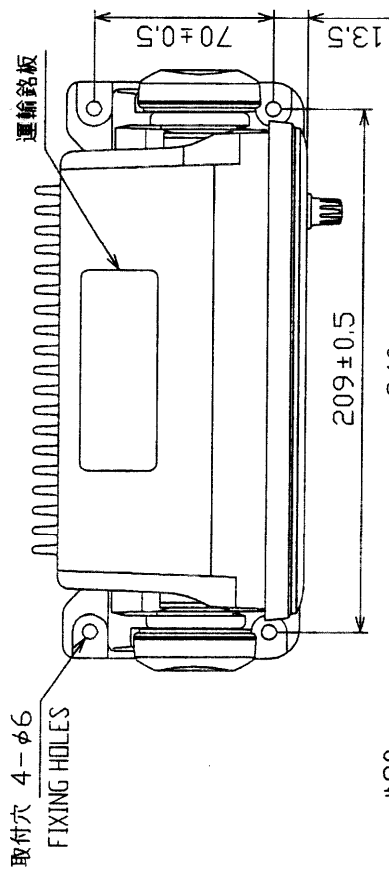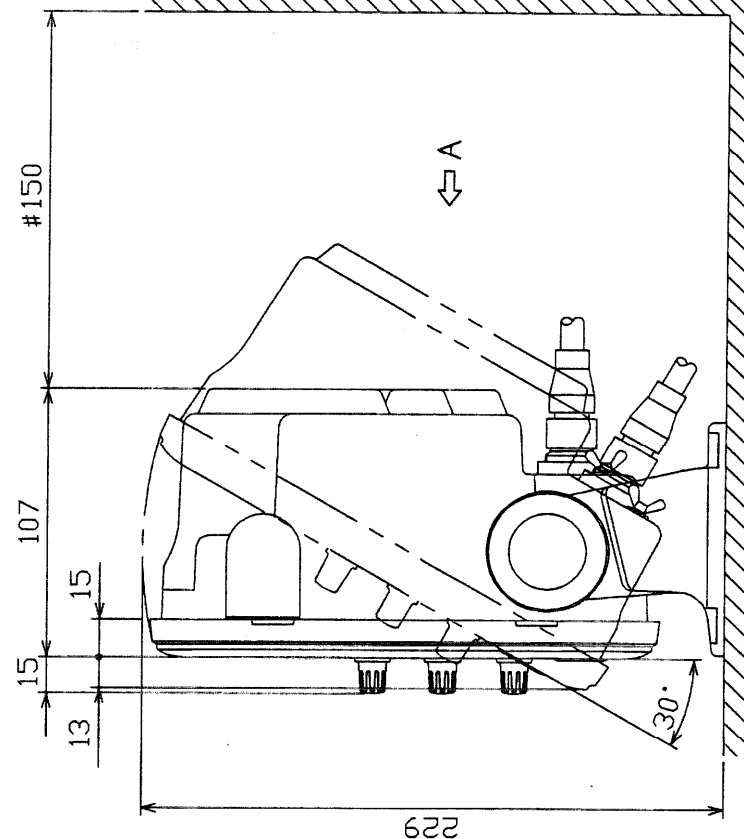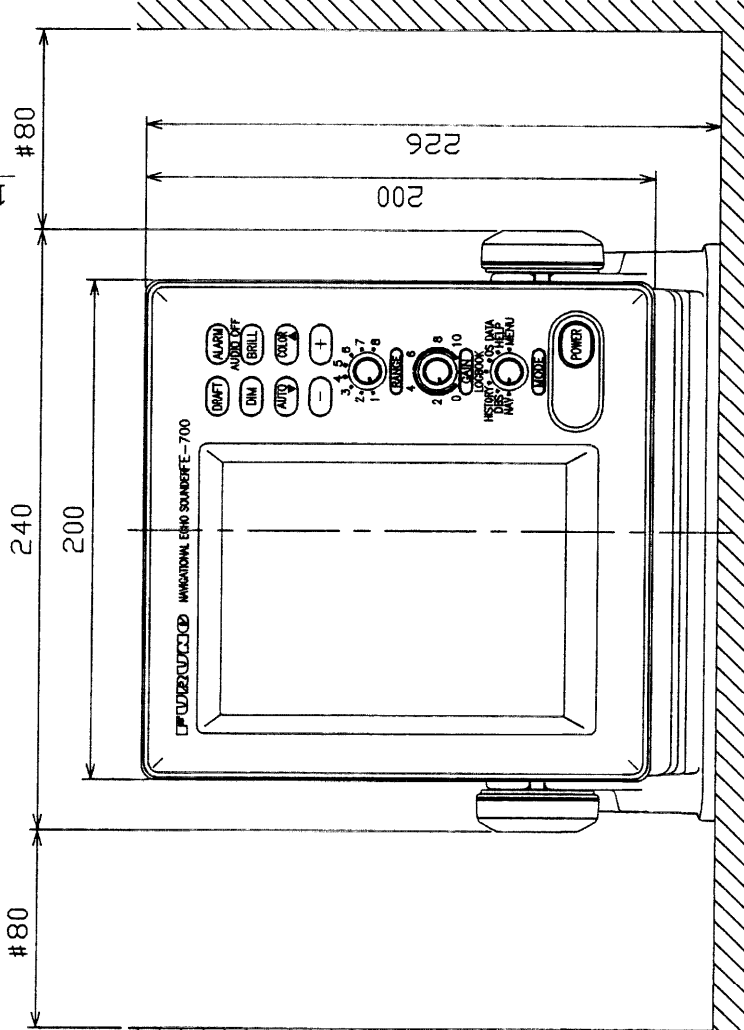

注 記 1) #印寸法は最小サービスペース寸法とする。

2) 指定外の寸法公差は表 1 による。

3) 取付用ネジはトラスタックピンネジ呼び径 5×20 を使用のこと。



NOTE 1. #: RECOMMENDED SERVICE CLEARANCE.

2. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS.

3. USE TAPPING SCREWS 5x20 FOR FIXING THE UNIT.



DRAWN Sep. 17 '01 I. YAMASAKI	TITLE FE-701
CHECKED Sep. 21 '01 Y. Kikuchi	名称 指示器 (卓上装備)
APPROVED Sep. 21 '01 Y. Kikuchi	外 寸 図
SCALE 1/3	NAME DISPLAY UNIT (DESKTOP MOUNT)
DWG No. C2366-501-B	02-129-1700-2
	OUTLINE DRAWING

FURUNO ELECTRIC CO., LTD.

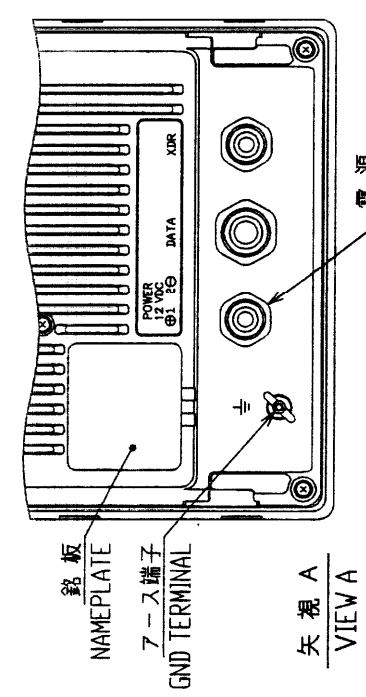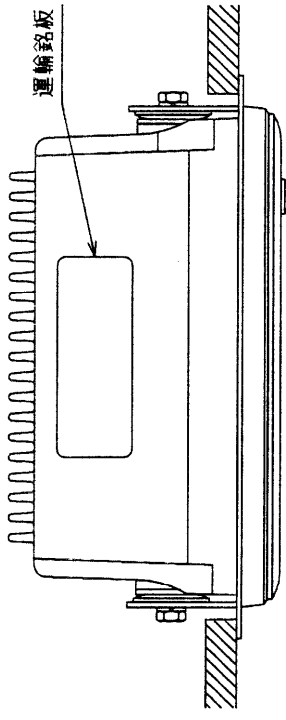


寸法区分 (mm)	公差 (mm)
DIMENSION	TOLERANCE
L ≤ 50	±1.5
50 < L ≤ 100	±2.5
100 < L ≤ 500	±3

表 1 TABLE 1

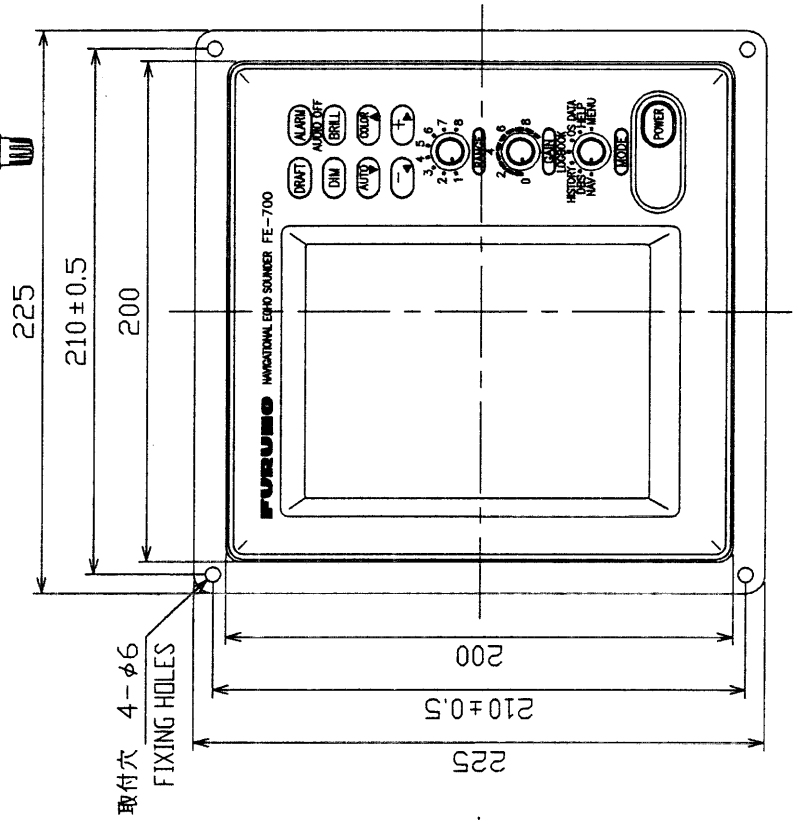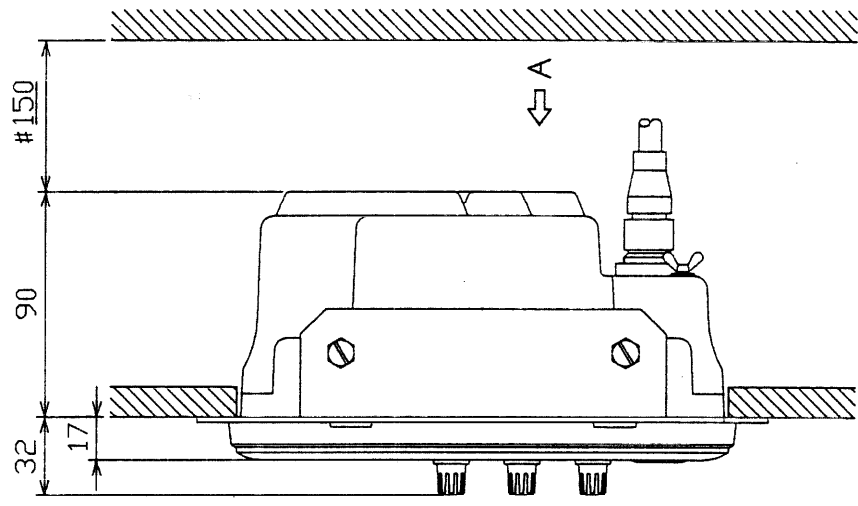

取付穴 4-φ6
FIXING HOLES

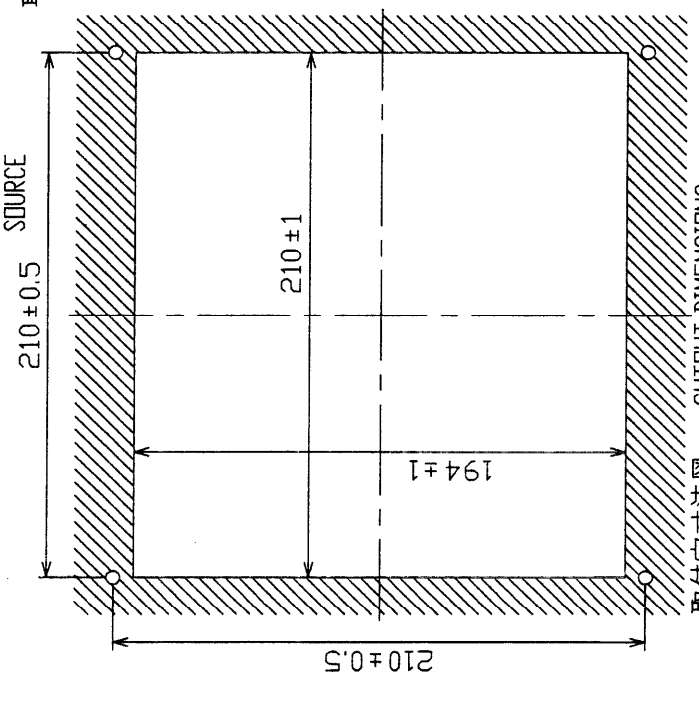

取付寸法図 CUTOUT DIMENSIONS

注 記 1) #印寸法は最小サービス空間寸法とする。

2) 指定外の寸法公差は表 1 による。

3) 取付用ネジは M5 ボルトまたはタッピンネジが径 5 × 20 を使用のこと。

NOTE 1. #1 RECOMMENDED SERVICE CLEARANCE.

2. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS.

3. USE TAPPING SCREWS 5x20 FOR FIXING THE UNIT.

DRAWN Sep. 17. 01. I. YAMASAKI	TITLE FE-701
CHECKED	名称 指示器 (埋込装備 F)
APPROVED	外寸図
SCALE 1/3	NAME DISPLAY UNIT (FLUSH MOUNT F)
MASS 2.4 kg	OUTLINE DRAWING
DWG No. C2366-003-B	02-129-180G-2





Diagram showing a roof section with a total width of 150mm. The roof slope is indicated as MAX. 12%. The horizontal dimensions are 30mm on the left and 15mm on the right, totaling 45mm. The vertical dimension is 92mm.

公差 (mm) TOLERANCE	尺寸区分 (mm) DIMENSION
±1.5	L ≤ 50
±2.5	50 < L ≤ 100
±3	100 < L ≤ 500

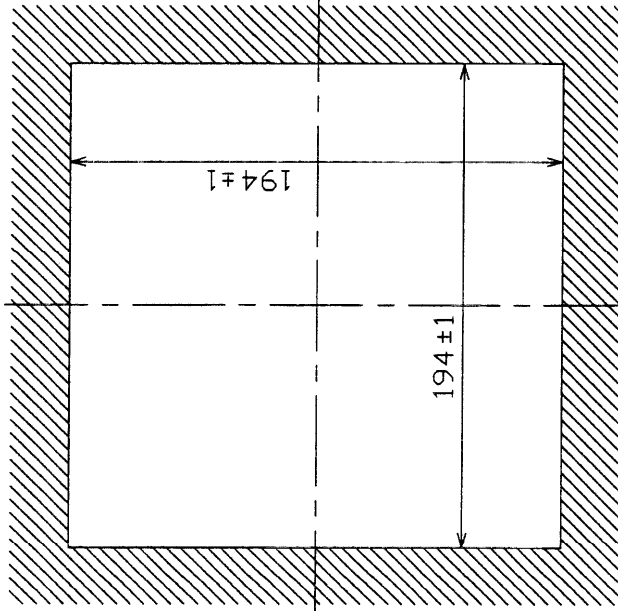

注記 1) #印寸法は最小サービスイ間寸法とする。
2) 指定外の寸法公差は表1による。





NOTE 1. #: RECOMMENDED SERVICE CLEARANCE.

2. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS.

DRAWN	SEP. 17 '91	I. YAMASAKI				
CHECKED						
APPROVED						
SCALE	1/3	MASS	2.4 kg	FE-700	外寸図	
DWG No.	C2366-504-B				NAME	DISPLAY UNIT (FLUSH MOUNT S)
						TITLE
						名称
						指示器 (埋込装備 S)
						TITLE
						FE-701

寸法区分 (mm) DIMENSION	公差 (mm) TOLERANCE
L ≤ 50	±1.5
50 < L ≤ 100	±2.5
100 < L ≤ 500	±3

表 1 TABLE 1

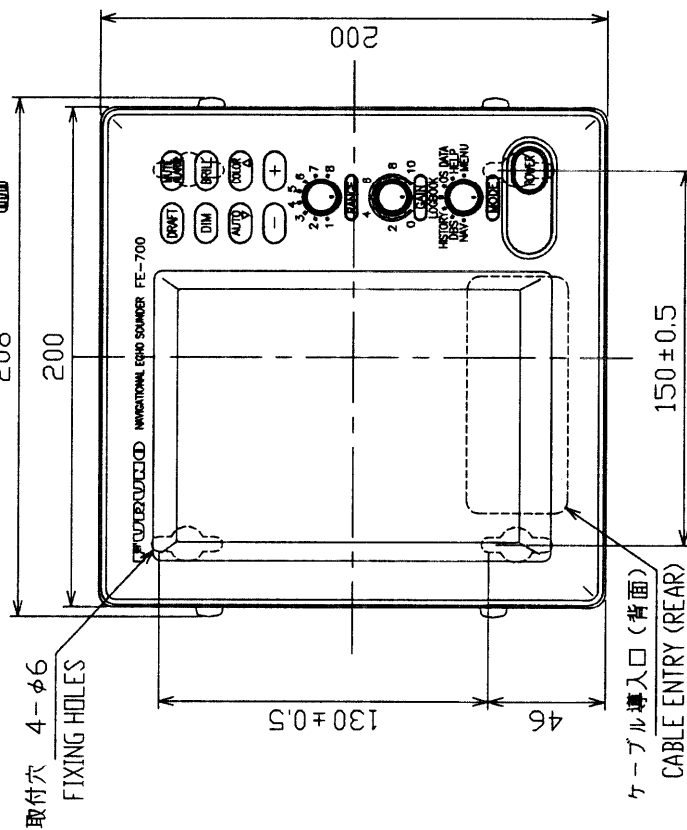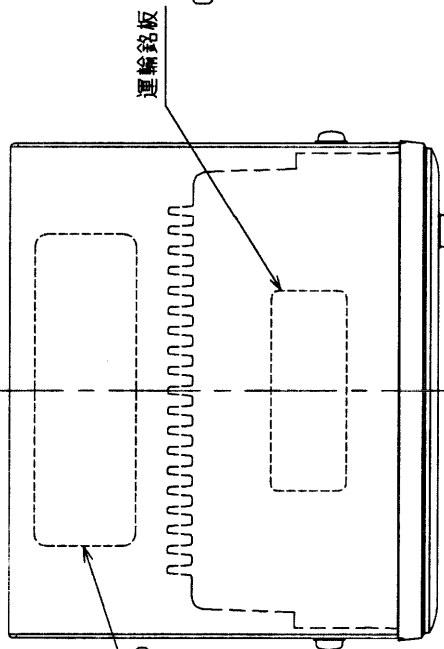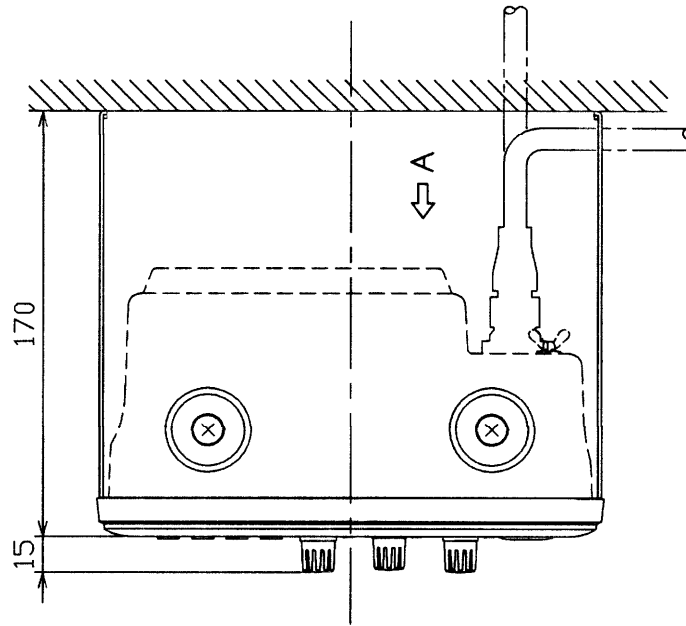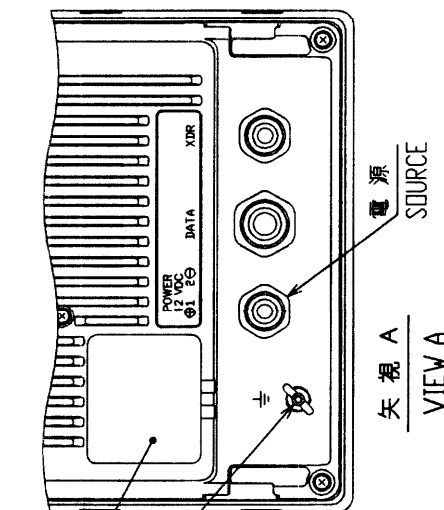


- 注 記 1) 取付用ネジはM5 ボルトまたはタッピンネジ呼び径5×20を使用のこと。
2) 指定外の寸法公差は表 1 による。
- NOTE 1. USE M5 BOLTS OR TAPPING SCREWS 5×20 FOR FIXING UNIT.
2. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS.

DRAWN Sep. 17 '91 I. YAMASAKI	TITLE FE-700
CHECKED Sep. 17 '91 Y. K.	名称 指示器 (壁掛装置)
APPROVED Sep. 17 '91 Y. K.	外寸図
SCALE 1/3	NAME DISPLAY UNIT (BULKHEAD MOUNT)
DWG No. C2366-G08-B	02-129-140G-1 OUTLINE DRAWING

表 1 TABLE 1

寸法区分 (mm) DIMENSION	公差 (mm) TOLERANCE
0 < L ≤ 50	±1.5
50 < L ≤ 100	±2.5
100 < L ≤ 500	±3

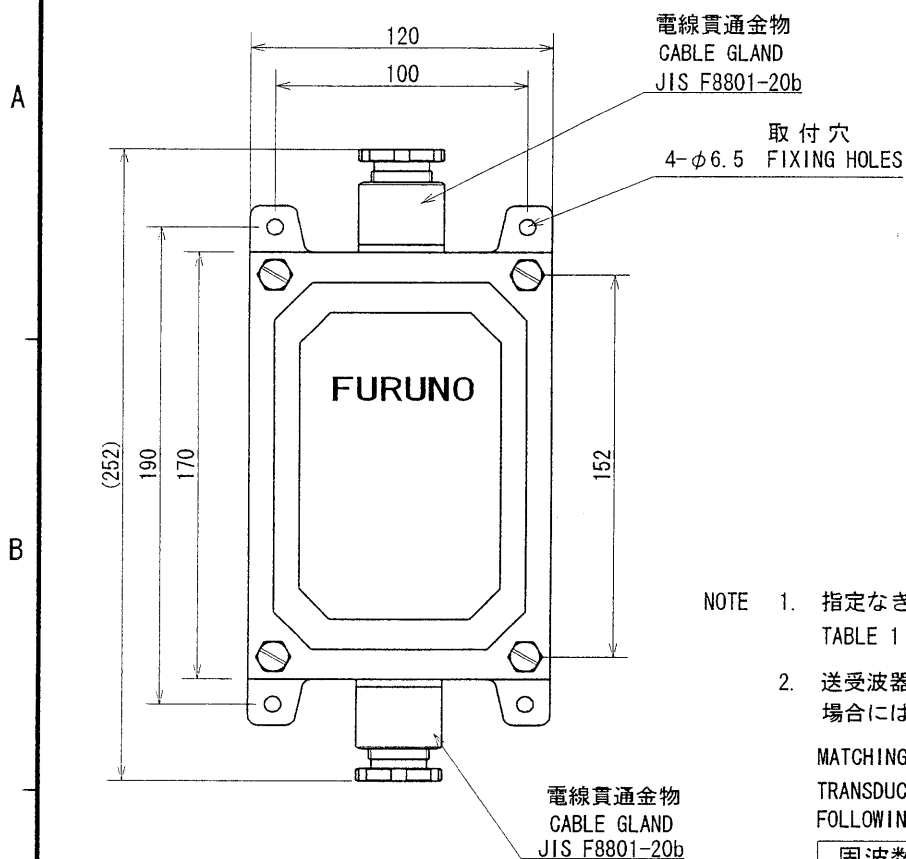

NOTE 1. 指定なき寸法公差は表 1 による。
TABLE 1 INDICATES TOLERANCE OF DIMENSIONS.



2. 送受波器ケーブルが次の長さを超える場合には本機を使用すること。

MATCHING BOX IS NEEDED WHEN THE TRANSDUCER CABLE EXCEEDS THE FOLLOWING LENGTH.

周波数	FREQ.	長さ	LENGTH
28, 50 kHz		100 m	
200 kHz		15 m	


3. 本機は送受波器ケーブル (15m) 端に取付のこと。

LOCATE THIS UNIT AT THE END OF TRANSDUCER CABLE OF 15m.

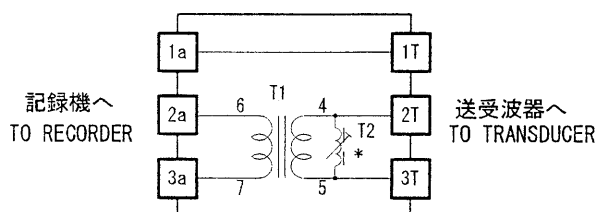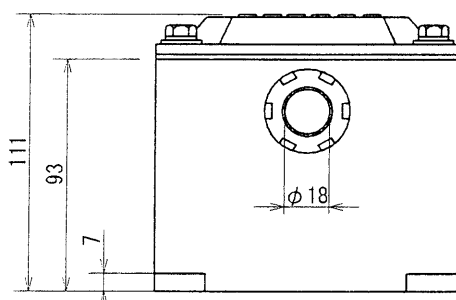

型式 TYPE	送受波器 TRANSDUCER	T1	T2
MB-501	28F-18 (28kHz)	T-205GJ	0.068uF
MB-502	50B-6B (50kHz)	T-203BJ	T-204B
MB-503	50B-9B (50kHz)	T-205BJ	T-206B
MB-504	200B-8B (200kHz)	T-205AJ	T-206A

DRAWN July 11 '00 T. KAMASAKI		TITLE MB-501/502/503/504
CHECKED July 11 '00 Y. K.		名称 整合箱
APPROVED July 11 '00 Y. K.	FE-880/880T	外寸図
SCALE 1/3	MASS 2.6 kg	NAME MATCHING BOX
DWG. No. C2006-006-E		OUTLINE DRAWING

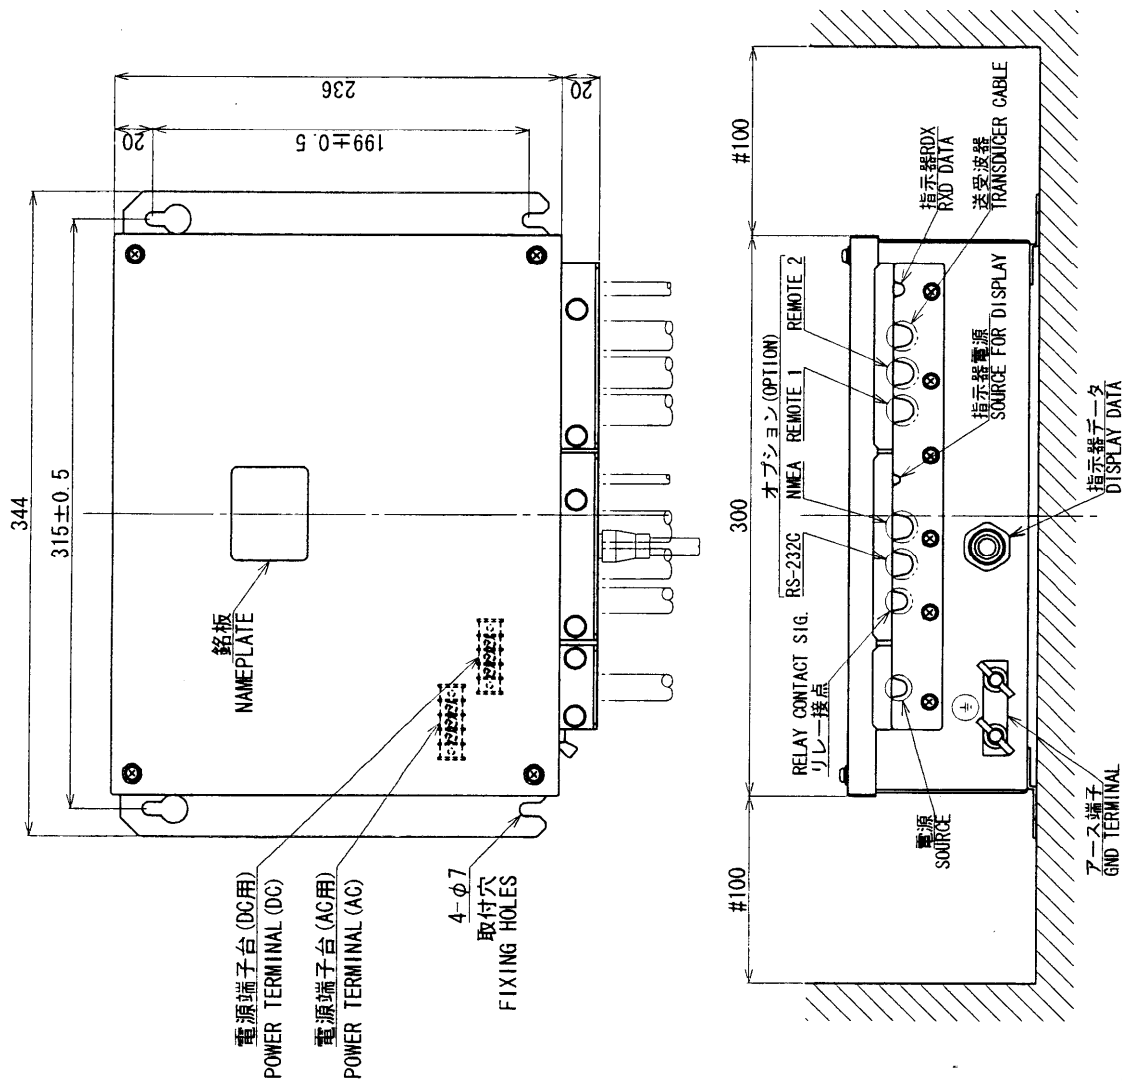

寸法区分 (mm) DIMENSION	公差 (mm) TOLERANCE
L ≤ 50	± 1.5
50 < L ≤ 100	± 2.5
100 < L ≤ 500	± 3

表 1
TABLE 1

- 注 記
- 1) #印寸法は最小サービス空間寸法とする。
 - 2) 指定外の寸法公差は表 1 による。
 - 3) 取付用ネジはトラスタピンネジ 6 × 30 を使用のこと。

- NOTE
1. #: RECOMMENDED SERVICE CLEARANCE.
 2. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS.
 3. USE TAPPING SCREWS 6 × 30 FOR FIXING UNIT.

DRAWN	Rev. 27/00 T. K. H. S. K.	TITLE	FE-702
CHECKED	Rev. 27/00 T. K. H. S. K.	名称	分配箱
APPROVED	Rev. 27/00 T. K. H. S. K.	外寸図	FE-700
SCALE	1/4	NAME	DISTRIBUTION BOX
QWG No.	Q2366-602-B	OUTLINE DRAWING	02-129-2000-G2



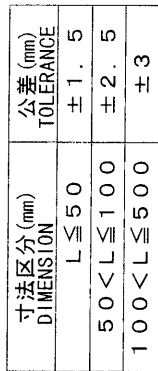


表 1
TABLE 1

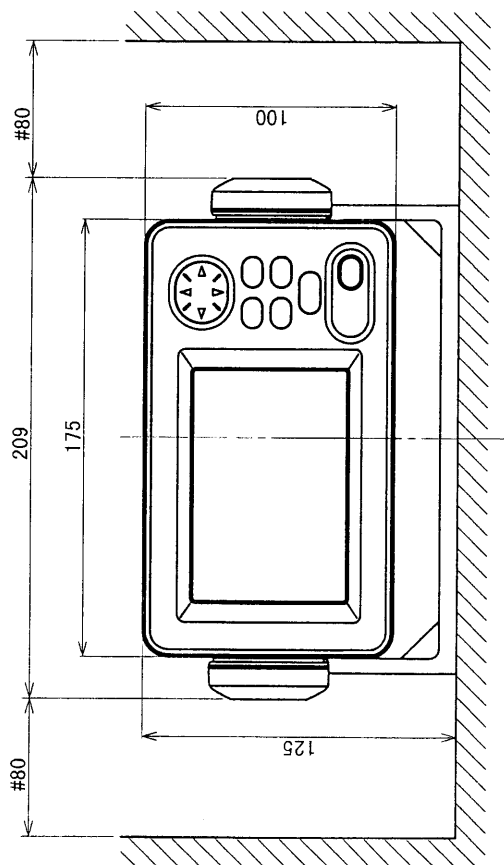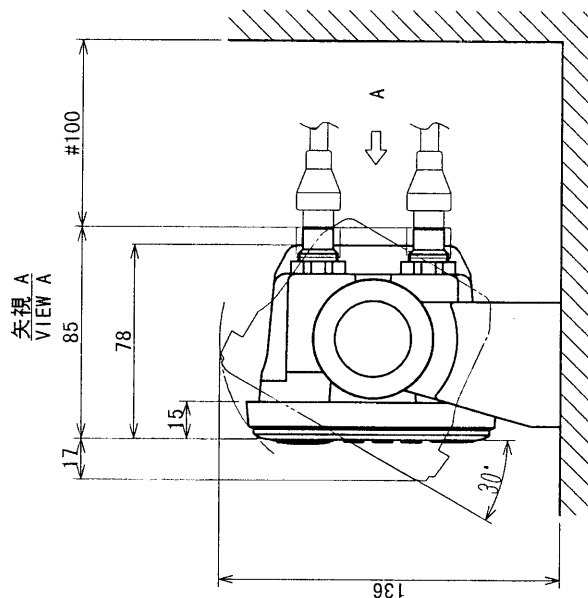

1) #印寸法は最小サービス空間寸法とする。

2) 指定外寸法公差は表 1 による。

3) 取付用ネジはトラスタッピングネジ5×20を使用のこと。



4) 装備ケータブルはサーブिस時、指示部を前方に十分引き出せるよう余裕を持たせること。

NOTE			
1. #: RECOMMENDED SERVICE CLEARANCE.			
2. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS.			
3. USE TAPPING SCREWS 5x20 FOR FIXING UNIT.			
4. KEEP ENOUGH CABLE LENGTH BEHIND UNIT.			

DRAWN		CHECKED		APPROVED		SCALE		MASS		DWG. No.		02-129-3000-G1	
Dec 1997 YAMADA		Dec 1997 KASUMI		Dec 1997 KASUMI		1/3		± 10% 0.60 kg		C2366-G05-A			

TITLE		FE-720	
名称		深度表示器 (卓上装備)	
		外寸図	
NAME		DEPTH INDICATOR (DESKTOP MOUNT)	
		OUTLINE DRAWING	

FURUNO ELECTRIC CO., LTD.

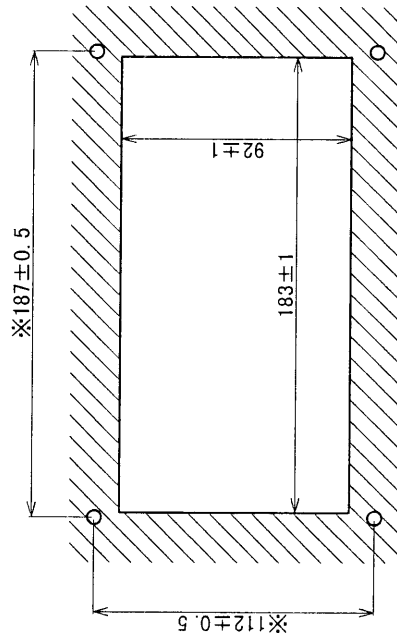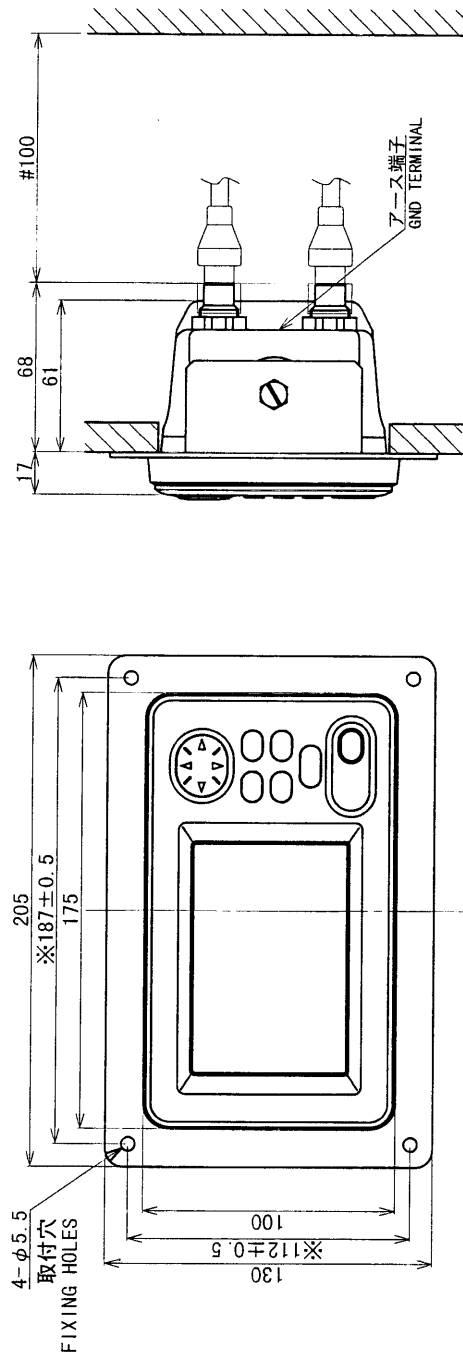

取付穴寸法図 (参考図)
CUTTING DIMENSIONS

- 注 記
- 1) #印寸法は最小サービスペース寸法とする。
 - 2) 指定外の寸法公差は表 1 による。
 - 3) 取付用ネジはトラスタピンネジ5×20を使用のこと。
 - 4) ※印寸法は取付穴位置寸法とする。

NOTE

1. #: RECOMMENDED SERVICE CLEARANCE.
2. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS.
3. USE TAPPING SCREWS 5x20 FOR FIXING UNIT.
4. ※: DIMENSION OF FIXING HOLES PITCH.




寸法区分 (mm) DIMENSION	公差 (mm) TOLERANCE
$L \leq 50$	± 1.5
$50 < L \leq 100$	± 2.5
$100 < L \leq 500$	± 3

表 1
TABLE 1

DRAWN	FE-720	TITLE	FE-720
CHECKED	FE-700	名称	深度表示器 (埋込装備 F)
APPROVED	FE-700	外寸図	
SCALE	1/3	NAME	DEPTH INDICATOR (FLUSH MOUNT F)
DWG. No.	C2366-G06-A	OUTLINE DRAWING	

寸法区分 (mm) DIMENSION	公差 (mm) TOLERANCE
$L \leq 50$	± 1.5
$50 < L \leq 100$	± 2.5
$100 < L \leq 500$	± 3

表 1
TABLE 1

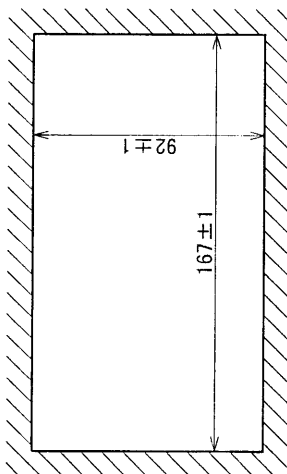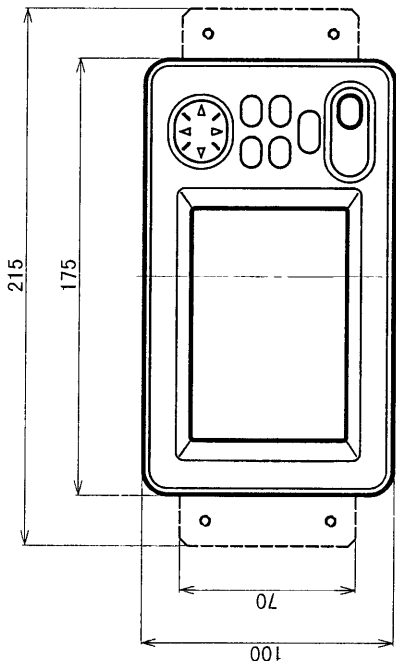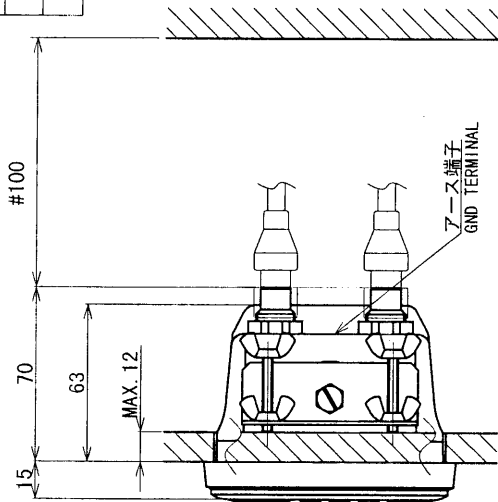

取付穴寸法図 (参考図)

CUTTING DIMENSIONS

注 記

- 1) # 印寸法は最小サービスペース寸法とする。
- 1) 指定外の寸法公差は表 1 による。


NOTE

1. #: RECOMMENDED SERVICE CLEARANCE.
1. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS.

DRAWN Dec 7, 99 T. Yamazaki	TITLE FE-720
CHECKED Dec 7, 99 K. Furukawa	名称 深度表示器 (埋込装備 S)
APPROVED Dec 7, 99 K. Furukawa	外寸図
SCALE 1/3 MASS ± 10% 0.55 kg	NAME DEPTH INDICATOR (FLUSH MOUNT S)
DWG. No. C2366-G07-A	OUTLINE DRAWING

表 1 TABLE 1



寸法区分 (mm) DIMENSION	公差 (mm) TOLERANCE
0 < L ≤ 50	±1.5
50 < L ≤ 100	±2.5
100 < L ≤ 500	±3

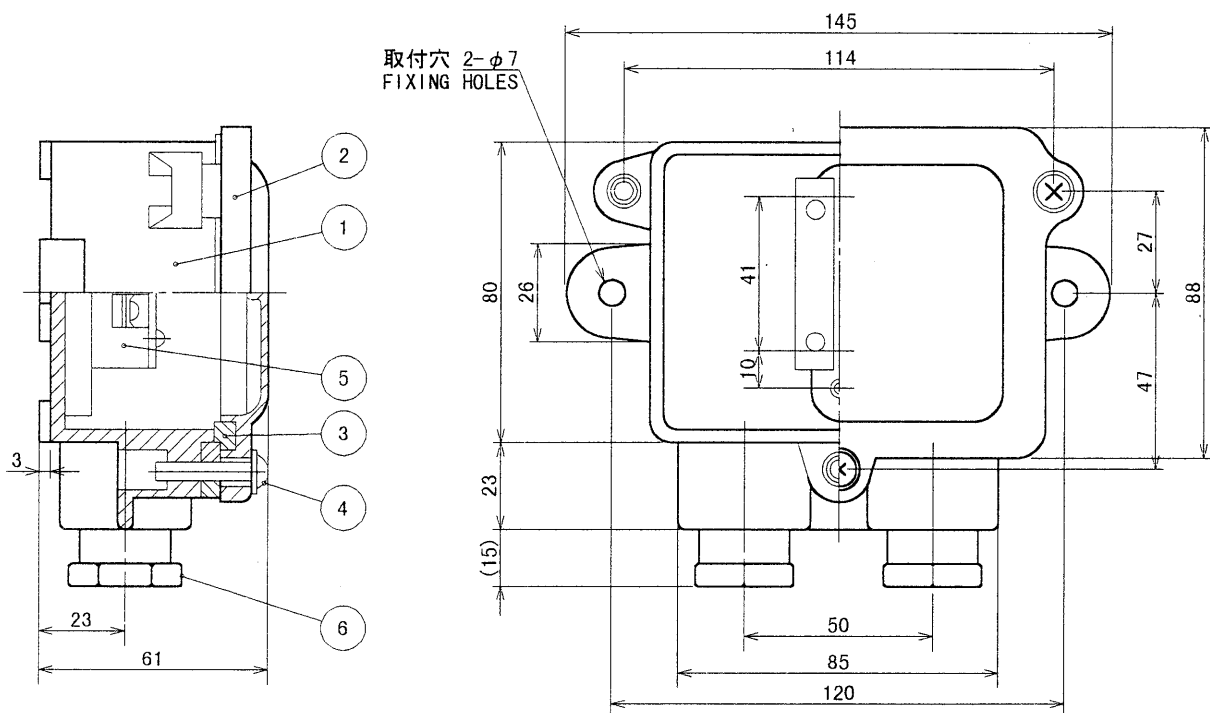

6	電線貫通金物 CABLE GLAND	P. B. T. 樹 脂 RESIN	2		JIS F8801-20
5	端子盤 TERMINAL BOARD		1		JIS F8812-020-3
4	締付ねじ CLAMPING SCREW	真 鍮 BRASS	3		
3	ガスケット GASKET	ネオプレン NEOPRENE	1		
2	蓋 COVER	P. B. T. 樹 脂 RESIN	1		
1	箱 体 BOX	P. B. T. 樹 脂 RESIN	1		
品番 ITEM	品 名 NAME	材 質 MATERIAL	数 量 Q'TY	図 番 DWG. NO.	摘 要 REMARKS

DRAWN
July 5 '00 T. YAMASAKI
CHECKED
July 6 '00 T. Kim
APPROVED
July 6 '00 T. Kim
SCALE 1/2 MASS ±10%
0.4 kg
DWG. No. C0002-G01- B

TITLE
JIS F8821-1
名称 防水型船用小型接続箱
外寸図
NAME
WATERTIGHT JUNCTION BOX
OUTLINE DRAWING

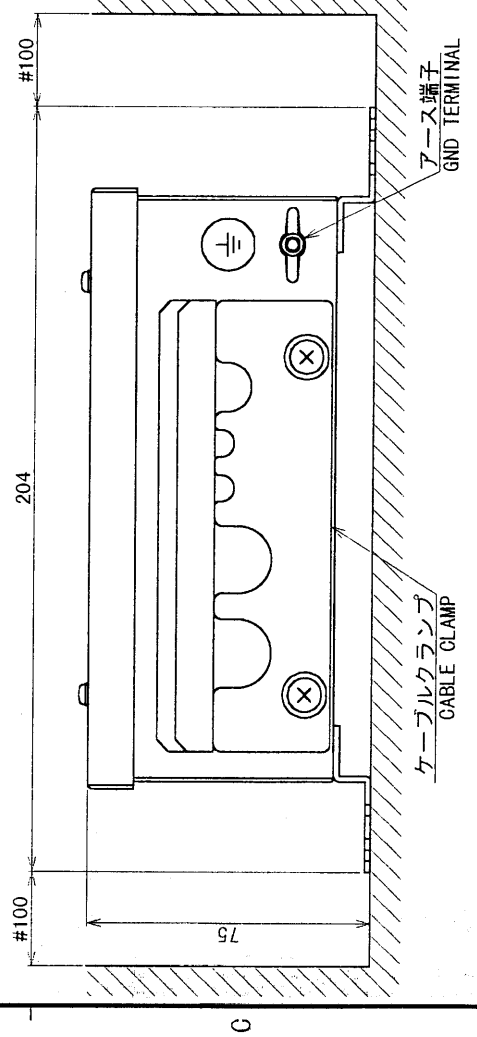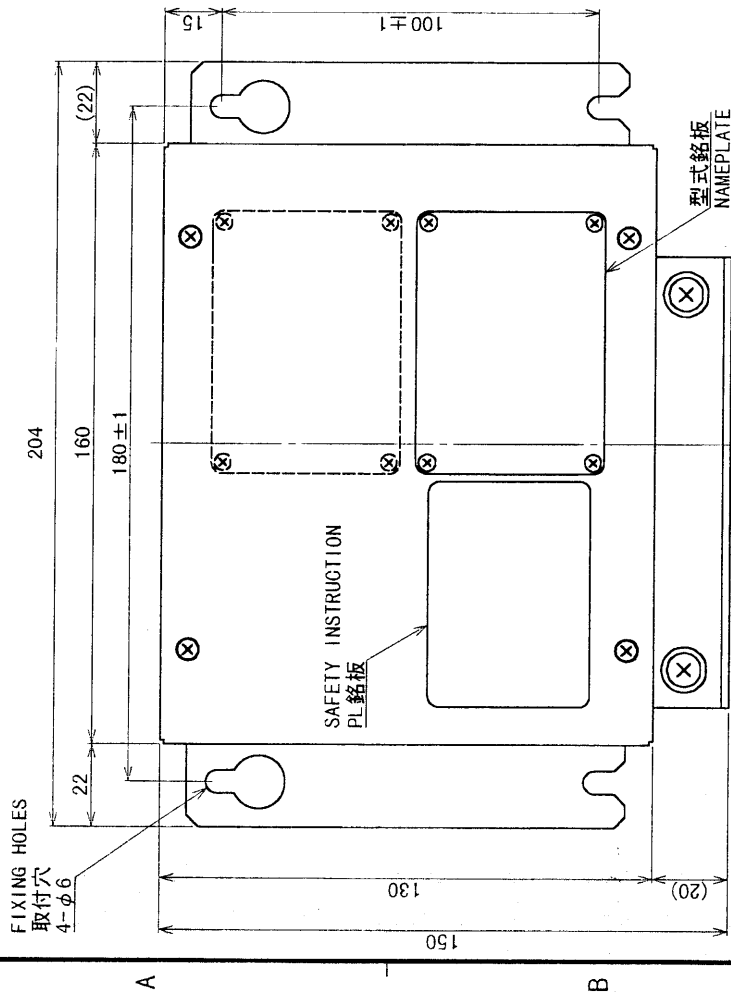


寸法区分 (mm) DIMENSION	公差 (mm) TOLERANCE
0 < L ≤ 50	± 1.5
50 < L ≤ 100	± 2.5
100 < L ≤ 500	± 3

表 1
TABLE 1

- 注 記
- 1) #印寸法は最小サービス空間寸法とする。
 - 2) 指定外の寸法公差は表 1 による。
 - 3) 取付用ネジはタッピングネジ呼び径 5 × 2.0 を使用のこと。
- NOTE
1. #: RECOMMENDED SERVICE CLEARANCE.
 2. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS.
 3. USE TAPPING SCREWS φ5x20 FOR FIXING UNIT.

DRAWN	DESIGNED	CHECKED	APPROVED	TITLE
Feb 22/00	Y. Yamashita	Y. Yamashita	Y. Yamashita	DS-802
名称				端子台箱
外寸図				外寸図
NAME				TERMINAL BOX
DWG. No.				66-072-7000-02
SCALE				1/2
MASS				1.1 kg
OUTLINE DRAWING				

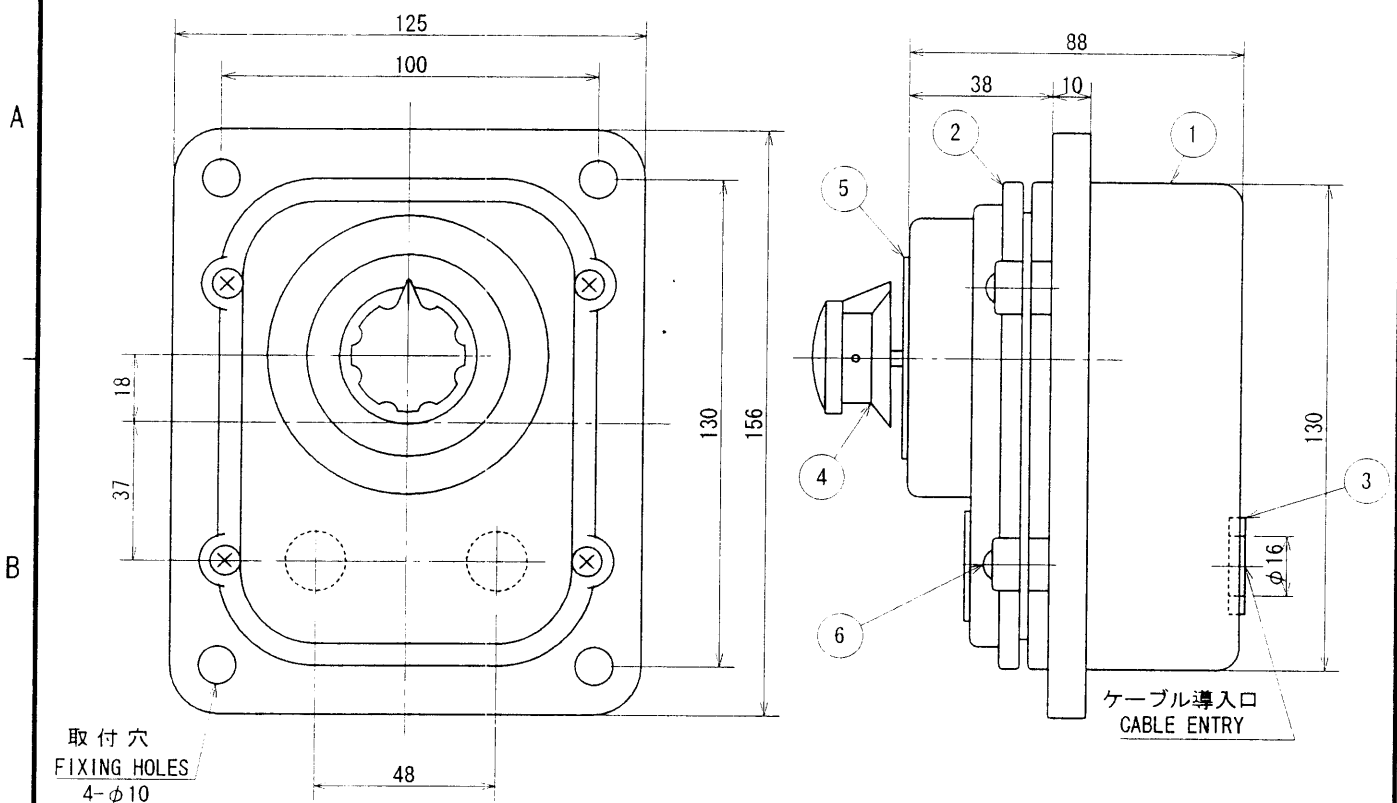

注記


1) 指定なき寸法公差は表 1 による。

NOTE

1. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS.

表 1 TABLE 1

寸法区分 (mm) DIMENSION	公差 (mm) TOLERANCE
$0 < L \leq 50$	± 1.5
$50 < L \leq 100$	± 2.5
$100 < L \leq 500$	± 3

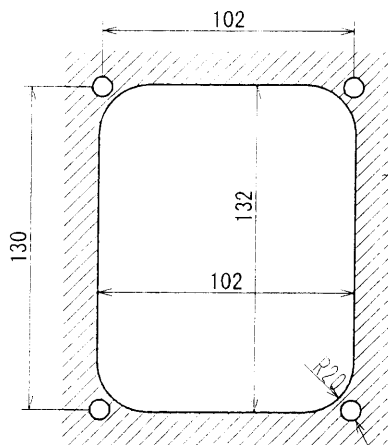

取付穴寸法 CUTOUT DIMENSIONS

縮尺 1/3
SCALE: 1/3

4-M8 取付穴 FIXING HOLES

6	取付ネジ SET SCREW	BSBM2	1		
5	銘板 NAMEPLATE	SUS	1		
4	ノブ KNOB		1		
3	ブッシュ BUSH	RUBBER	2		
2	フタ COVER	AC7AF	1		
1	体 BODY	AC7AF	1		
品番 ITEM	品名 NAME	材質 MATERIAL	数量 Q'TY	図番 DWG. No.	摘要 REMARKS

DRAWN
July 12 '00 T. AMASAKI
CHECKED
July 13 '00 Y. K
APPROVED
July 10 '00 Y. K
SCALE
1/2 MASS 1.2 kg
DWG. No.
C7213-027- F

TITLE
MF-22L-1
名称
調光器 (埋込型)
外寸図
NAME
DIMMER (FLUSH MOUNT)
OUTLINE DRAWING

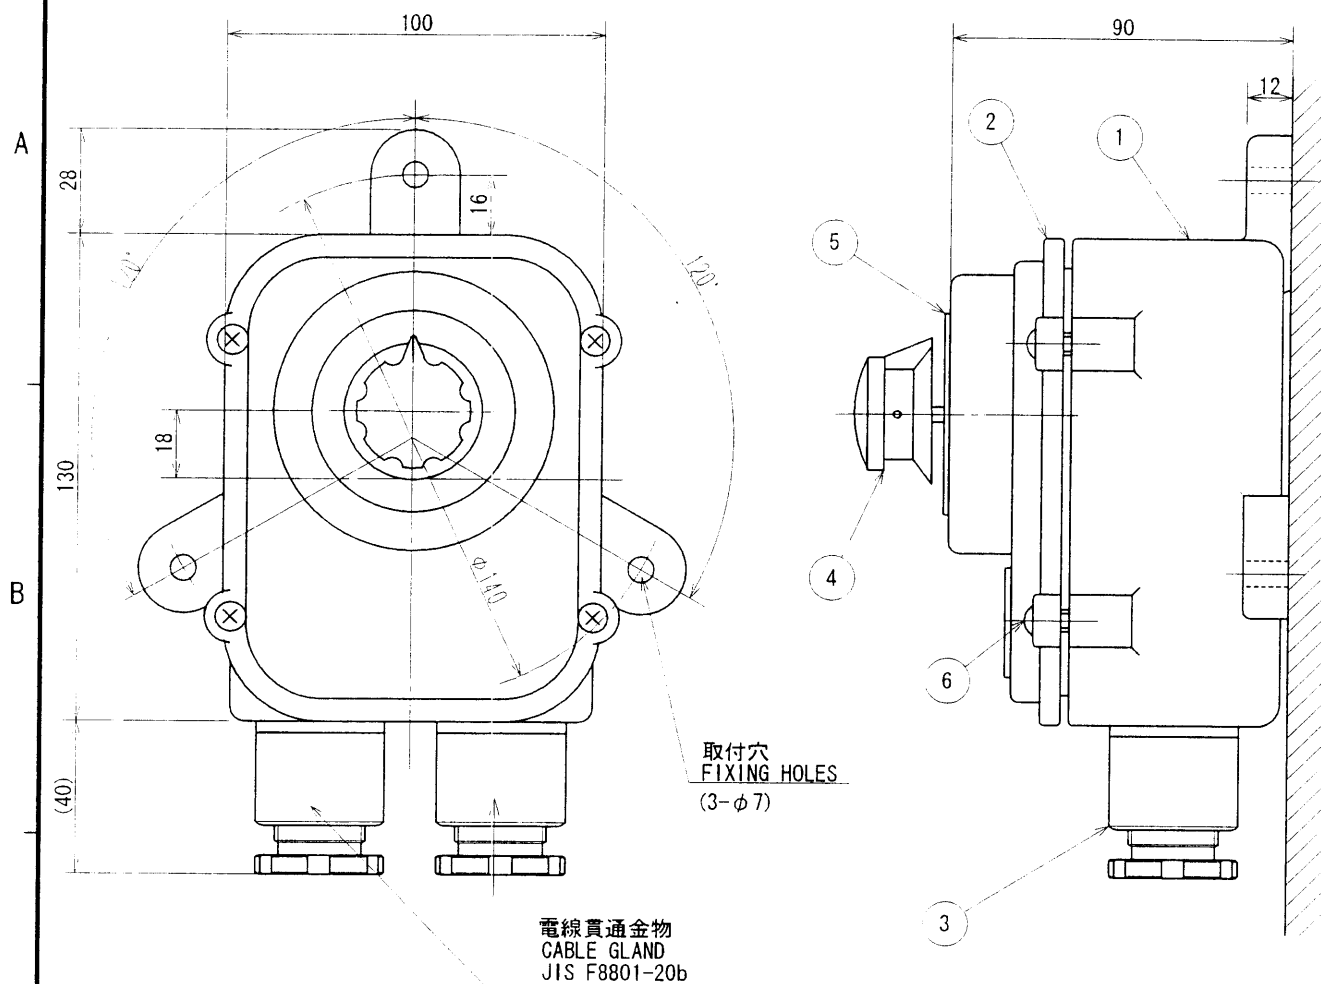


表 1 TABLE 1

寸法区分 (mm) DIMENSION	公差 (mm) TOLERANCE
$0 < L \leq 50$	± 1.5
$50 < L \leq 100$	± 2.5
$100 < L \leq 500$	$+3$

注記

1) 指定なき寸法公差は表 1 による。

NOTE

1. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS.

6	取付ネジ SET SCREW	BUBM2	1		
5	銘板 NAMEPLATE	SUS	1		
4	ノブ KNOB		1		
3	グランド GLAND	AC7AF	2	JIS F8801-20b	
2	フタ COVER	AC7AF	1		
1	本体 BODY	AC7AF	1		
品番 ITEM	品名 NAME	材質 MATERIAL	数量 Q'TY	図番 DWG. No.	摘要 REMARKS




DRAWN
July 12 '00 T. YAMASAKI
CHECKED
July 13 '00 Y. K. Kim
APPROVED
July 13 '00 Y. K. Kim
SCALE 1/2 MASS 1.3 kg
DWG. No. C7213-033- G

TITLE	MF-22L-2
名称	調光器 (壁掛型)
	外寸図
NAME	DIMMER (BULKHEAD MOUNT)
	OUTLINE DRAWING

	D-13
周 波 数 FREQUENCY	200 kHz

表 2 (Table 2)

寸法区分 (mm) Dimension	公差 (mm) Tolerance
L ≤ 50	± 1.5
50 < L ≤ 100	± 2.5
100 < L ≤ 500	± 3

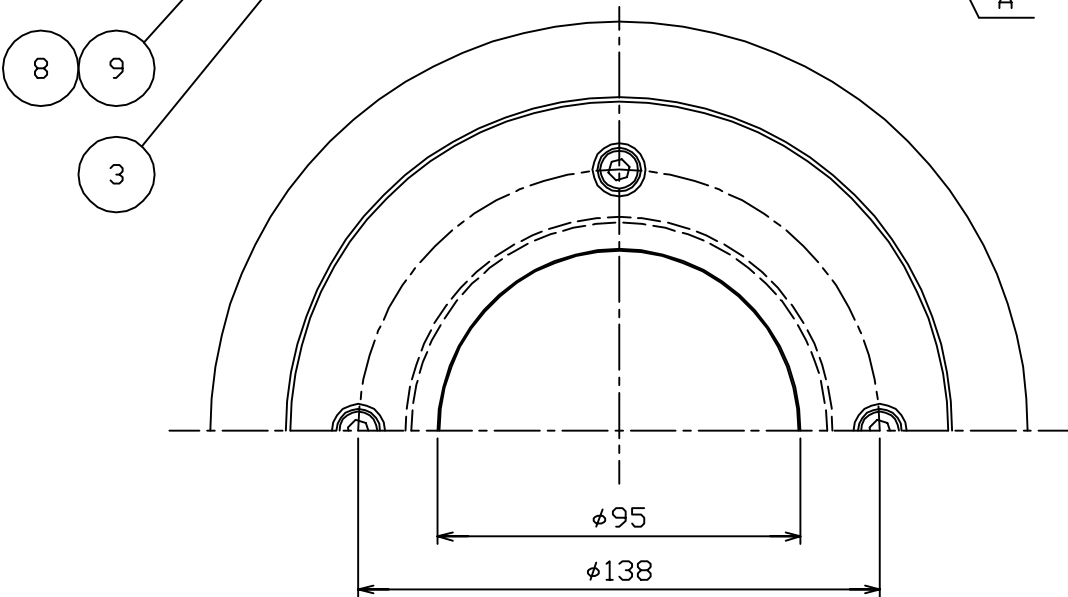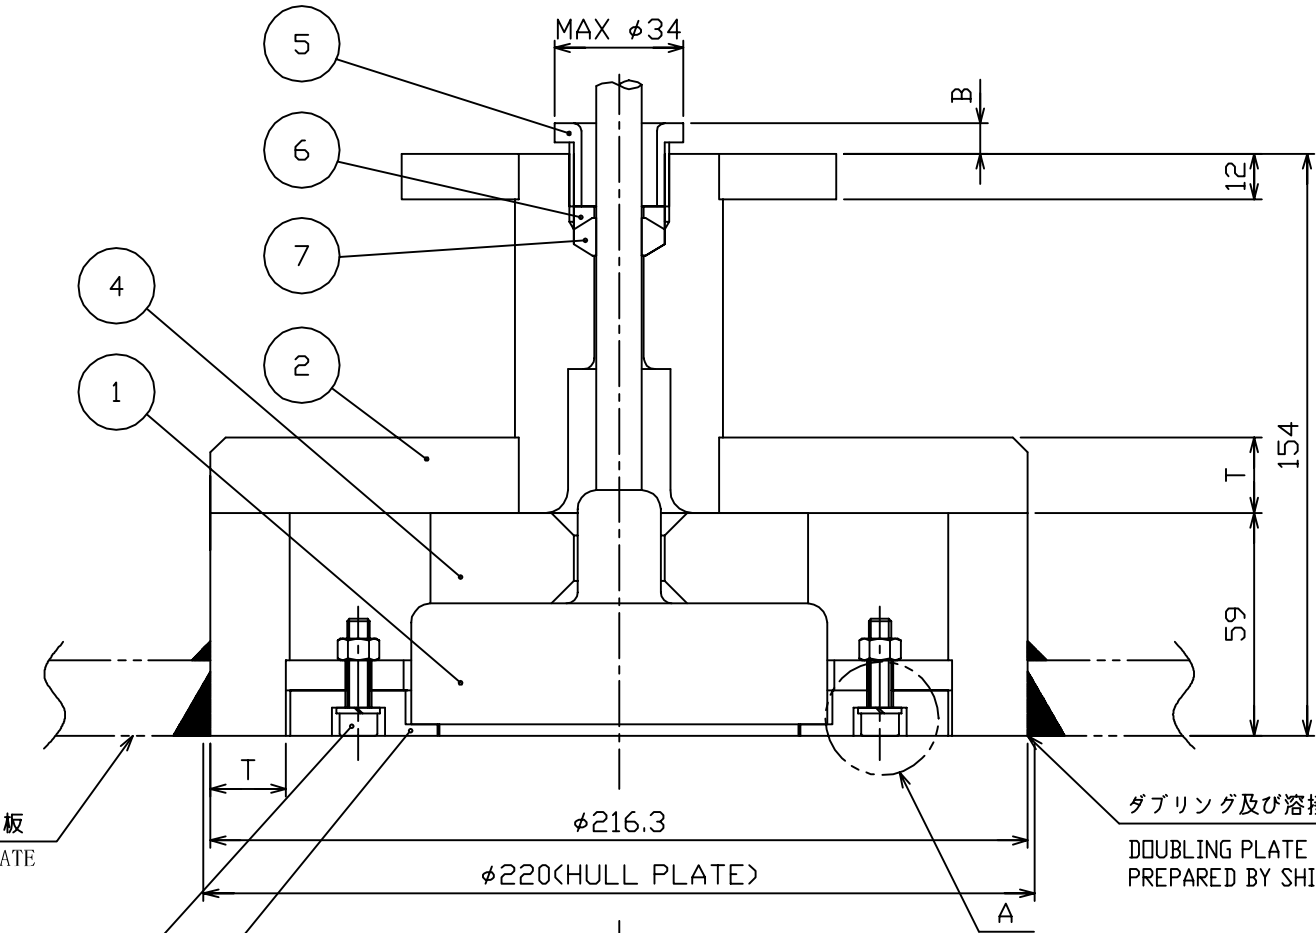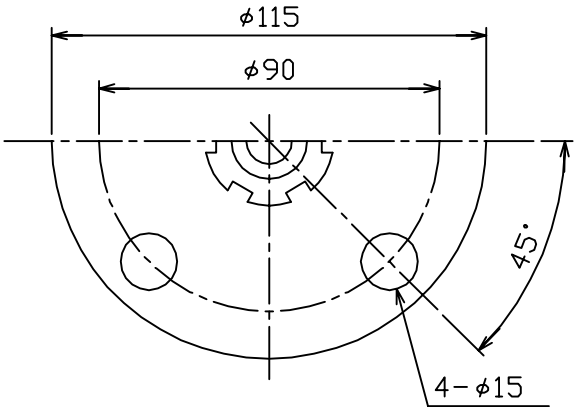

- 注記: 1. タンク下面是船底板と面一とし、船底板より凹まないように装備してください。
2. 船底板とタンクを溶接する際は、(2)タンク本体溶接部分の表面処理を剝がし、歪み防止のため (1)送受波器ノ(4)押えゴムノ(7)ゴムパッキンを取り外し、“(3)取付フランジ”を必ず取付けて 施行してください。
3. タンクの材質はNK (日本海事協会) 規格のKSTPG370です。その科学成分を表1に示します。
4. タンクはダクロダイズド処理を行っています。
塗料との密着性を向上させる為、エポキシ系ジョッ ププライマーを塗布されるのが最適です。
5. 塗装する際は、送受波器面を塗装しないように注意してください。
6. (5)締付けグラントは、図中B寸法が7.5~7.0mmになるように締め付けてください。
7. 送受波器取付け後、A部および(2)タンク本体と(3)取付フランジの隙間をシリコン等 で埋めてください。
8. 指定外の寸法公差は、表2の通りです。

- NOTE: 1. THE TRANSDUCER TANK SHOULD BE WELDED FLUSH WITH SHIP'S HULL PLATE.
2. SCRAPE OFF SURFACE PLATING OF WELDING PART OF CASING (2) BEFORE WELDING. TO AVOID DISTORTION BY HEAT, PUT "FIXING FLANGE (3)" WITHOUT TRANSDUCER (1), DAMPER (4) AND GASKET (7) ONTO CASING (2) WHILE WELDING.
3. MATERIAL OF TANK MEETS NK (NIPPON KAIJI KYOUKAI) STANDARD KSTPG370. TABLE 1 INDICATES THE COMPOSITION OF KSPTG370.
4. THE TRANSDUCER TANK IS FINISHED BY ZINC FLAKE CHROMATED DISPERSION COATING. IT IS RECOMMENDED TO PAINT THE TANK WITH EPOKY SHOP PRIMER.
5. DO NOT PAINT TRANSDUCER FACE.
6. TIGHTEN GLAND NUT (5) SO THAT DIMENSION 'B' IS BETWEEN 7.0 mm AND 7.5 mm.
7. FILL THE SPACE OF POSITION 'A' AND THE GAP BETWEEN CASING (2) AND FIXING FLANGE (3) WITH SILICONE AFTER MOUNTING THE TRANSDUCER.
8. TABLE 2 INDICATES TOLERANCE VALUE WHERE NOT SPECIFIED.

表 1 (Table 1)


化学成分 Chemical Composition	C	Si	Mn	P	S	Cr	Mo
含有量(%) Content(%)	0.25以下 or less	0.35以下 or less	0.30~0.90	0.040以下 or less	0.040以下 or less	なし Nil	なし Nil

9	バネ座金 SPRING WASHER	SUS316L	4	M6	
8	六角穴付きボルト HEX.S.H.C.SCREW	SUS316L	4	M6×25	
7	ゴムパッキン GASKET	CR	1	TPB-11-08	
6	座金 WASHER	C3604B	1	TPB-11-07	
5	締付けグラント GLAND NUT	C3604B	1	JIS F8801 20 1a	
4	押えゴム DAMPER	CR	1	TTF-2000-03	
3	取付フランジ FIXING FLANGE	SUS316L	1	TTF-2000-12	
2	タンク本体 CASING	KSTPG370	1	TTF-2000-01	船級認定材 CLASSIFICATION SOCIETY APPROVED MATERIAL
1	送受波器 TRANSDUCER		1	200B-8B	本体質量に含まず。 NOT INCLUDED MASS.

品番 ITEM	品 名 NAME	材 質 MATERIAL	数 量 Q' TY	図 番 DWG.NO.	摘 要 REMARKS
DRAWN	JUNE 29, '04 E. MIYOSHI			TITLE	TTF-2000
CHECKED	TAKAHASHI, T			名称	送受波器(200kHz)タンク
APPROVED	Y. Hatai				送受波器装備図
SCALE	1/2	MASS	kg	NAME	TRANSDUCER (200 kHz) TANK
DWG No.	C2001-332-U	02-TTF-200G-5			TRANSDUCER INSTALLATION

表 2 (Table 2)

寸法区分 (mm) Dimensions	公差 (mm) Tolerance
L ≤ 50	± 1.5
50 < L ≤ 100	± 2.5
100 < L ≤ 500	± 3

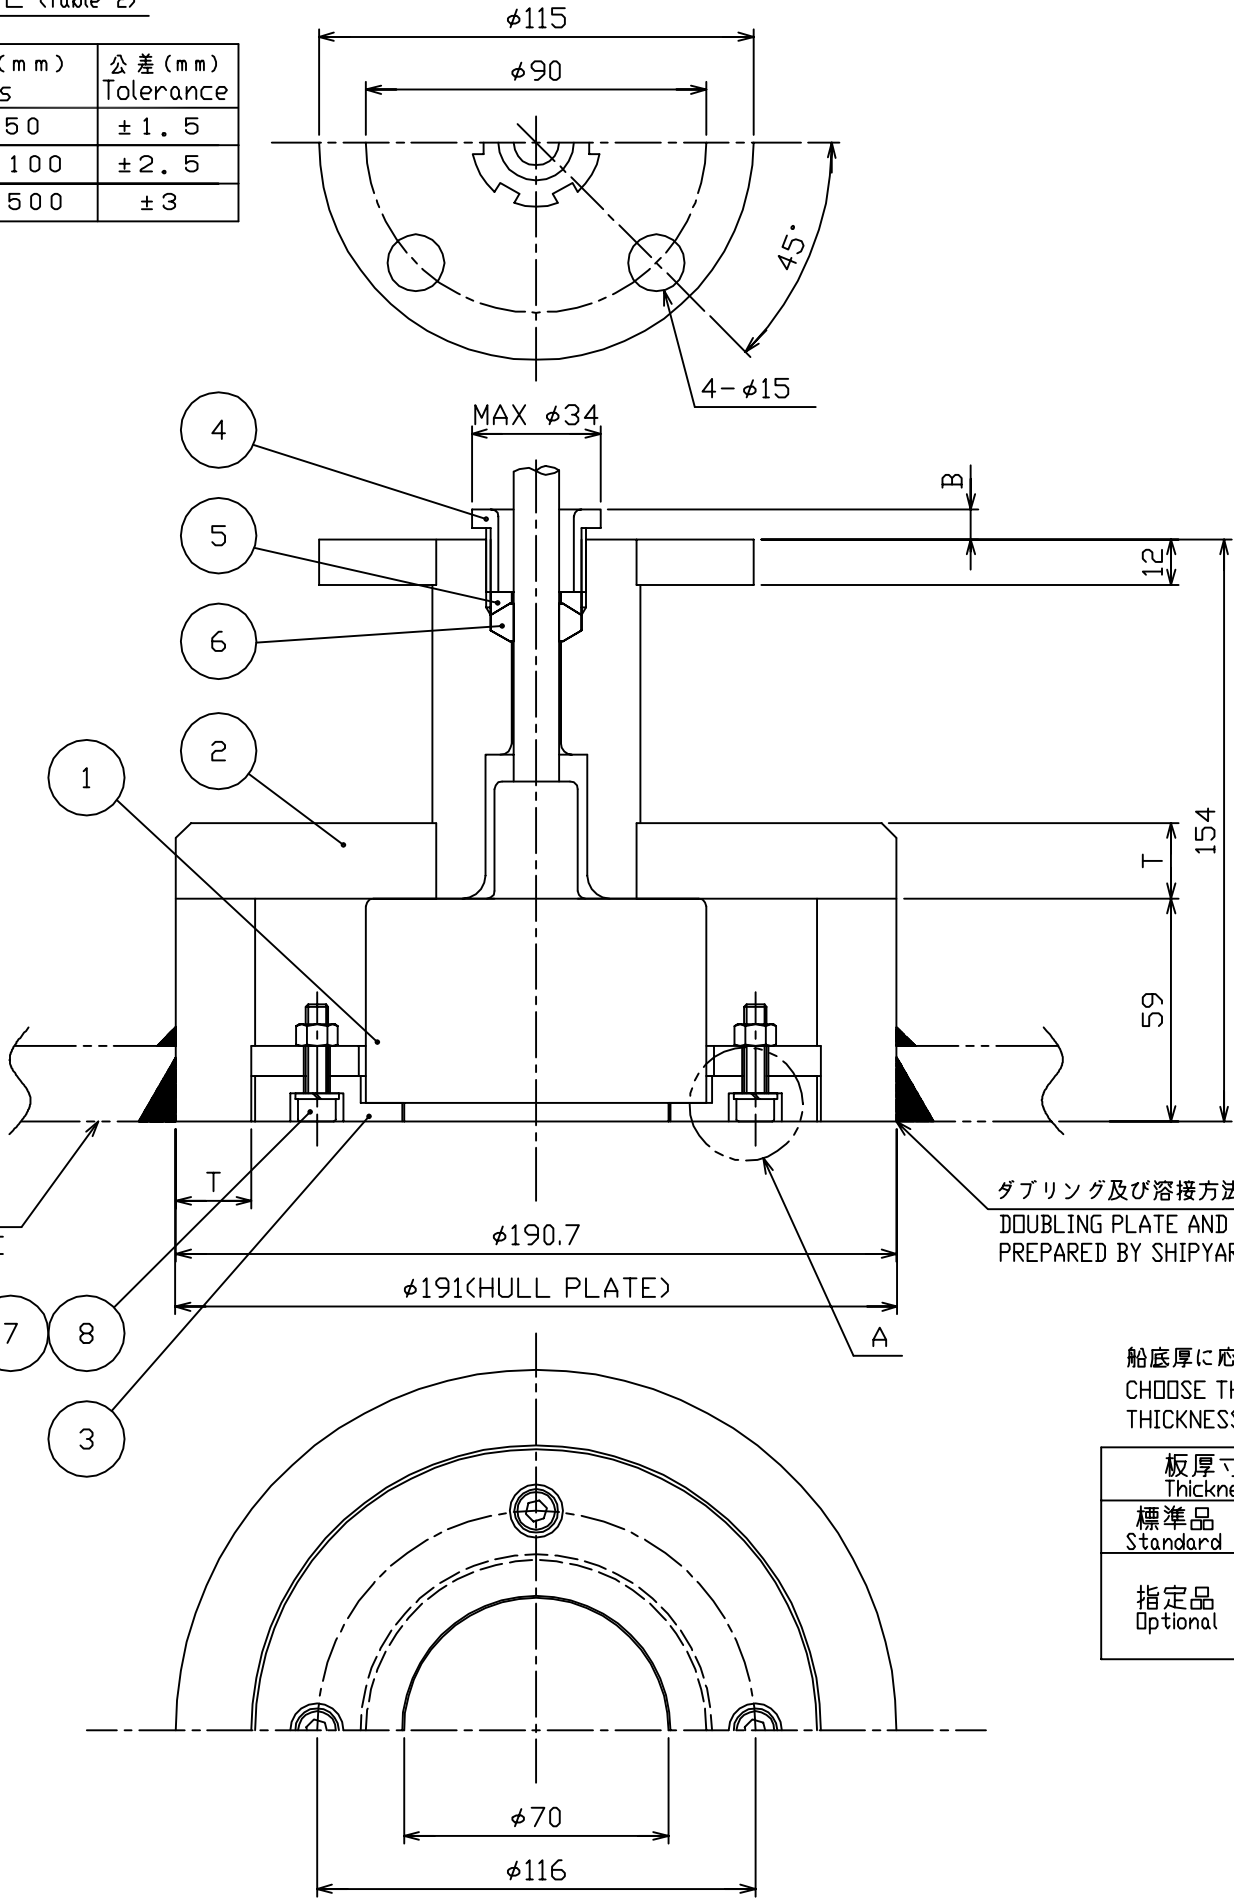

- 注記: 1. タンク下面は船底板と面一とし、船底板より凹まないように装備してください。
2. 船底板とタンクを溶接する際は、(2)タンク本体溶接部分の表面処理を剥がし、歪み防止のため(1)送受波器/(6)ゴムパッキンを取り外し、(3)取付フランジを必ず取付けて施行してください。
3. タンクの材質はNK (日本海事協会) 規格のKSTPG370です。その化学成分を表1に示します。
4. タンクはダクロダイズド処理を行っています。
塗料との密着性を向上させる為、エポキシ系ショップライマーを塗布されるのが最適です。
5. 塗装する際は、送受波器面を塗装しないように注意してください。
6. (4)締付けグラントは、図中B寸法が7.5~7.0mmになるように締め付けてください。
7. 送受波器取付け後、A部および(2)タンク本体と(3)取付フランジの隙間をシリコン等で埋めてください。
8. 指定外の寸法公差は、表2の通りです。

- NOTE: 1. THE TRANSDUCER TANK SHOULD BE WELDED FLUSH WITH SHIP'S HULL PLATE.
2. SCRAPE OFF SURFACE PLATING OF WELDING PART OF CASING (2) BEFORE WELDING. TO AVOID DISTORTION BY HEAT, PUT "FIXING FLANGE (3)" WITHOUT TRANSDUCER (1), GASKET (6) ONTO CASING (2) WHILE WELDING.
3. MATERIAL OF TANK MEETS NK (NIPPON KAIJI KYOUKAI) STANDARD KSTPG370. TABLE 1 INDICATES THE COMPOSITION OF KSPTG370.
4. THE TRANSDUCER TANK IS FINISHED BY ZINC FLAKE CHROMATED DISPERSION COATING. IT IS RECOMMENDED TO PAINT THE TANK WITH EPOKY SHOP PRIMER.
5. DO NOT PAINT TRANSDUCER FACE.
6. TIGHTEN GLAND NUT (4) SO THAT DIMENSION 'B' IS BETWEEN 7.0 mm AND 7.5 mm.
7. FILL THE SPACE OF POSITION 'A' AND THE GAP BETWEEN CASING (2) AND FIXING FLANGE (3) WITH SILICONE AFTER MOUNTING THE TRANSDUCER.
8. TABLE 2 INDICATES TOLERANCE VALUE WHERE NOT SPECIFIED.

表 1 (Table 1)


化学成分 Chemical Composition	C	Si	Mn	P	S	Cr	Mo
含有量(%) Content(%)	0.25以下 or less	0.35以下 or less	0.30~0.90	0.040以下 or less	0.040以下 or less	なし Nil	なし Nil

船底厚に応じて板厚Tを選択ください
CHOOSE THICKNESS "T" ACCORDING TO THICKNESS OF HULL

板厚寸法 (mm) Thickness	本体質量 (kg) MASS of TANK
標準品 Standard	T = 20 18
指定品 Optional	T = 12 15
	T = 25 20

8	バネ座金 SPRING WASHER	SUS316L	4	M6	
7	六角穴付きボルト HEX.S.H.C.SCREW	SUS316L	4	M6×25	
6	ゴムパッキン GASKET	CR	1	TPB-11-08	
5	座金 WASHER	C3604B	1	TPB-11-07	
4	締付けグラント GLAND NUT	C3604B	1	JIS F8801 20 1a	
3	取付フランジ FIXING FLANGE	SUS316L	1	TTF-5600-02	
2	タンク本体 CASING	KSTPG370	1	TTF-5600-01	
1	送受波器 TRANSDUCER		1	50B-6B	本体質量に含まず。 NOT INCLUDED MASS.
品番 ITEM	品名 NAME	材質 MATERIAL	数量 Q'TY	図番 DWG.NO.	摘要 REMARKS

DRAWN	JUNE 29, '04 E. MIYOSHI	TITLE	TTF-5600
CHECKED	TAKAHASHI, T	名称	送受波器(50kHz)タンク
APPROVED	Y. Hatai		送受波器装備図
SCALE	1/2 MASS kg	NAME	TRANSDUCER (50 kHz) TANK
DWG No.	C2001-362-U		TRANSDUCER INSTALLATION

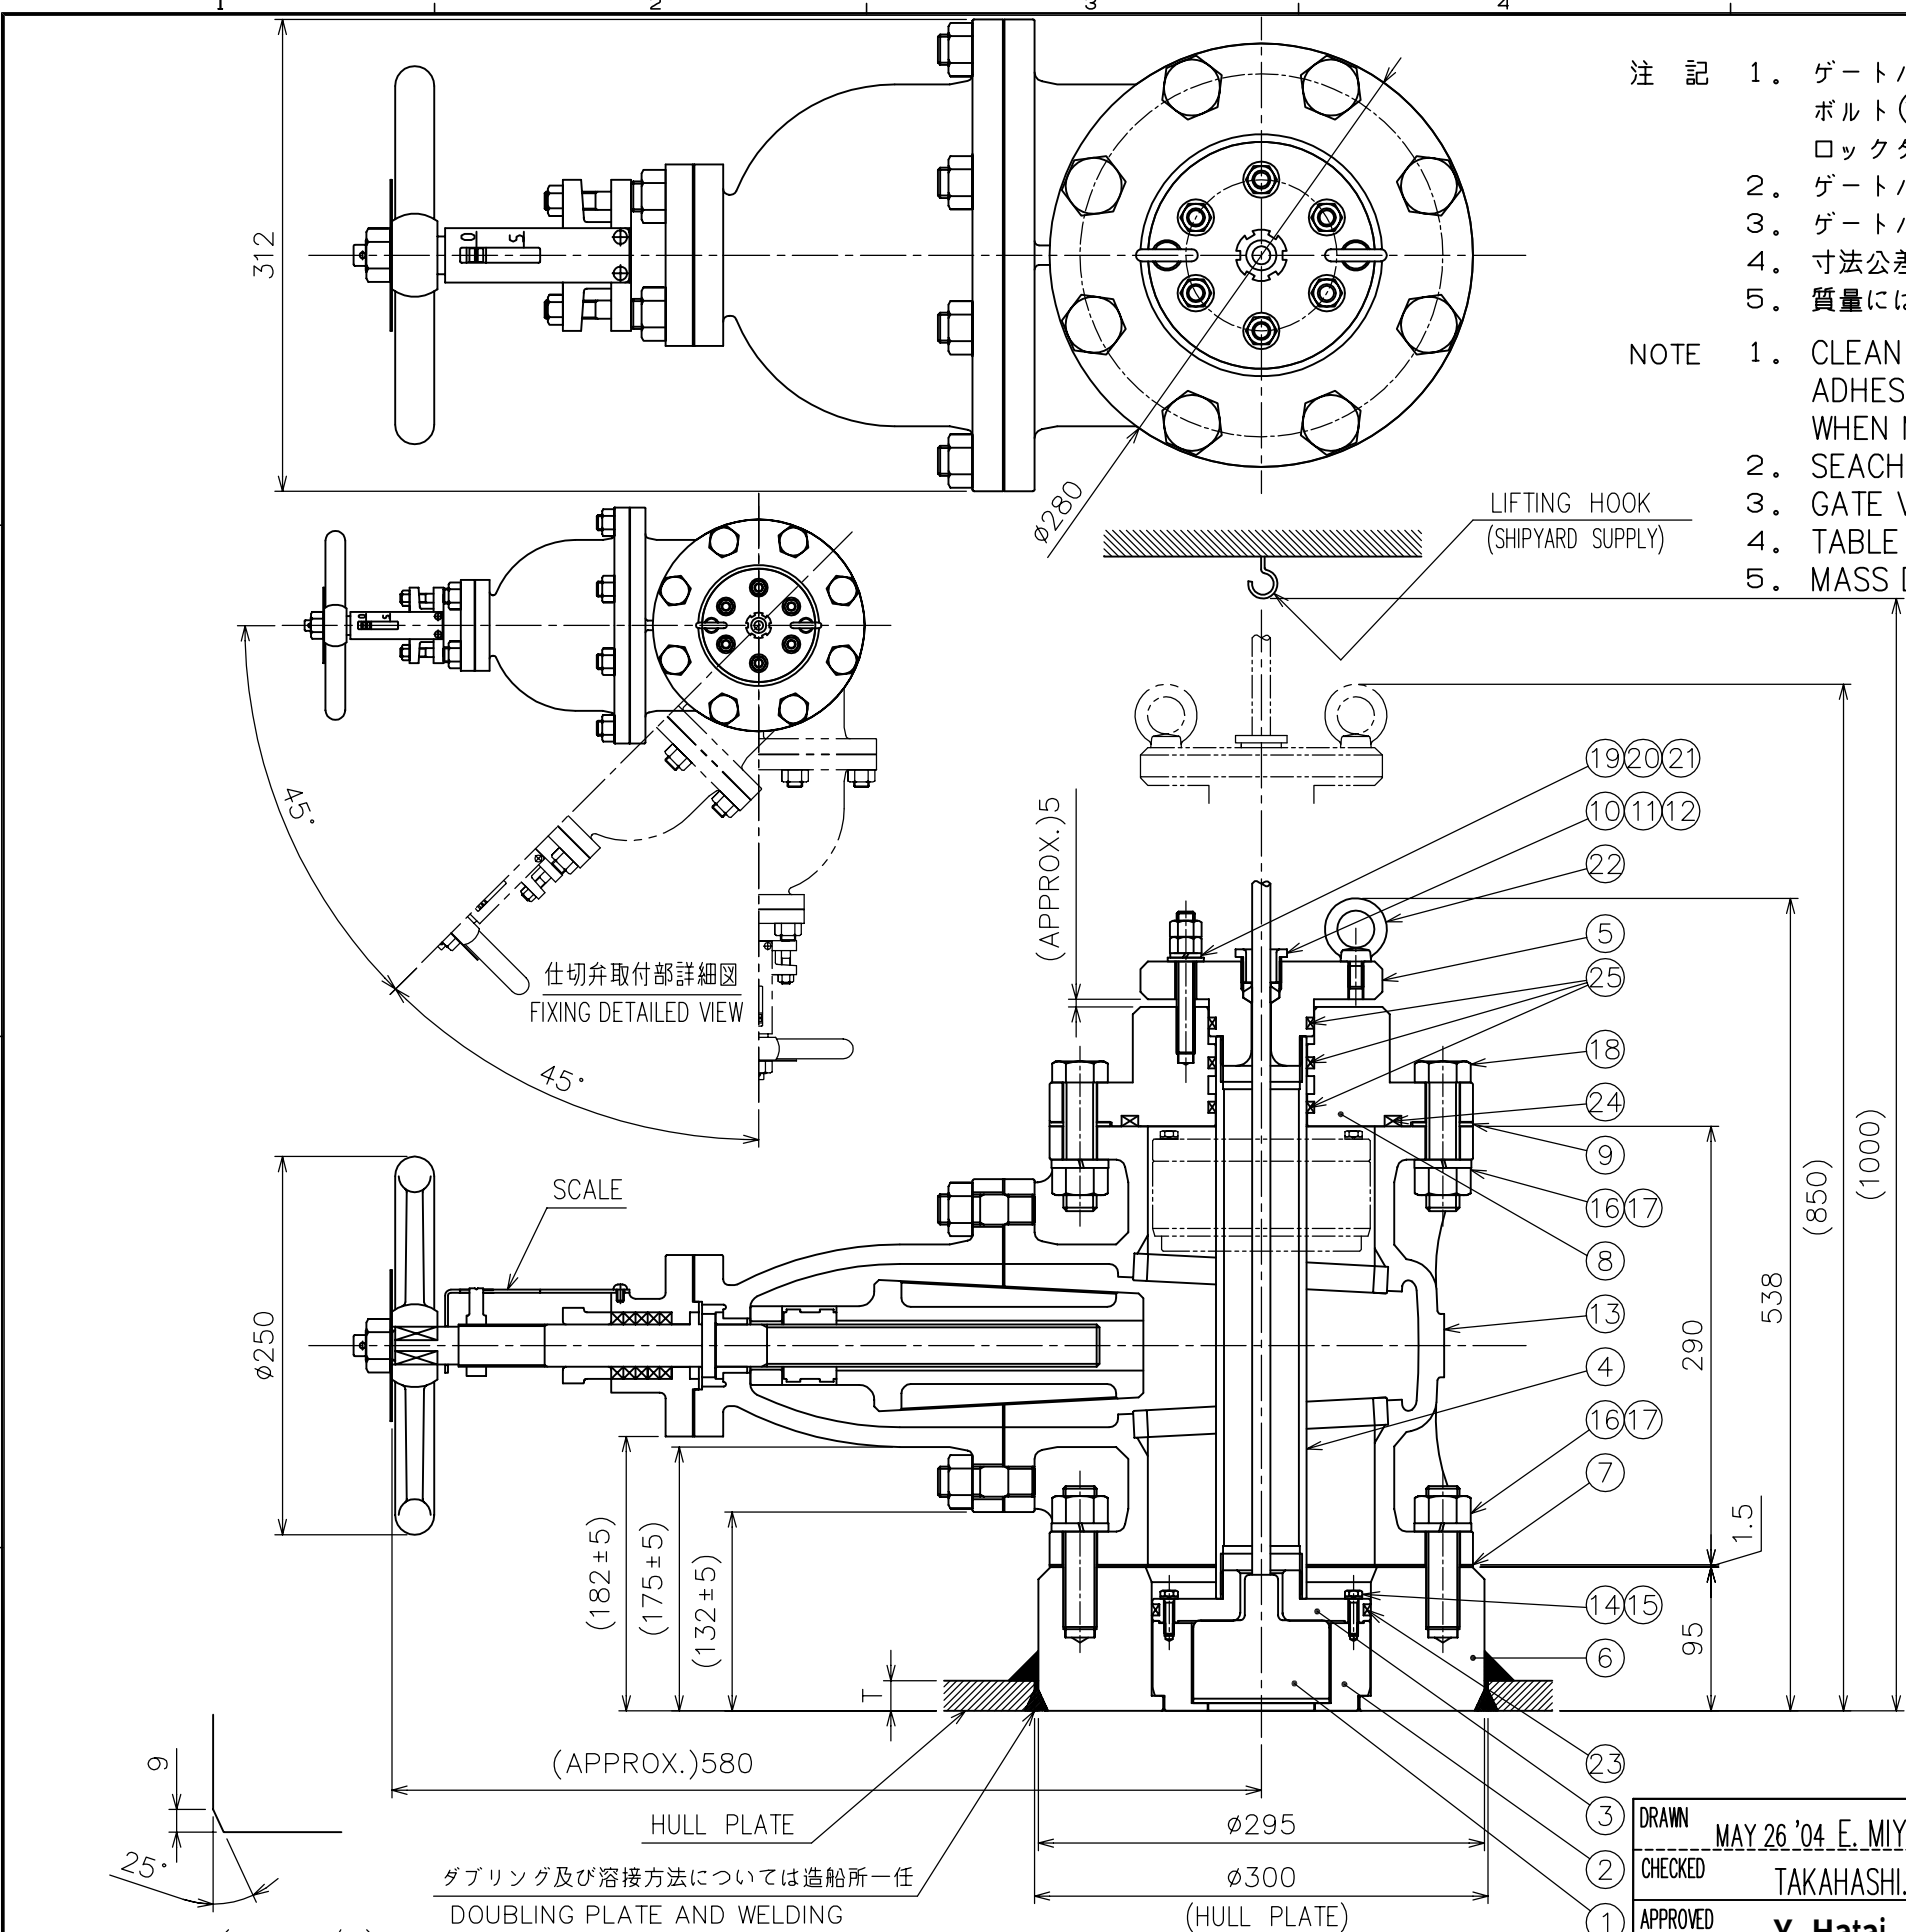

- 注 記
- ゲートバルブ ⑬を取付ける際はナット⑯の回り止め対策として、ボルト⑱、寸切りボルト(⑥に付属)およびナット⑯を脱脂後、ロックタイト#271をして塗布して完全に締めてください。
 - ゲートバルブ部以外の部分は $4.9 \times 10^5 \text{Pa}$ の水圧試験がされています。
 - ゲートバルブ ⑬は 45° ピッチで任意の方向に取付け可能です。
 - 寸法公差は表1の通りです。
 - 質量には送受波器①を含みません。

- NOTE
- CLEAN NUTS⑯AND BOLTS WITH SOLVENT, COAT THEIR THREADS WITH ADHESIVE/SEALANT (LOCTITE#271) AND THEN TIGHTEN THEM SECURELY WHEN MOUNTING GATE VALVE ⑬.
 - SEACHEST EXCEPT GATE VALVE IS TESTED UNDER $4.9 \times 10^5 \text{Pa}$ WATER PRESSURE.
 - GATE VALVE ⑬CAN BE ATTACHED IN THE ANY DIRECTION IN INCREMENT OF 45° .
 - TABLE 1 INDICATES TOLERANCE OF DIMENSIONS.
 - MASS DOES NOT INCLUDE TRANSDUCER①.

表 1 (Table 1)


寸法区分(mm) DIMENSIONS	公差(mm) TOLERANCE
$L \leq 50$	± 1.5
$50 < L \leq 100$	± 2.5
$100 < L \leq 500$	± 3
$500 < L \leq 1000$	± 4

25	O-RING	NBR	3	JIS B2401 P60	
24	O-RING	NBR	1	JIS B2401 P170	
23	O-RING	NBR	1	JIS B2401 P135	
22	EYEBOLT	M10	SUS304	2	
21	FLAT WASHER	M12	SUS316L	6	
20	SPRING WASHER	M12	SUS316L	6	
19	NUT	M12	SUS316L	12	
18	BOLT	M22×85	SUS316L	8	
17	SPRING WASHER	M22	SUS316L	16	
16	NUT	M22	SUS316L	16	
15	SPRING WASHER	M6	SUS316L	6	
14	BOLT	M6×25	SUS316L	6	
13	GATE VALVE $9.8 \times 10^5 \text{Pa}$ ZINC RICH PRIMER	SC480	1	02-129-6311	CLASSIFIATION SOCIETY APPROVED
12	WASHER	C3604B	1	TPB-11-07	
11	PACKING	CR	1	TPB-11-08	
10	GRAND	C3604B	1	JIS F8801 20 1a	
9	GASKET2	CR	1	02-129-6308	
8	SEACHEST CAP ZINC RICH PRIMER	KA HIGH TENSILE STRENGTH STEEL	1	02-129-6307	CLASSIFICATION SOCIETY APPROVED MATERIAL
7	GASKET1	JOINT SHEET	1	02-129-6306	T/#1995 t=1.5mm
6	SPACER ZINC RICH PRIMER	KA HIGH TENSILE STRENGTH STEEL	1	02-129-6305	CLASSIFICATION SOCIETY APPROVED MATERIAL
5	FLANGE2	SUS316L	1	02-129-6304	
4	SHAFT	SUS316LTP	1	02-129-6303	
3	FLANGE1	SUS316L	1	02-129-6302	
2	TRANSDUCER CASE	SUS316L	1	02-129-6301	
1	TRANSDUCER		1		50B-6B
品番 ITEM	品 名 NAME	材 質 MATERIAL	数量 Q'TY	図 番 DWG.NO.	摘 要 REMARKS

開先詳細図(尺度 1/3)
GROOVE DETAIL VIEW
SCALE: 1/3

ダブリング及び溶接方法については造船所一任
DOUBLING PLATE AND WELDING
PREPARED BY SHIPYARD.

DRAWN		MAY 26 '04 E. MIYOSHI				TITLE		GV-50B-6B	
CHECKED		TAKAHASHI. T				名 称		ゲートバルブ	
APPROVED		Y. Hatai		FE-700 (50K)				送受波器装備図	
SCALE		1/5		MASS 170 ±10% kg		NAME		GATE VALVE	
DWG.No.		C2366-T01- B		02-129-630G-1				TRANSDUCER INSTALLATION DRAWINGS	

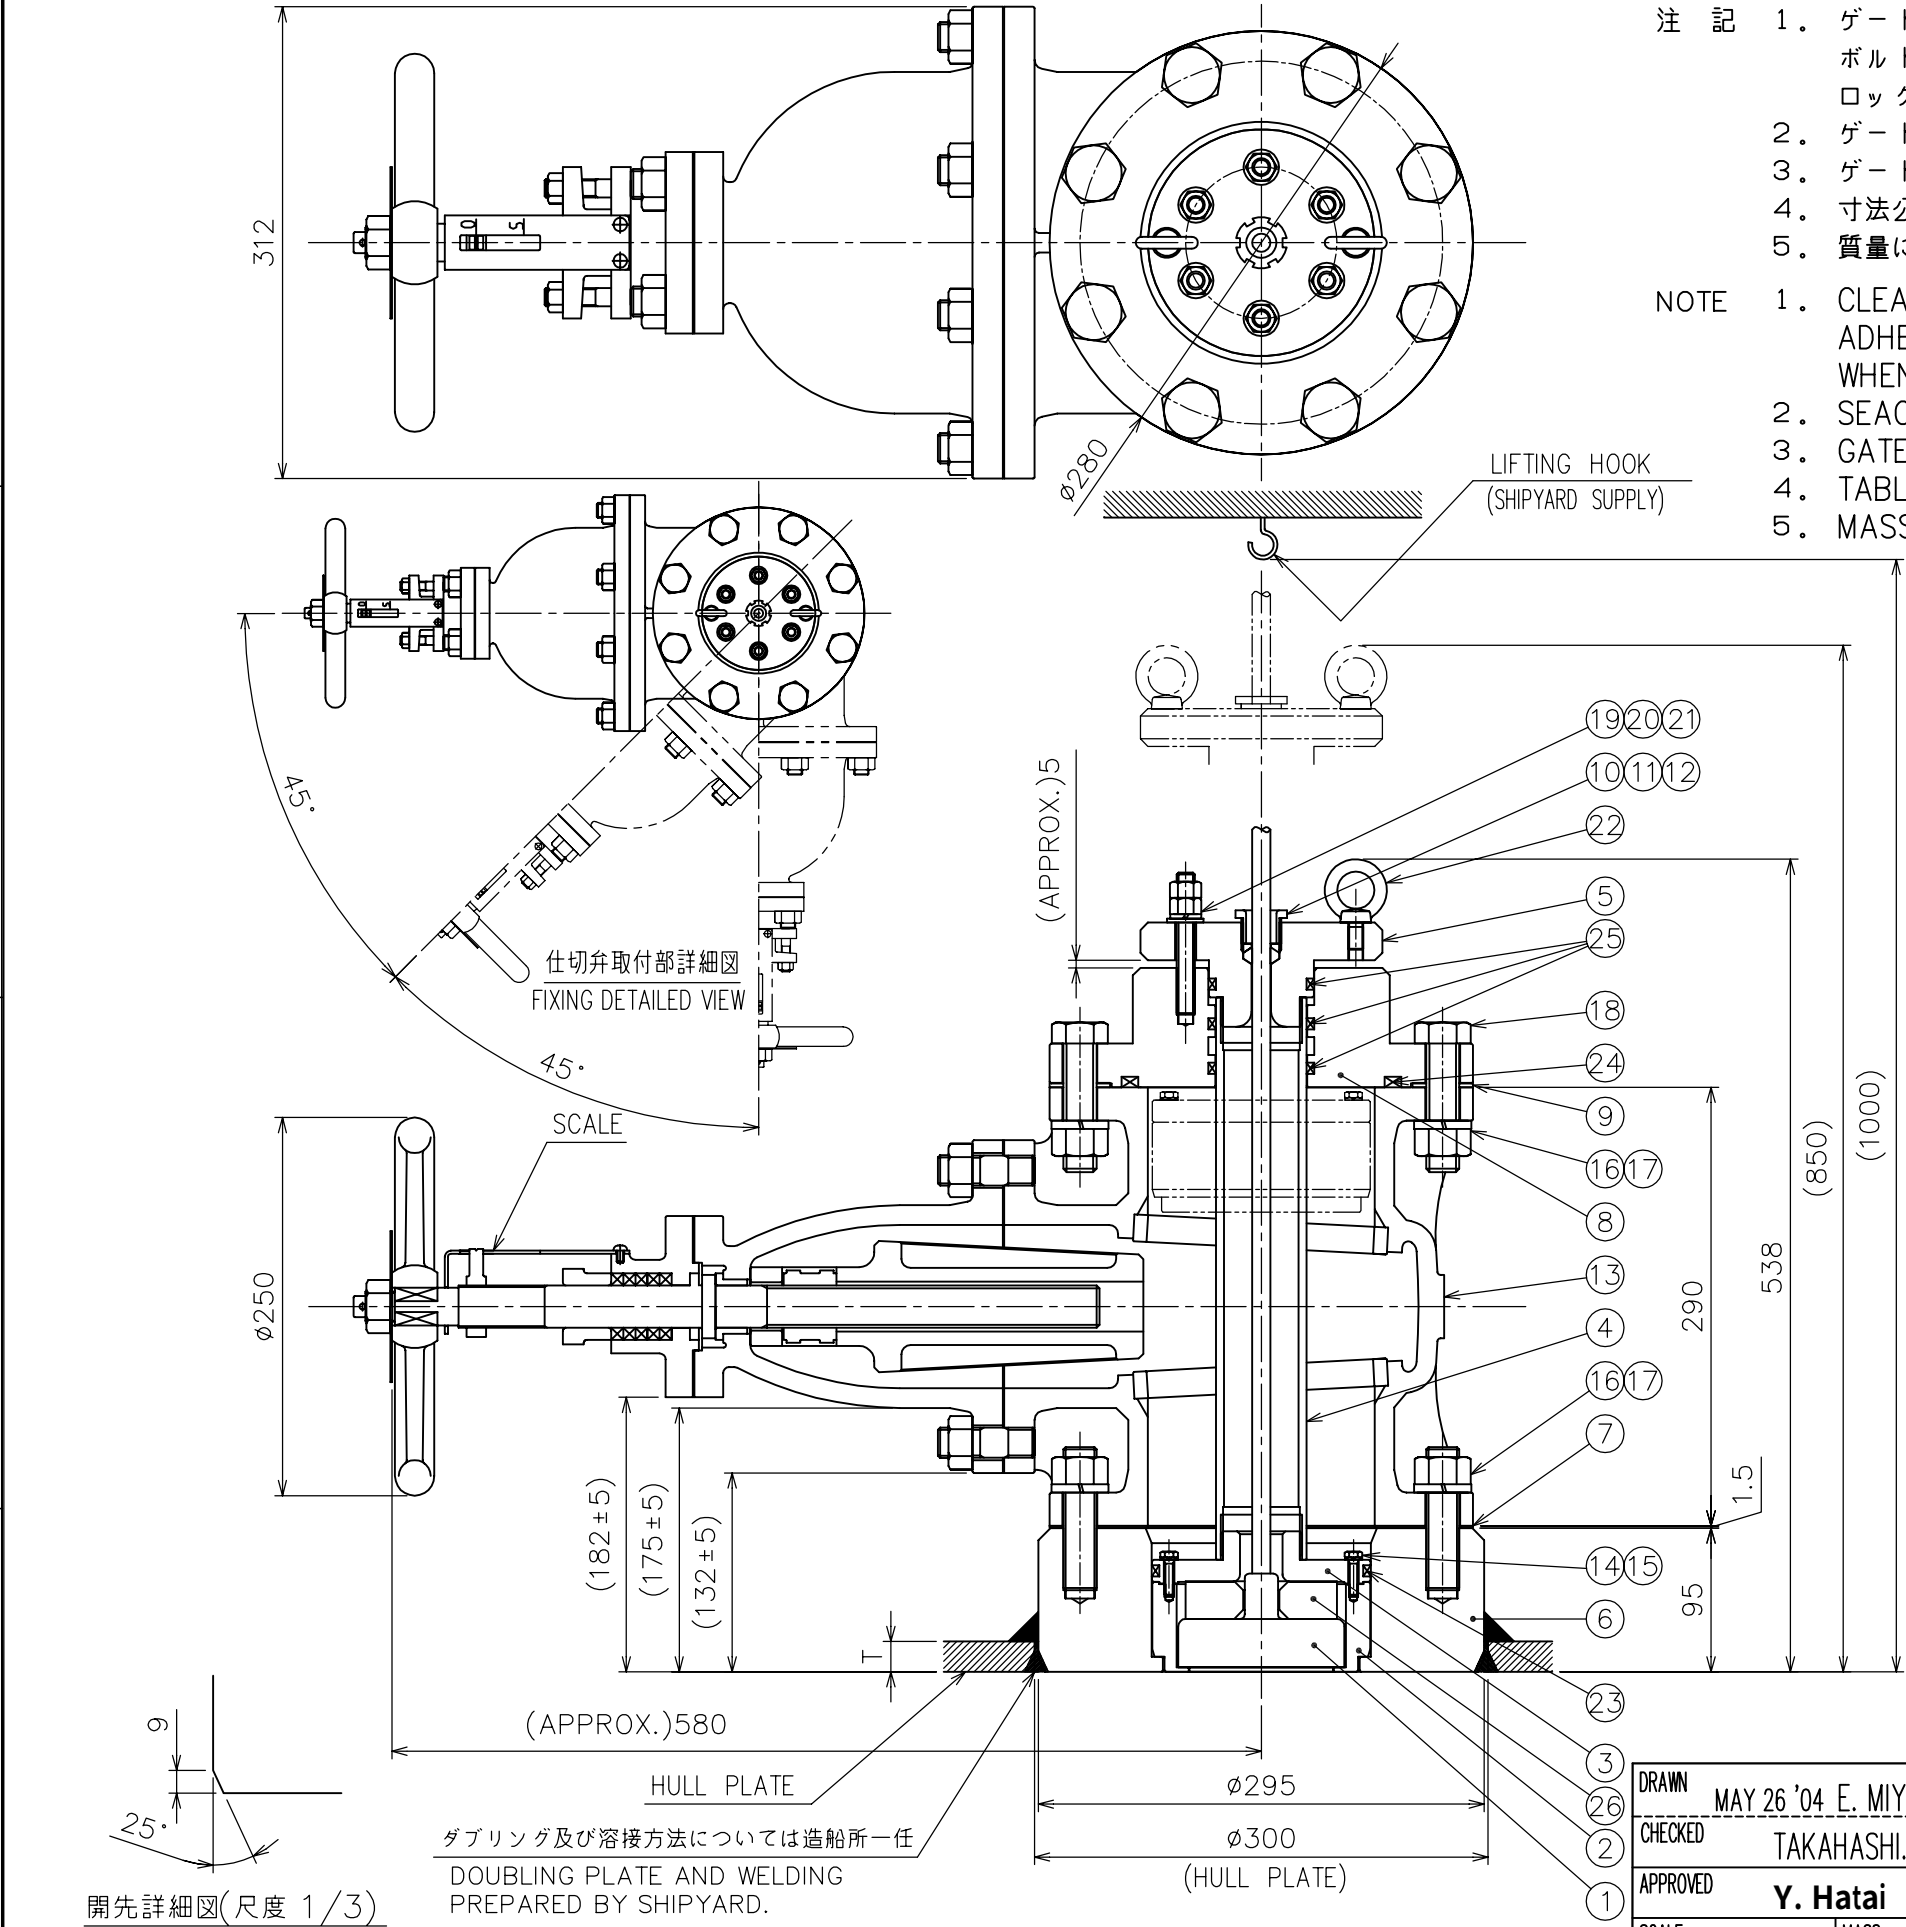

- 注 記 1. ゲートバルブ ⑬ を取付ける際はナット ⑯ の回り止め対策として、ボルト ⑮、寸切りボルト (⑥ に付属) およびナット ⑯ を脱脂後、ロックタイト #271 をして塗布して完全に締めてください。
2. ゲートバルブ部以外の部分は $4.9 \times 10^5 \text{ Pa}$ の水圧試験がされています。
3. ゲートバルブ ⑬ は 45° ピッチで任意の方向に取付け可能です。
4. 寸法公差は表 1 の通りです。
5. 質量には送受波器 ① を含みません。
- NOTE 1. CLEAN NUTS ⑯ AND BOLTS WITH SOLVENT, COAT THEIR THREADS WITH ADHESIVE/SEALANT (LOCTITE #271) AND THEN TIGHTEN THEM SECURELY WHEN MOUNTING GATE VALVE ⑬.
2. SEACHEST EXCEPT GATE VALVE IS TESTED UNDER $4.9 \times 10^5 \text{ Pa}$ WATER PRESSURE.
3. GATE VALVE ⑬ CAN BE ATTACHED IN THE ANY DIRECTION IN INCREMENT OF 45° .
4. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS.
5. MASS DOES NOT INCLUDE TRANSDUCER ①.


表 1 (Table 1)

寸法区分 (mm) DIMENSIONS		公差 (mm) TOLERANCE
$L \leq 50$		± 1.5
$50 < L \leq 100$		± 2.5
$100 < L \leq 500$		± 3
$500 < L \leq 1000$		± 4

26	DAMPER	CR	1	TTF-2000-03	
25	O-RING	NBR	3	JIS B2401 P60	
24	O-RING	NBR	1	JIS B2401 P170	
23	O-RING	NBR	1	JIS B2401 P135	
22	EYEBOLT	M10	SUS304	2	
21	FLAT WASHER	M12	SUS316L	6	
20	SPRING WASHER	M12	SUS316L	6	
19	NUT	M12	SUS316L	12	
18	BOLT	M22×85	SUS316L	8	
17	SPRING WASHER	M22	SUS316L	16	
16	NUT	M22	SUS316L	16	
15	SPRING WASHER	M6	SUS316L	6	
14	BOLT	M6×25	SUS316L	6	
13	GATE VALVE $9.8 \times 10^5 \text{ Pa}$ ZINC RICH PRIMER	SC480	1	02-129-6311	CLASSIFICATION SOCIETY APPROVED
12	WASHER	C3604B	1	TPB-11-07	
11	PACKING	CR	1	TPB-11-08	
10	GRAND	C3604B	1	JIS F8801 20 1a	
9	GASKET2	CR	1	02-129-6308	
8	SEACHEST CAP ZINC RICH PRIMER	KA HIGH TENSILE STRENGTH STEEL	1	02-129-6307	CLASSIFICATION SOCIETY APPROVED MATERIAL
7	GASKET1	JOINT SHEET	1	02-129-6306	T/#1995 t=1.5mm
6	SPACER ZINC RICH PRIMER	KA HIGH TENSILE STRENGTH STEEL	1	02-129-6305	CLASSIFICATION SOCIETY APPROVED MATERIAL
5	FLANGE 2	SUS316L	1	02-129-6304	
4	SHAFT	SUS316LTP	1	02-129-6303	
3	FLANGE 1	SUS316L	1	02-129-6302	
2	TRANSDUCER CASE	SUS316L	1	02-129-7301	
1	TRANSDUCER		1		200B-8B

品番 ITEM	品名 NAME	材質 MATERIAL	数量 Q'TY	図番 DWG.NO.	摘要 REMARKS
------------	------------	----------------	------------	---------------	---------------

DRAWN		MAY 26 '04 E. MIYOSHI				TITLE		GV-200B-8B	
CHECKED		TAKAHASHI. T				名 称		ゲートバルブ	
APPROVED		Y. Hatai		FE-700 (200K)				送受波器装備図	
SCALE		1/5		MASS 170 ±10% kg		NAME		GATE VALVE	
DWG.No.		C2366-T02- B		02-129-730G-1				TRANSDUCER INSTALLATION DRAWINGS	

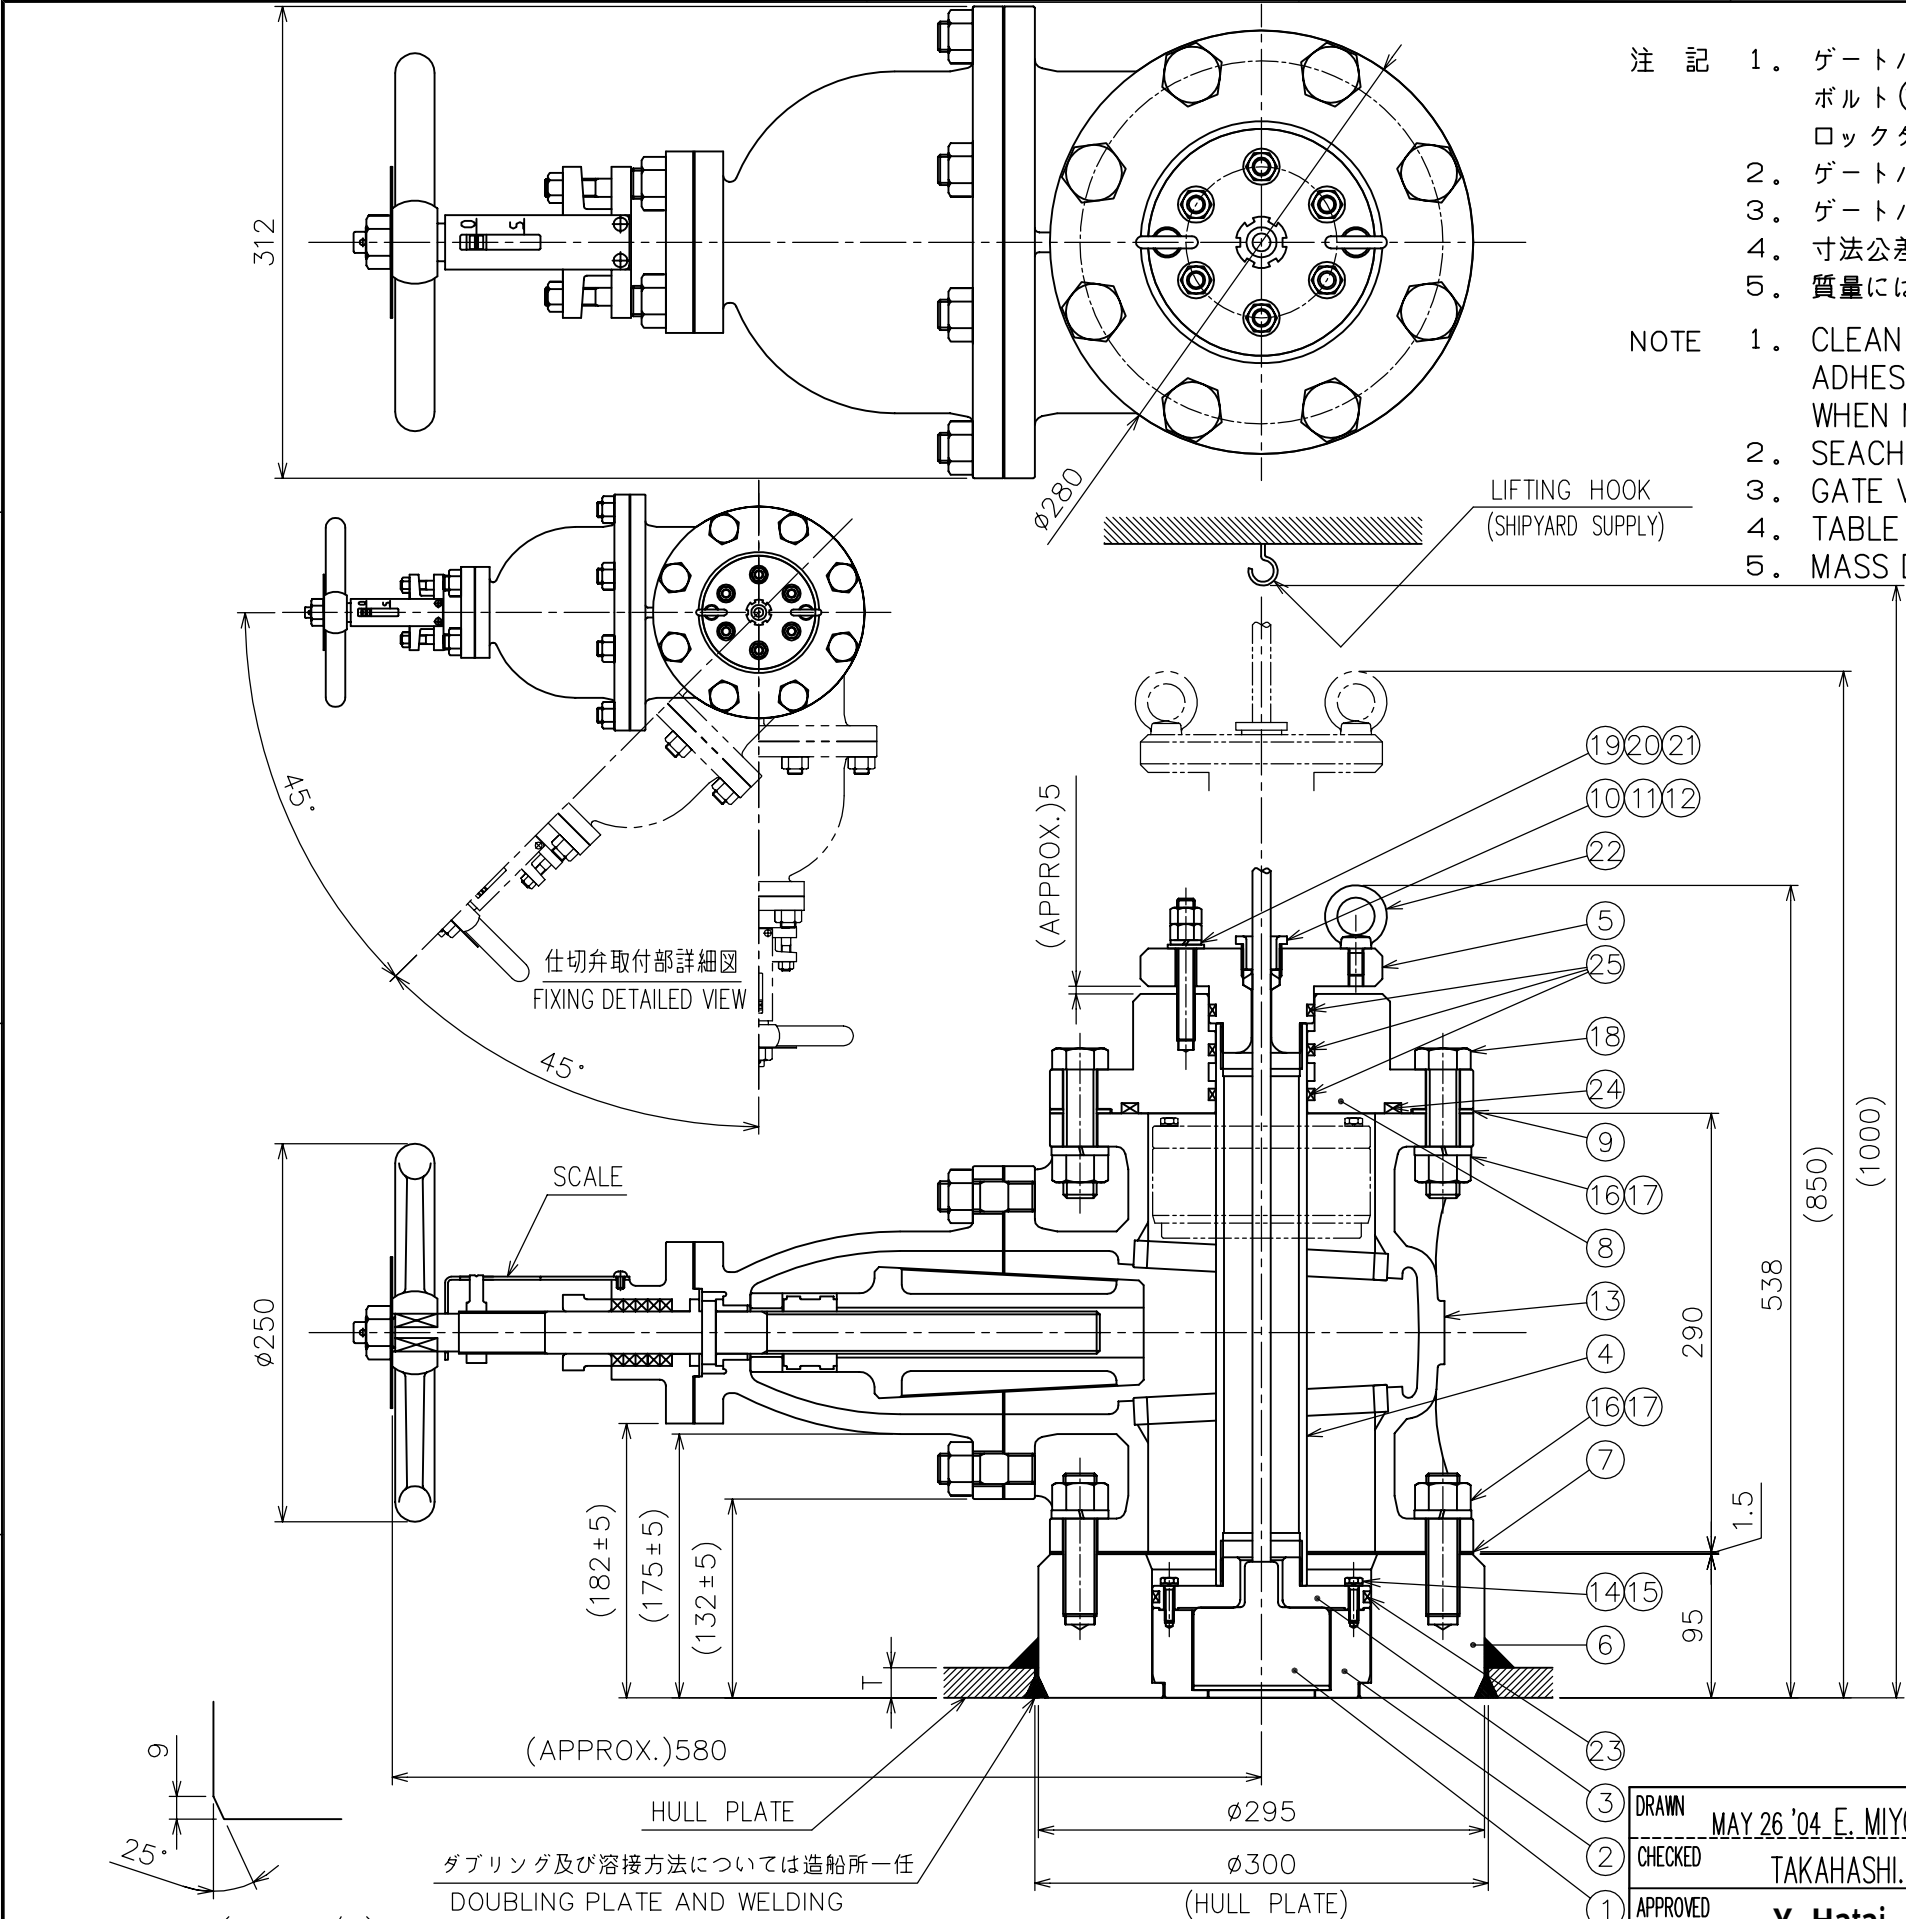

- 注記 1. ゲートバルブ ⑬を取付ける際はナット⑯の回り止め対策として、ボルト⑯、寸切りボルト(⑥に付属)およびナット⑯を脱脂後、ロックタイト#271をして塗布して完全に締めてください。
2. ゲートバルブ部以外の部分は $4.9 \times 10^5 \text{ Pa}$ の水圧試験がされています。
3. ゲートバルブ ⑬は 45° ピッチで任意の方向に取付け可能です。
4. 寸法公差は表1の通りです。
5. 質量には送受波器 ①を含みません。


- NOTE 1. CLEAN NUTS⑯AND BOLTS WITH SOLVENT, COAT THEIR THREADS WITH ADHESIVE/SEALANT (LOCTITE#271) AND THEN TIGHTEN THEM SECURELY WHEN MOUNTING GATE VALVE ⑬.
2. SEACHEST EXCEPT GATE VALVE IS TESTED UNDER $4.9 \times 10^5 \text{ Pa}$ WATER PRESSURE.
3. GATE VALVE ⑬CAN BE ATTACHED IN THE ANY DIRECTION IN INCREMENT OF 45° .
4. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS.
5. MASS DOES NOT INCLUDE TRANSDUCER①.

表 1 (Table 1)

寸法区分(mm) DIMENSIONS	公差(mm) TOLERANCE
$L \leq 50$	± 1.5
$50 < L \leq 100$	± 2.5
$100 < L \leq 500$	± 3
$500 < L \leq 1000$	± 4

25	O-RING	NBR	3	JIS B2401 P60	
24	O-RING	NBR	1	JIS B2401 P170	
23	O-RING	NBR	1	JIS B2401 P135	
22	EYEBOLT	M10	SUS304	2	
21	FLAT WASHER	M12	SUS316L	6	
20	SPRING WASHER	M12	SUS316L	6	
19	NUT	M12	SUS316L	12	
18	BOLT	M22×85	SUS316L	8	
17	SPRING WASHER	M22	SUS316L	16	
16	NUT	M22	SUS316L	16	
15	SPRING WASHER	M6	SUS316L	6	
14	BOLT	M6×25	SUS316L	6	
13	GATE VALVE $9.8 \times 10^5 \text{ Pa}$ ZINC RICH PRIMER	SC480	1	02-129-6311	CLASSIFIATION SOCIETY APPROVED
12	WASHER	C3604B	1	TPB-11-07	
11	PACKING	CR	1	TPB-11-08	
10	GRAND	C3604B	1	JIS F8801 20 1a	
9	GASKET2	CR	1	02-129-6308	
8	SEACHEST CAP KA32 ZINC RICH PRIMER	KA32 HIGH TENSILE STRENGTH STEEL	1	02-129-6322	CLASSIFIATION SOCIETY APPROVED MATERIAL
7	GASKET1	JOINT SHEET	1	02-129-6306	T/#1995 t=1.5mm
6	SPACER KA32 ZINC RICH PRIMER	KA32 HIGH TENSILE STRENGTH STEEL	1	02-129-6321	CLASSIFIATION SOCIETY APPROVED MATERIAL
5	FLANGE2	SUS316L	1	02-129-6304	
4	SHAFT	SUS316LTP	1	02-129-6303	
3	FLANGE1	SUS316L	1	02-129-6302	
2	TRANSDUCER CASE	SUS316L	1	02-129-6301	
1	TRANSDUCER		1		50B-6B
品番 ITEM	品名 NAME	材質 MATERIAL	数量 Q'TY	図番 DWG.NO.	摘要 REMARKS

DRAWN	MAY 26 '04 E. MIYOSHI	TITLE	GV-50B-6B
CHECKED	TAKAHASHI. T	名称	ゲートバルブ
APPROVED	Y. Hatai		送受波器装備図
SCALE	1/5	MASS	170 $\pm 10\%$ kg
DWG.No.	C2366-T03- A		02-129-631G-0
		NAME	GATE VALVE
			TRANSDUCER INSTALLATION DRAWINGS

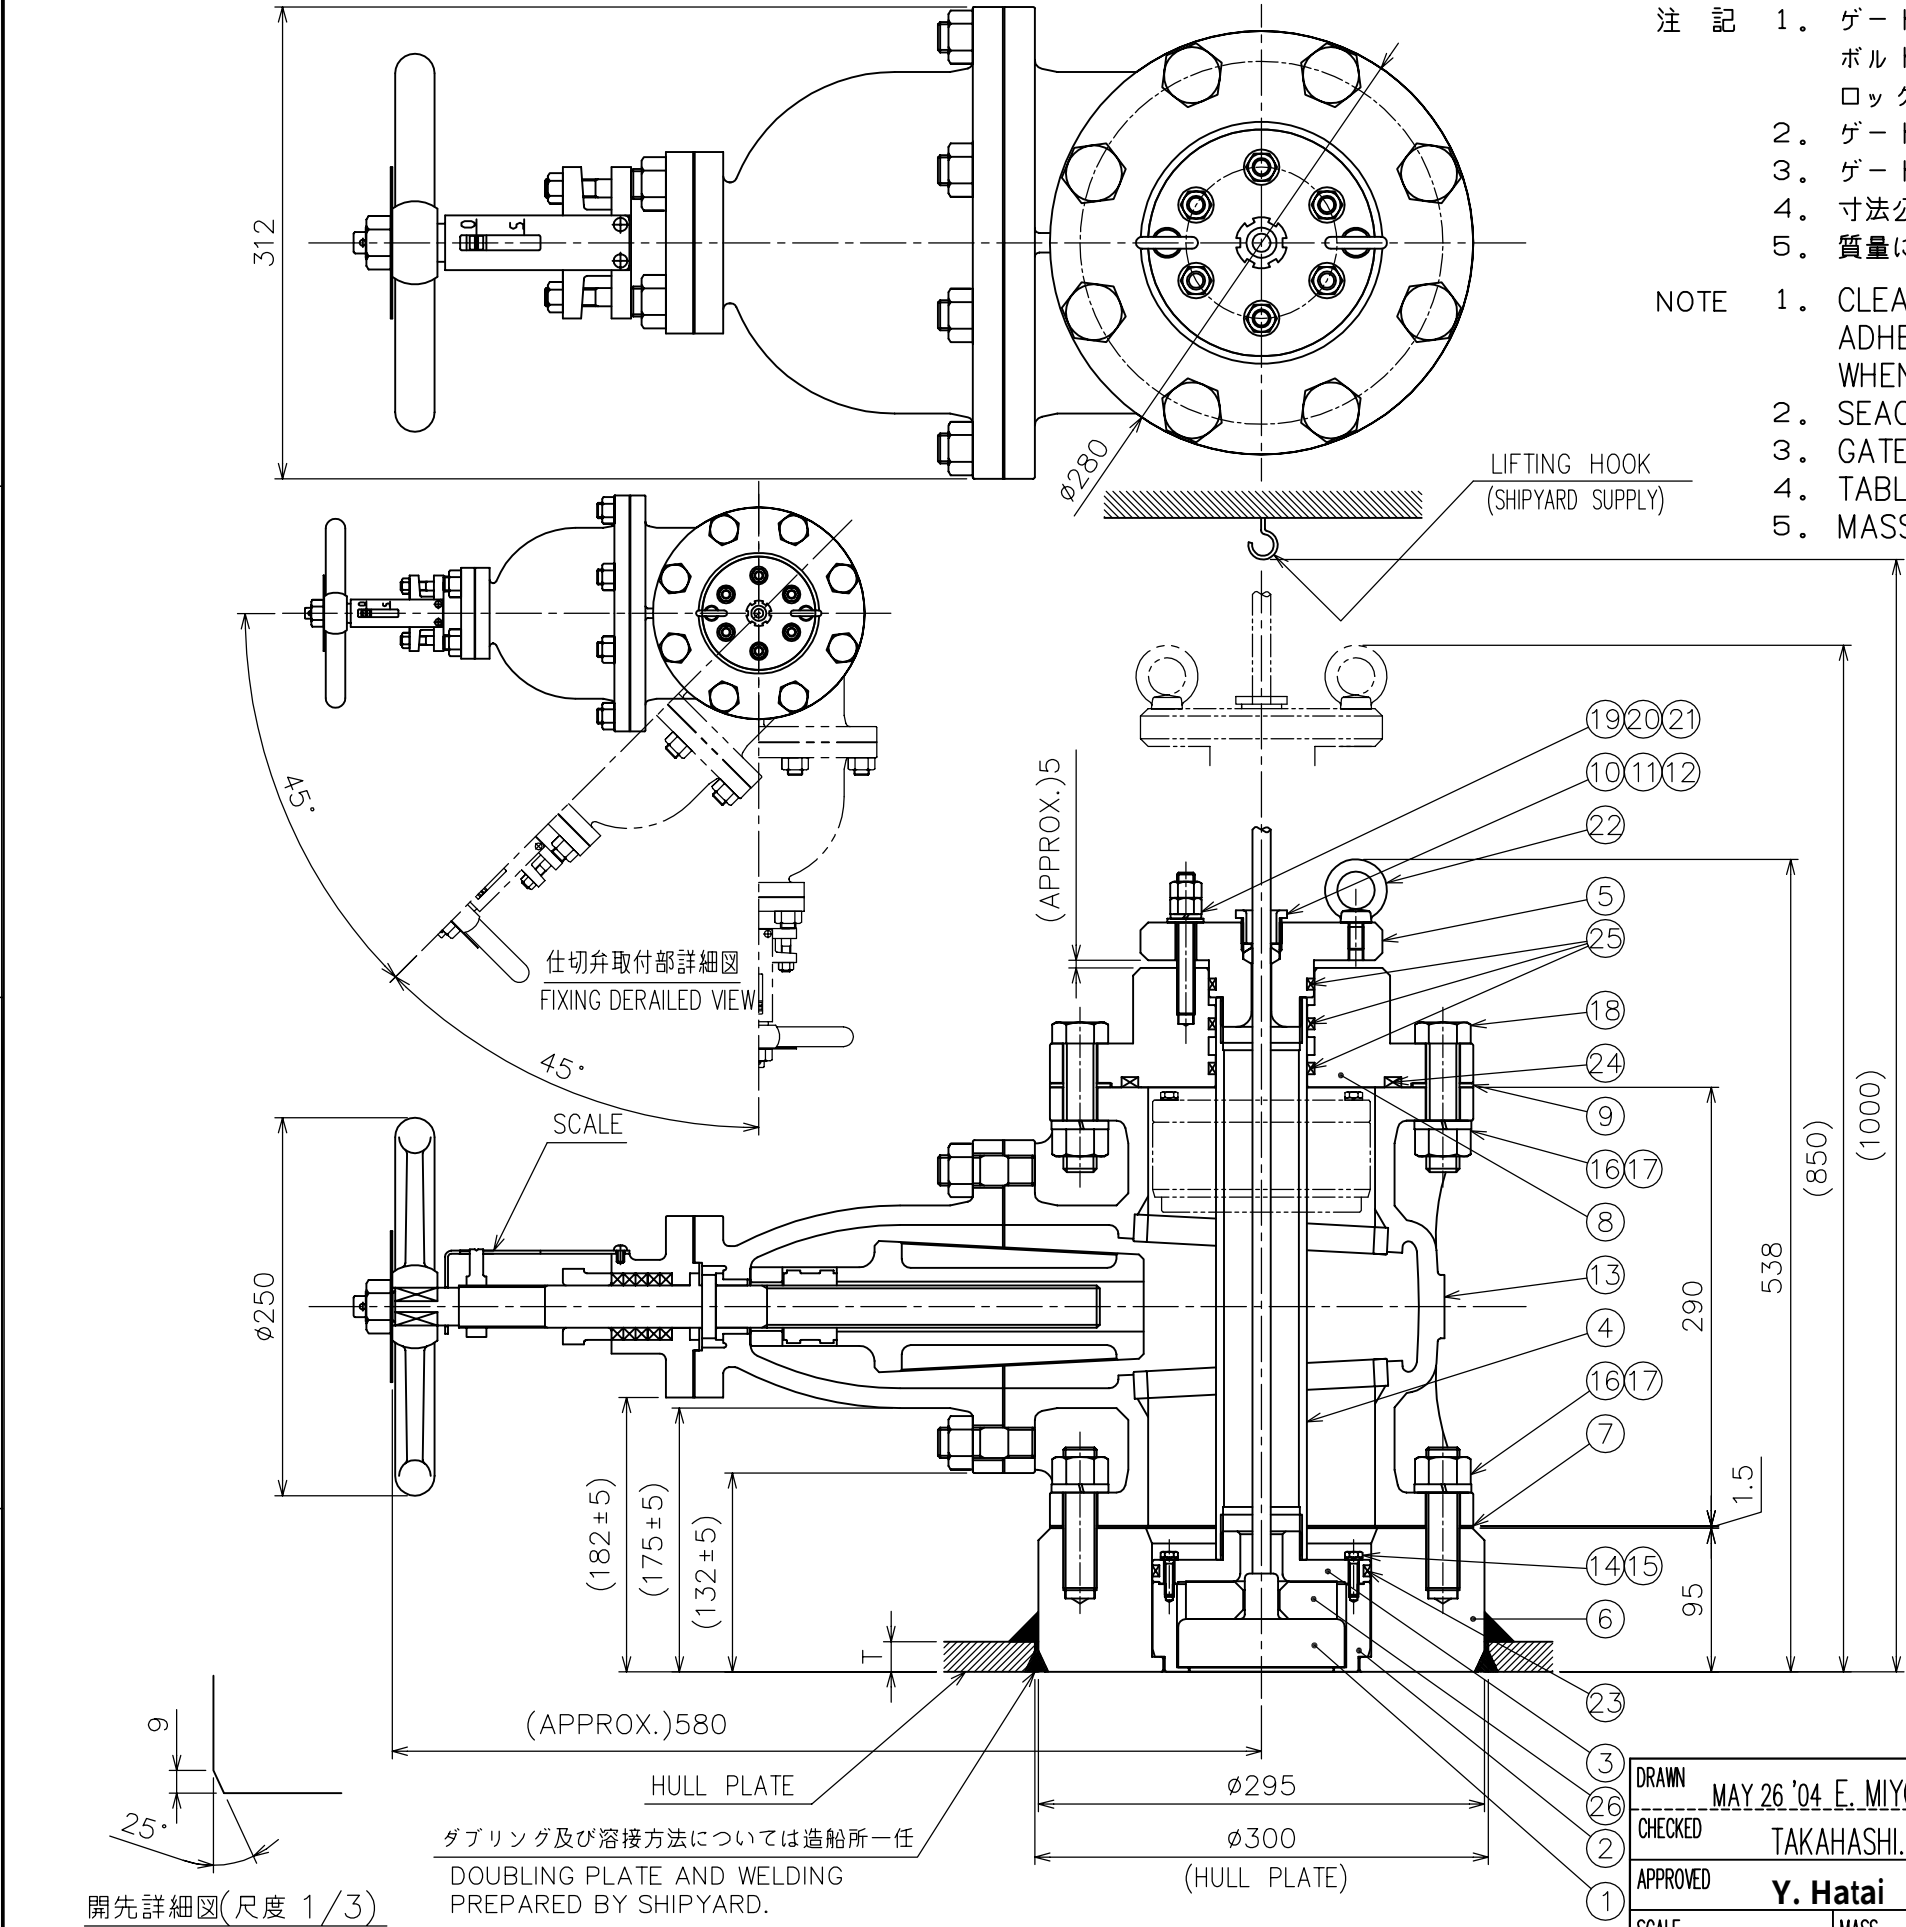


- 注 記 1. ゲートバルブ ⑬ を取付ける際はナット ⑯ の回り止め対策として、ボルト ⑮、寸切りボルト (⑥ に付属) およびナット ⑯ を脱脂後、ロックタイト #271 をして塗布して完全に締めてください。
2. ゲートバルブ部以外の部分は $4.9 \times 10^5 \text{ Pa}$ の水圧試験がされています。
3. ゲートバルブ ⑬ は 45° ピッチで任意の方向に取付け可能です。
4. 寸法公差は表1の通りです。
5. 質量には送受波器 ① を含みません。
- NOTE 1. CLEAN NUTS ⑯ AND BOLTS WITH SOLVENT, COAT THEIR THREADS WITH ADHESIVE/SEALANT (LOCTITE #271) AND THEN TIGHTEN THEM SECURELY WHEN MOUNTING GATE VALVE ⑬ .
2. SEACHEST EXCEPT GATE VALVE IS TESTED UNDER $4.9 \times 10^5 \text{ Pa}$ WATER PRESSURE.
3. GATE VALVE ⑬ CAN BE ATTACHED IN THE ANY DIRECTION IN INCREMENT OF 45° .
4. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS.
5. MASS DOES NOT INCLUDE TRANSDUCER ① .

表 1 (Table 1)

寸法区分 (mm) DIMENSIONS	公差 (mm) TOLERANCE
$L \leq 50$	± 1.5
$50 < L \leq 100$	± 2.5
$100 < L \leq 500$	± 3
$500 < L \leq 1000$	± 4

26	DAMPER	CR	1	TTF-2000-03	
25	O-RING	NBR	3	JIS B2401 P60	
24	O-RING	NBR	1	JIS B2401 P170	
23	O-RING	NBR	1	JIS B2401 P135	
22	EYEBOLT	M10	SUS304	2	
21	FLAT WASHER	M12	SUS316L	6	
20	SPRING WASHER	M12	SUS316L	6	
19	NUT	M12	SUS316L	12	
18	BOLT	M22×85	SUS316L	8	
17	SPRING WASHER	M22	SUS316L	16	
16	NUT	M22	SUS316L	16	
15	SPRING WASHER	M6	SUS316L	6	
14	BOLT	M6×25	SUS316L	6	
13	GATE VALVE $9.8 \times 10^5 \text{ Pa}$ ZINC RICH PRIMER	SC480	1	02-129-6311	CLASSIFIATION SOCIETY APPROVED
12	WASHER	C3604B	1	TPB-11-07	
11	PACKING	CR	1	TPB-11-08	
10	GRAND	C3604B	1	JIS F8801 20 1a	
9	GASKET2	CR	1	02-129-6308	
8	SEACHEST CAP KA32 ZINC RICH PRIMER	KA32 HIGH TENSILE STRENGTH STEEL	1	02-129-6322	CLASSIFIATION SOCIETY APPROVED MATERIAL
7	GASKET1	JOINT SHEET	1	02-129-6306	T/#1995 t=1.5mm
6	SPACER KA32 ZINC RICH PRIMER	KA32 HIGH TENSILE STRENGTH STEEL	1	02-129-6321	CLASSIFIATION SOCIETY APPROVED MATERIAL
5	FLANGE 2	SUS316L	1	02-129-6304	
4	SHAFT	SUS316LTP	1	02-129-6303	
3	FLANGE 1	SUS316L	1	02-129-6302	
2	TRANSDUCER CASE	SUS316L	1	02-129-7301	
1	TRANSDUCER		1		200B-8B
品番 ITEM	品 名 NAME	材 質 MATERIAL	数量 Q'TY	図 番 DWG.NO.	摘 要 REMARKS

DRAWN	MAY 26 '04 E. MIYOSHI	TITLE	GV-200B-8B
CHECKED	TAKAHASHI. T	名 称	ゲートバルブ
APPROVED	Y. Hatai	FE-700 (200K)	送受波器装備図
SCALE	1/5	MASS	170 $\pm 10\%$ kg
DWG.No.	C2366-T04-A	02-129-731G-0	TRANSUCER INSTALLATION DRAWINGS

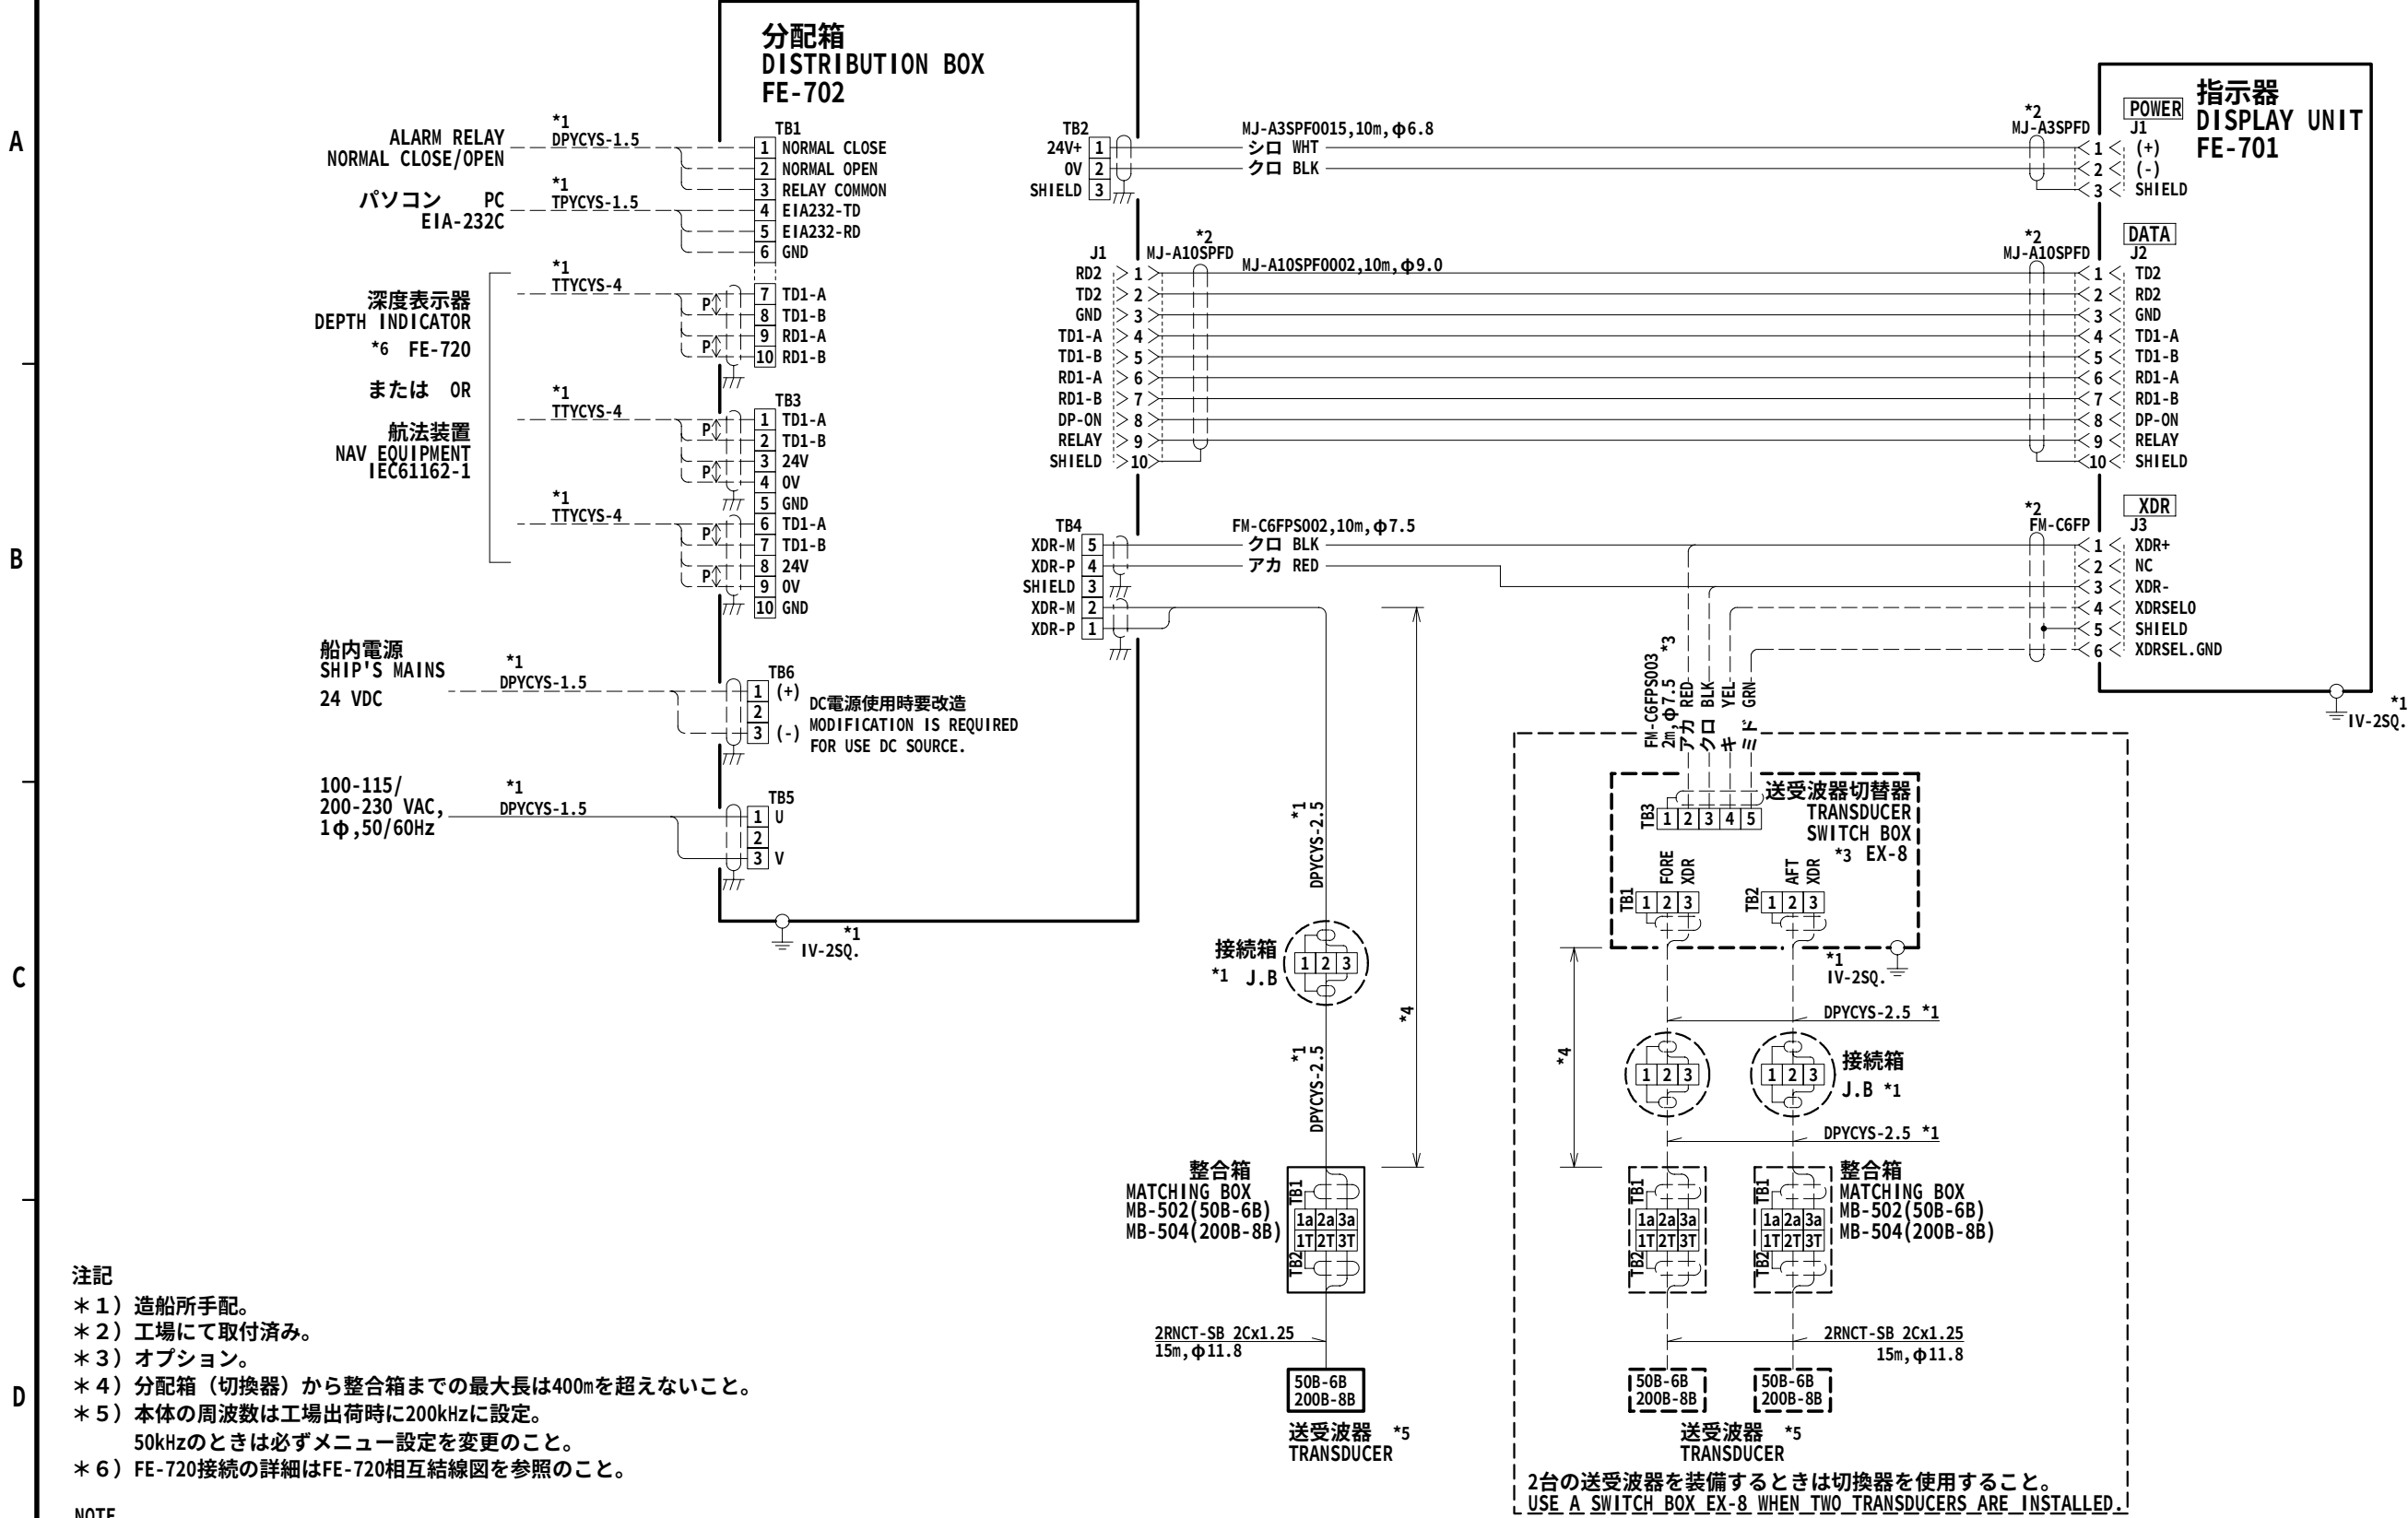


- 注記
- *1) 造船所手配。
 - *2) 工場にて取付済み。
 - *3) オプション。
 - *4) 分配箱（切換器）から整合箱までの最大長は400mを超えないこと。
 - *5) 本体の周波数は工場出荷時に200kHzに設定。
50kHzのときは必ずメニュー設定を変更のこと。
 - *6) FE-720接続の詳細はFE-720相互結線図を参照のこと。

NOTE

- *1. SHIPYARD SUPPLY.
- *2. FITTED AT FACTORY.
- *3. OPTION
- *4. MAXIMUM CABLE LENGTH BETWEEN DISTRIBUTION BOX AND MATCHING BOX IS 400 m.
- *5. TRANSMITTING FREQUENCY HAS BEEN SET TO 200 kHz AT FACTORY.
WHEN 50 kHz IS INSTALLED, CHANGE THE SETTING AT THE MENU.
- *6. REFER TO FE-720 INTERCONNECTION DIAGRAM FOR DETAIL OF CONNECTING TO FE-720.

DRAWN	Nov. 21 '03 T.YAMASAKI	TITLE	FE-700
CHECKED	Nov. 25 '03 S.Asami	名称	音響測深機
APPROVED	Nov. 27 '03 <i>Matsuyuchi</i>		相互結線図
SCALE	MASS kg	NAME	NAVIGATIONAL ECHO SOUNDER
DWG.No.	C2366-C01- H		INTERCONNECTION DIAGRAM

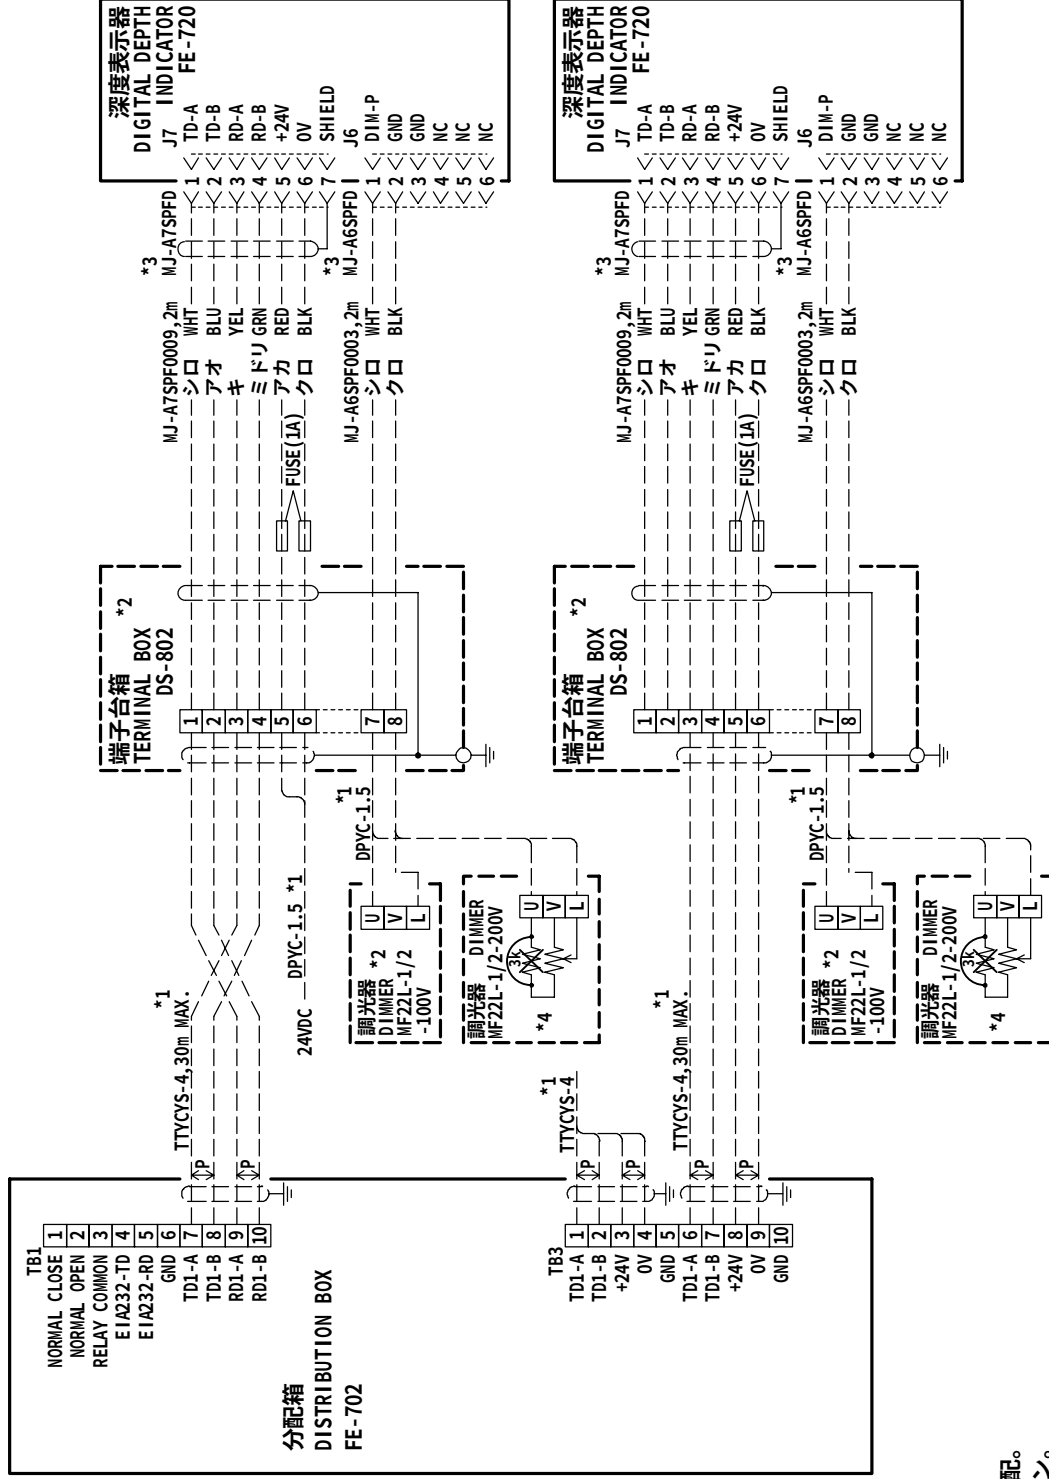

DRAWN	Mar. 12 '04 T. YAMASAKI	TITLE	FE-720
CHECKED	Mar. 12 '04 T. TAKENO	名称	深度表示器
APPROVED	Mar. 19 '04 H. Hayashi	相互結線図	
SCALE	1/25	NAME	DIGITAL DEPTH INDICATOR
DWG. No.	C2366-C02 - H		INTERCONNECTION DIAGRAM



- * 1) 造船所手配。
- * 2) 工場にて取付済み。
- * 3) コネクタケースでアースをとる。

*3: GROUND THRU CONNECTOR CLAMP.

INTERCONNECTION DIAGRAM