

# **FURUNO**

# **INSTALLATION MANUAL**

**MARINE RADAR**

---

**MODEL      FR-7112**

---



**FURUNO ELECTRIC CO., LTD.**  
NISHINOMIYA, JAPAN

© **FURUNO ELECTRIC CO., LTD.**

9-52, Ashihara-cho,  
Nishinomiya, Japan

Telephone: 0798-65-2111  
Telefax: 0798-65-4200

•Your Local Agent/Dealer

All rights reserved.

Printed in Japan

FIRST EDITION : APR. 1998  
H : JUN. 6, 2001

(HIMA)

PUB. No. IME-34600-H  
FR-7112



\* 00080837200 \*



# SAFETY INSTRUCTIONS



## WARNING



**ELECTRICAL  
SHOCK  
HAZARD**

**Do not open the equipment unless totally familiar with electrical circuits and service manual.**

Only qualified personnel should work inside the equipment.



**Wear a safety belt and hard hat when working on the scanner unit.**

Serious injury or death can result if someone falls from the radar scanner mast.

**Construct a suitable service platform from which to install the scanner unit.**

Serious injury or death can result if someone falls from the radar scanner mast.

**Turn off the power at the mains switchboard before beginning the installation.**

Fire, electrical shock or serious injury can result if the power is left on or is applied while the equipment is being installed.

**Do not install the display unit where it may get wet from rain or water splash.**

Water in the display unit can result in fire, electrical shock or equipment damage.



## WARNING

### Radio Frequency Radiation Hazard

The radar scanner emits electromagnetic radio frequency (RF) energy which can be harmful, particularly to your eyes. Never look directly into the scanner aperture from a close distance while the radar is in operation or expose yourself to the transmitting scanner at a close distance.

Distances at which RF radiation levels of 100 and 10 W/m<sup>2</sup> exist are given in the table below.

**Note:** If the scanner unit is installed at a close distance in front of the wheel house, your administration may require halt of transmission within a certain sector of scanner revolution. This is possible — Ask your FURUNO representative or dealer to provide this feature.

Radiator type	Distance to 100 W/m <sup>2</sup> point	Distance to 10 W/m <sup>2</sup> point
XN12A (4')	Worst case 0.5 m	Worst case 7.5 m
XN13A (6')	Worst case 0.3 m	Worst case 7.0 m

## **WARNING**

**Be sure that the power supply is compatible with the voltage rating of the equipment.**

Connection of an incorrect power supply can cause fire or equipment damage. The voltage rating of the equipment appears on the label above the power connector.

**Use only the specified power cable.**

Fire or equipment damage can result if a different cable is used.

## **CAUTION**




**Ground the equipment to prevent electrical shock and mutual interference.**

**Observe the following compass safe distances to prevent deviation of a magnetic compass:**

	Standard	Steering
Display unit	1.10 m	0.80 m
Scanner unit	1.65 m	1.25 m

## **HIGH TENSION WARNING**

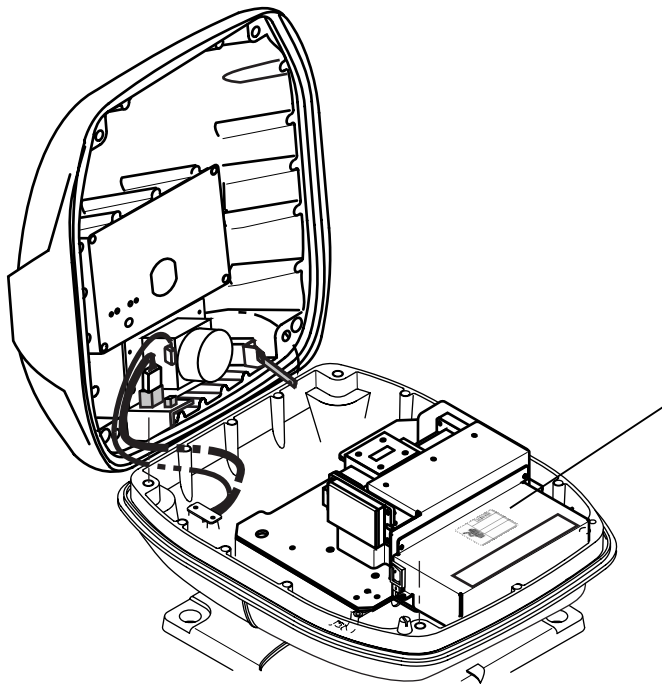

Name: Warning Label (1)

Type: 86-003-1011

Code No.: 100-236-230

# TABLE OF CONTENTS

<b>EQUIPMENT LISTS .....</b>	<b>iv</b>
<b>SYSTEM CONFIGURATION .....</b>	<b>vi</b>

## **SCANNER UNIT**

Mounting Considerations, Precautions .....	1
Mounting Methods .....	1
Fixing Holes in Mounting Platform .....	1
Fastening the Radiator to the Radiator Bracket .....	2
Mounting the Scanner Unit .....	2
Connecting the Signal Cable .....	4

## **DISPLAY UNIT**

Mounting Considerations .....	6
Tabletop Mounting .....	6
Bulkhead, Overhead Mounting .....	7

<b>WIRING .....</b>	<b>8</b>
---------------------	----------

## **ADJUSTMENTS, INITIAL SETTINGS**

Adjustments, Initial Settings	
1. Displaying the Installation Setup menu .....	9
2. Selecting a navaid .....	9
3. Selecting a heading sensor .....	9
4. Adjusting tuning, video amplifier input level .....	9
5. Aligning heading .....	10
6. Adjusting sweep timing .....	10
7. Adjusting MBS (Main Bang Suppression) .....	11
8. Entering scanner height .....	11
9. Selecting STC curve .....	11
10. Setting a dead sector .....	12
11. Checking magnetron heater voltage .....	12

## **ARP-10 INSTALLATION**

Necessary Parts .....	13
Installation .....	13
Adjustments .....	14

<b>INSTALLATION MATERIALS, ACCESSORIES, SPARE PARTS .....</b>	<b>A-1</b>
---	------------

<b>OUTLINE DRAWINGS .....</b>	<b>D-1</b>
-------------------------------	------------

<b>SCHEMATIC DIAGRAMS .....</b>	<b>S-1</b>
---------------------------------	------------

# EQUIPMENT LISTS


## Standard Supply

Name	Type	Code No.	Mass (Kg)	Qty	Remarks
Scanner Unit	XN12A-RSB-0072-060	-	23	Select one	24 rpm, 1250 mm
	XN13A-RSB-0072-060	-	25		24 rpm, 1800 mm
	XN12A-RSB-0073-060	-	23		48 rpm, 1250 mm
Display Unit	RDP-122	-	13	1	
Installation Materials	CP03-18400	000-086-892		Select one	CP03-18401, Power cable, 10 m signal cable
	CP03-18410	000-086-893			CP03-18401, Power cable, 15 m signal cable
	CP03-18420	000-086-894			CP03-18401, Power cable, 20 m signal cable
	CP03-18430	000-086-895			CP03-18401, Power cable, 30 m signal cable
Accessories	FP03-05310	000-085-767		1set	FP03-02910
					FP03-04310
					FP03-02920
Spare Parts	SP03-10200	000-085-692		1set	For display unit

## Optional Supply

Name	Type	Code No.	Remarks
External Buzzer	OP03-21	000-030-097	
Rectifier	RU-3423	000-030-443	
Cable Assy.	MJ-A6SPF0007-100	000-125-237	For heading sensor, 10 m w/6P connector at both ends, straight
	MJ-A6SPF0012-050	000-134-424	For navaid, video sounder, 5 m w/6P connector at both ends, cross
	MJ-A6SPF0012-100	000-133-817	For navaid, video sounder, 10 m w/6P connector at both ends, cross
	MJ-A6SPF0009-100	000-125-236	For navaid, video sounder, heading sensor, 10 m w/6P connector at one end
Signal Cable	MJ-A6SPF0003-050	000-117-603	5 m, w/6P connector on one end
EMI Filter	FP03-05500	008-456-990	
Dust Cover	03-038-9001	000-801-826	
Hood w/Lens	OP03-120	008-441-880	
Filter	FP03-02920	008-224-760	
Auto Plotter	ARP-10	000-086-852	Useable with 24 rpm scanner unit
Radar Plotter	RP-110	-	
Slave Display	FMD-811	-	LCD
	FMD-8010	-	
Remote Display	FMD-1800	-	w/CVD Converter
Cable Assy.	MJ-B24LPF0006-005	000-140-438	Cable converter connector

# SYSTEM CONFIGURATION

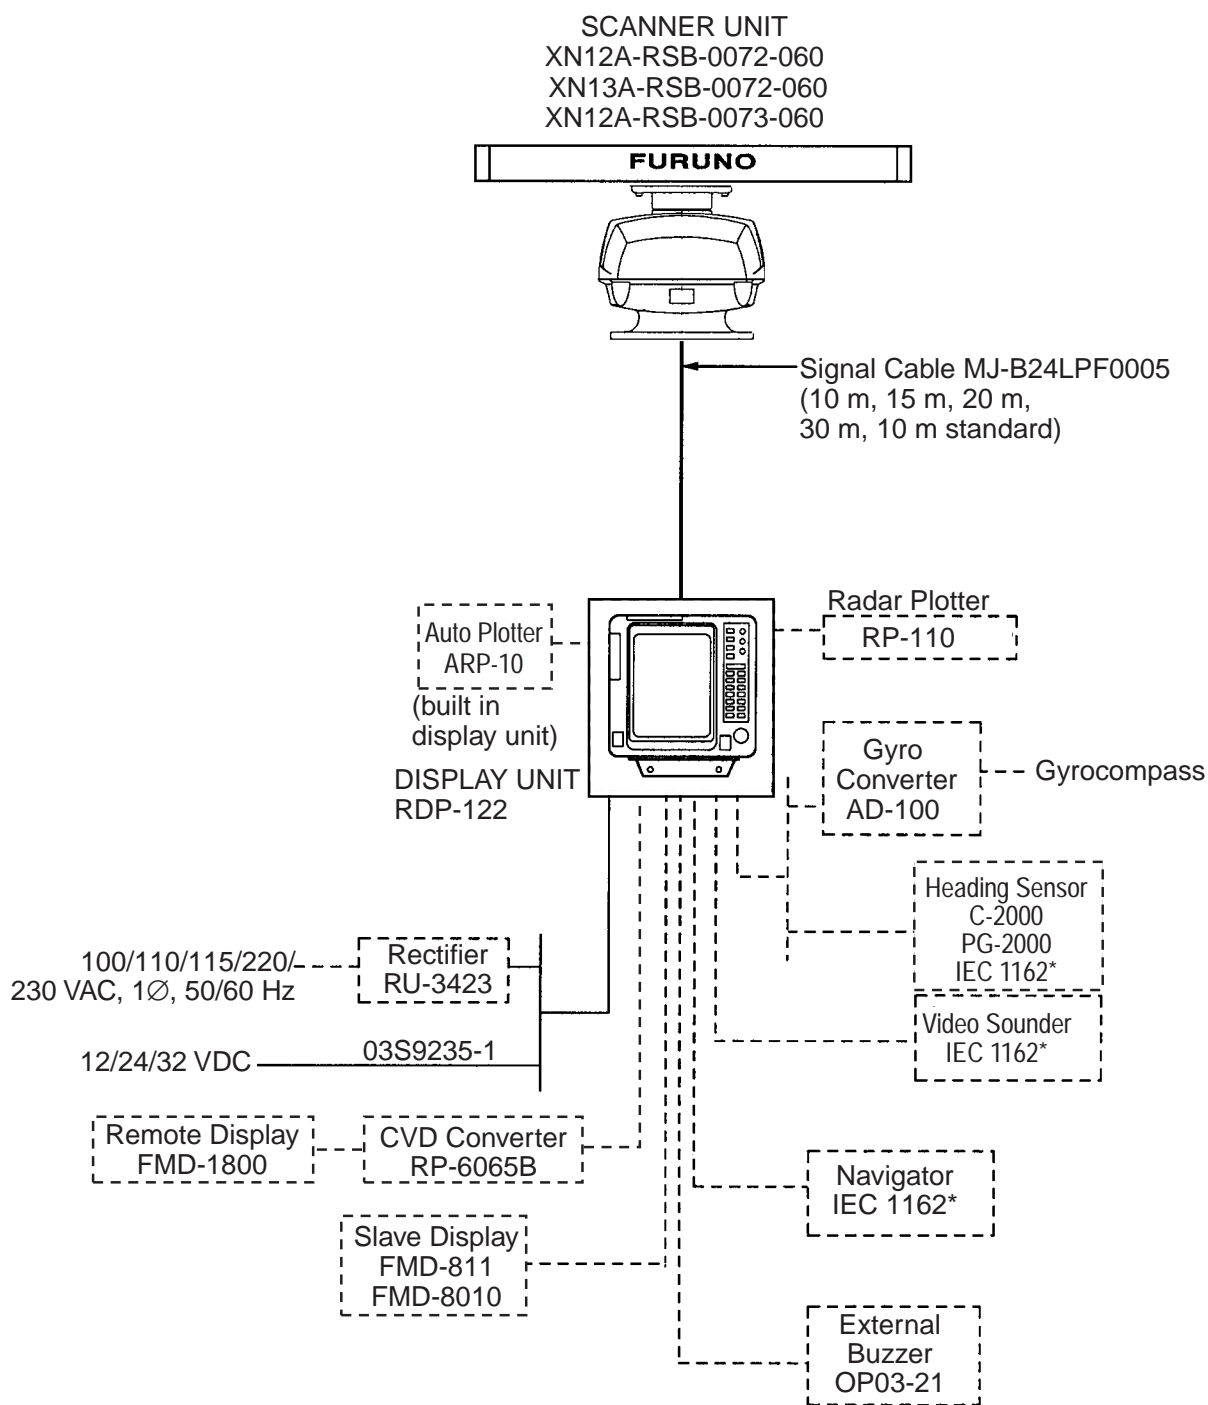

*Broken lines denote optional equipment.*

*\* Equivalent to NMEA 0183*



# SCANNER UNIT


## Mounting Considerations, Precautions

- The scanner unit is generally installed either on top of the wheelhouse or on the radar mast on a suitable platform. Locate the scanner unit where there is a good all-round view. Any obstruction will cause shadow and blind sectors. A mast for instance, with a diameter considerably less than the width of the radiator, will cause only a small blind sector, but a horizontal spreader or crosstrees in the same horizontal plane as the scanner unit would be a much more serious obstruction; you would need to place the scanner unit well above or below it.
- It is rarely possible to place the scanner unit where a completely clear view in all directions is available. Thus, you should determine the angular width and relative bearing of any shadow sectors for their influence on the radar at the first opportunity after fitting.
- If you have a radio direction finder on your boat, locate its scanner clear of the scanner unit to prevent interference to the direction finder. A separation of more than two meters is recommended.
- To lessen the chance of picking up electrical interference, avoid where possible routing the signal cable near other onboard electrical equipment. Also avoid running the cable in parallel with power cables.
- A magnetic compass will be affected if placed too close to the scanner unit. Observe the following compass safe distances to prevent deviation of a magnetic compass: Standard compass, 1.00 m, Steering compass, 0.75 m.

- Do not paint the radiator aperture, to ensure proper emission of the radar waves.
- When this radar is to be installed on larger vessels, consider the following points:
  - The signal cable run between the scanner and the display comes in lengths of 10 m (standard), 15 m, 20 m and 30 m. Whatever length is used it must be unbroken; namely, no splicing allowed.
  - Deposits and fumes from a funnel or other exhaust vent can adversely affect the aerial performance and hot gases may distort the radiator portion. The scanner unit must not be mounted where the temperature is more than 70°C.

## Mounting Methods

As shown in the figure below, the scanner unit may be installed on the bridge, on a common mast or on a dedicated mast.

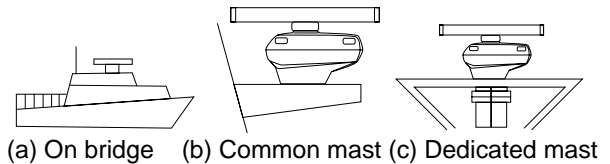

*Figure 1 Scanner unit mounting methods*


## Fixing Holes in Mounting Platform

Referring to the outline drawing on page D-1, drill five holes in the mounting platform: four holes of 15 mm diameter for fixing the scanner unit and one hole of 25-30 mm diameter for the signal cable.

## Fastening the Radiator to the Radiator Bracket


For your reference, scanner unit installation materials list appears on page A-8.

1. Remove the radiator cap from the radiator bracket.
2. Coat contacting surface between scanner radiator and radiator bracket with anticorrosive sealant as shown below.

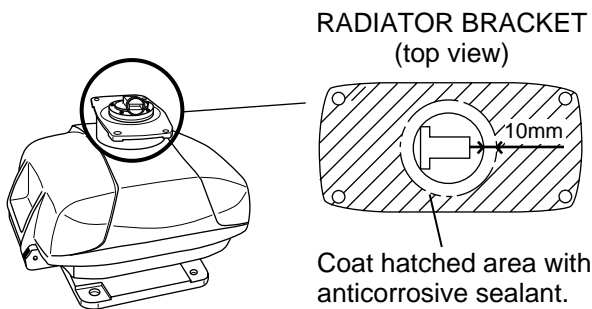

*Figure 2 Coating the scanner bracket with anticorrosive sealant*


3. Coat threaded holes on the scanner radiator with anticorrosive sealant.
4. Grease the O-ring and set it to the radiator bracket.
5. Lay the scanner radiator on the radiator bracket.
6. Coat the radiator fixing bolts (4 pcs.) with anticorrosive sealant. Fasten the scanner radiator to the radiator bracket with the radiator fixing bolts, flat washers and spring washers.

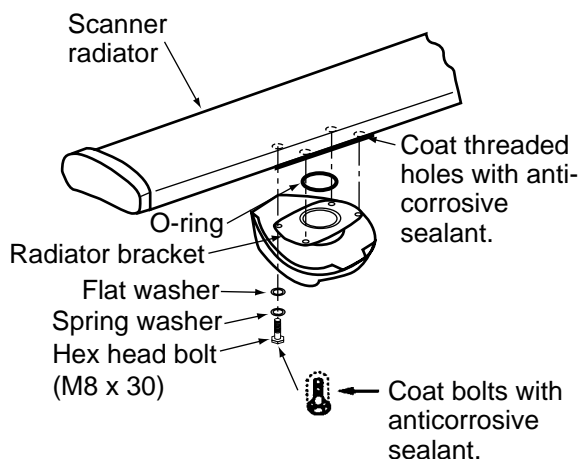

*Figure 3 Fastening the radiator bracket to the scanner unit chassis*

## Mounting the Scanner Unit

The scanner unit can be mounted using the fixing holes on the outside (200 x 200 mm) or inside (140 x 150 mm) the scanner unit.

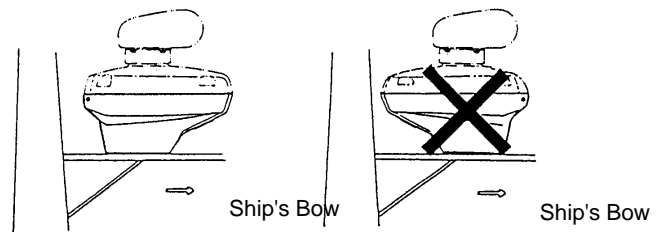


*Figure 4 Mounting of Scanner Unit*

## Outside fixing holes


Use the hex. bolt (supplied) to mount the scanner unit as below.

1. Lay the corrosion-proof rubber mat (supplied) on the mounting platform.

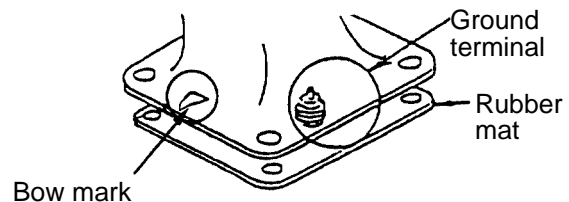

*Figure 5 Location of rubber mat*

2. Lay the scanner unit on the mounting platform, orienting it as shown in Figure 6.

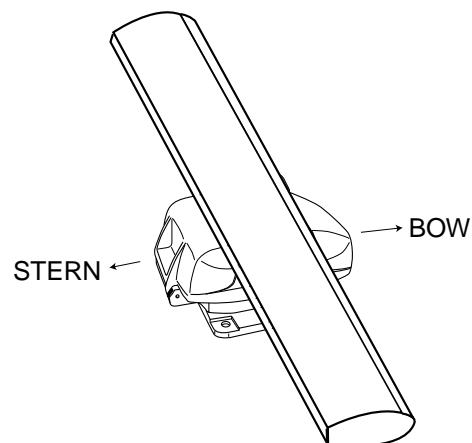


*Figure 6 Scanner unit*

## ⚠ CAUTION

**Do not lift the antenna unit by the radiator; lift it by the housing.**


The radiator may be damaged.

3. Insert four hex bolts and seal washers from the top of the scanner housing. Insert the seal washers with the larger diameter next to the bolt heads. Be sure the seal washer, not other washers, is next to the bolt head.

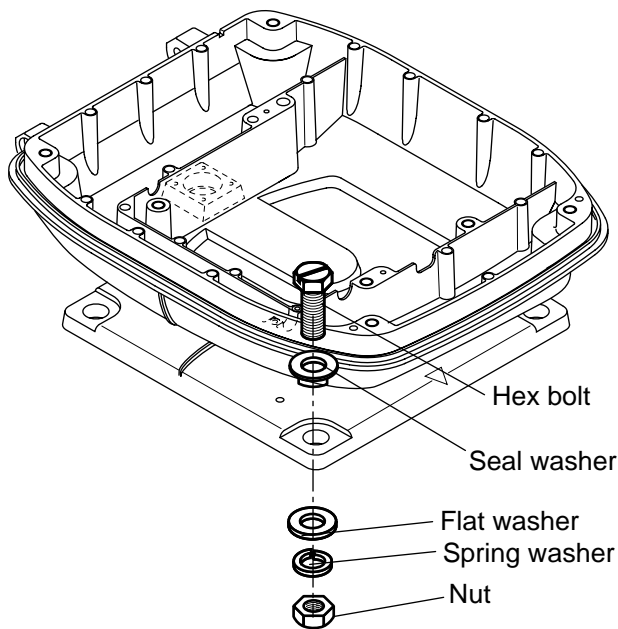

*Figure 7 Fixing the scanner unit chassis*


4. Pass flat washers, spring washers and nuts onto hex bolts. Fasten by tightening nuts. Do not fasten by tightening the hex bolts; seal washers may be damaged.

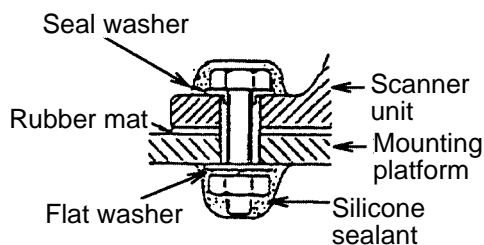

*Figure 8 How to fasten scanner unit to mounting platform*

5. Coat flat washers, spring washers, nuts and exposed parts of bolts with silicone sealant.

6. Prepare ground point in mounting platform (within 300 mm of ground terminal on scanner unit) using M6 x 25 bolt, nut and flat washer.
7. Run the ground wire (RW-4747, 340 mm) between the ground terminal and ground point.
8. Coat ground terminal and ground point with silicone sealant as shown in Figure 9.

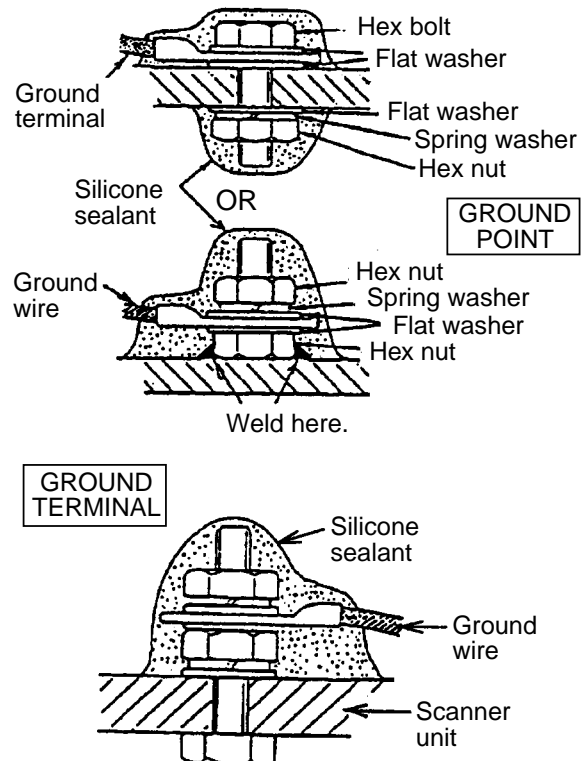


*Figure 9 How to coat ground point and ground terminal with silicone sealant*

## Fixing holes inside scanner unit

This method requires removal of the RF unit in the scanner unit to access inside fixing holes. Use hex. bolts, flat washers, spring washers and nuts (local supply) to mount the scanner unit, confirming length of bolts.

1. Loosen four scanner bolts to open the scanner unit.

Refer to Figure 11 for location.

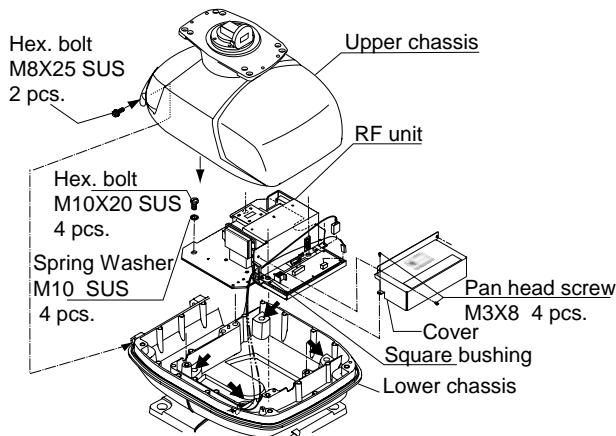

*Figure 10 Scanner unit chassis, upper chassis separated*

2. Unplug connector connected between upper and lower chassis.
3. Separate upper chassis from lower chassis by removing two hex. bolts.
4. Remove cover by unfastening four pan head screws.
5. Remove connector from RF unit.
6. Remove RF unit by unfastening four hex. bolts.
7. Lay the corrosion-proof rubber mat (supplied) on the mounting platform.
8. Fasten the lower chassis to the mounting platform with hex. bolts, spring washers, flat washers and nuts (local supply), and then coat flat washers, spring washers, nuts and exposed parts of bolts with silicone sealant.


Cut a slit in rubber bushing to insert bolts. Seal washers are not required.

9. Reassemble RF unit, cover and upper chassis.
10. Set four knob caps (supplied) into outside fixing holes.
11. Do steps 6-8 in "Outside fixing holes".

## Connecting the Signal Cable


Only the signal cable runs from the display unit to the scanner unit. In order to minimize the chance of picking up electrical interference, avoid where possible routing the signal cable near other onboard electrical equipment. Also, avoid running the cable in parallel with power cables. Pass the cable through the hole and apply sealing compound around the hole for waterproofing.

1. Open the scanner cover by loosening four scanner bolts, and then fix the stay.

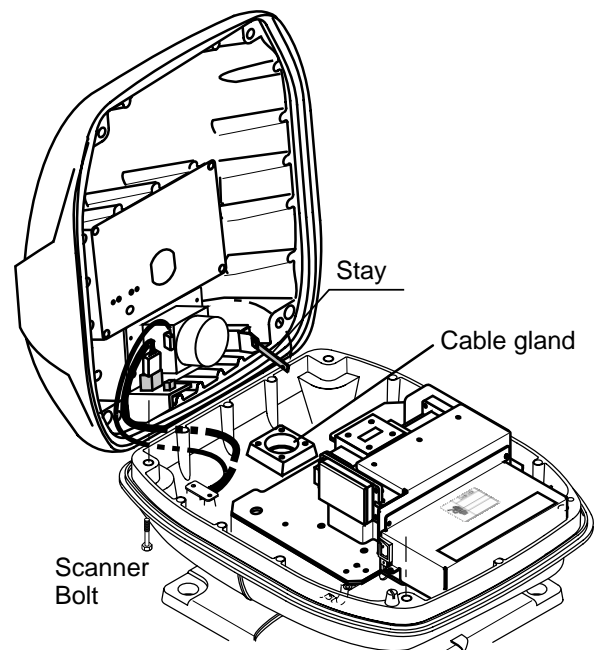


*Figure 11 Scanner unit chassis, cover opened*

2. Fabricate the signal cable as shown below.

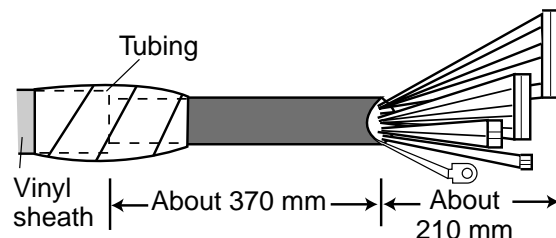


*Figure 12 Fabrication of signal cable*

3. Unfasten the cable gland assembly (plate, gasket, flat washer).
4. Pass the signal cable w/connector through the bottom of the scanner unit chassis. Pass the cable through the gland assembly as shown below.

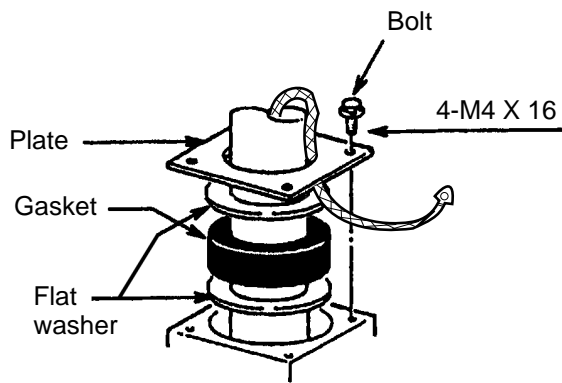


*Figure 13 Passing the signal cable through the cable gland assembly*

5. Fasten the crimp-on lug on the shield to one of the fixing bolts of the cable gland assembly.
6. Position the signal cable so that no more than 4 cm of the sheath is exposed as shown in the figure below. Tighten fixing bolts.

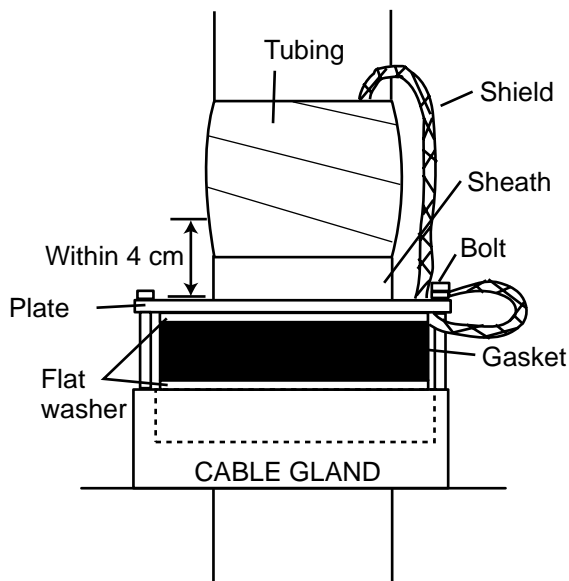


*Figure 14 How to fix signal cable in cable gland*

7. Unfasten four screws shown in the figure below.

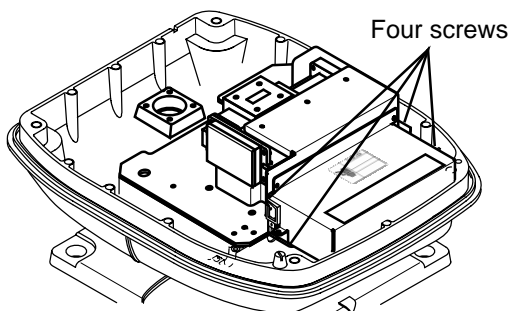


*Figure 15 Scanner unit chassis, cover opened*

8. Pass the signal cable through the cable protector.

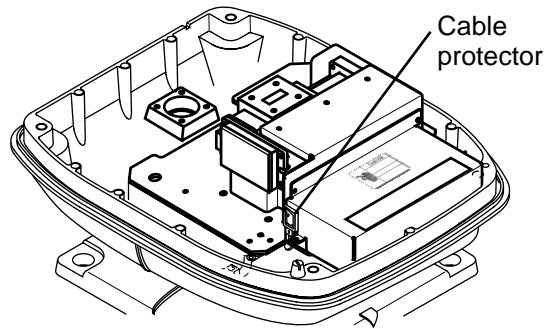

*Figure 16 Scanner unit chassis, cover opened*


9. Connect the signal cable to the RTB Board (03P9249), referring to the interconnection diagram and the figure below.
10. Attach three EMI cores to the signal cable as shown below.

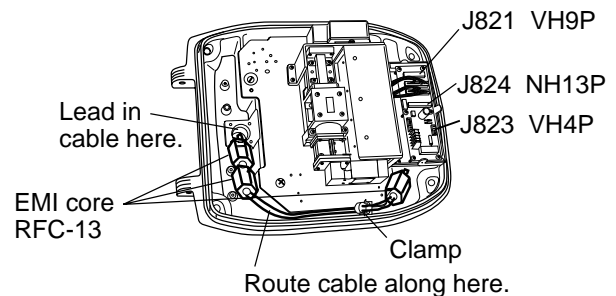

*Figure 17 Scanner unit chassis, cover opened*

11. Fix the signal cable with the cable clamp.
12. Release the stay and close the cover. Loosely fasten the cover fixing screws; you will have to make some adjustments inside after completion of wiring.

**Note:** When closing the cover, set the gaskets to grooves in the bottom chassis, then tighten bolts.

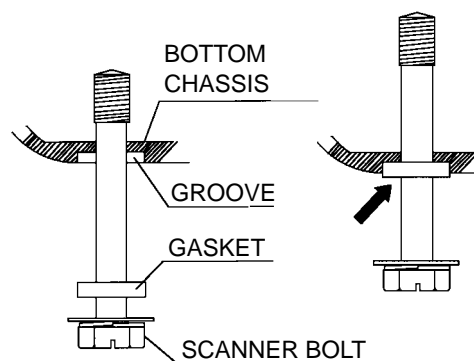

Torque :  $9.8 \pm 0.1 \text{ N} \cdot \text{m}$

# DISPLAY UNIT


## Mounting Considerations

The display unit can be mounted on a tabletop, a bulkhead or on the overhead. When selecting a mounting location, keep in mind the following points:

- Select a location where the display unit can be viewed and operated conveniently and where the screen can be viewed while facing towards the bow.
- Locate the equipment away from places subject to water splash and rain.
- The display unit weighs 13 kg. Be sure the mounting location is strong enough to support the weight of the unit under the continued vibration which is normally experienced on the ship. If necessary reinforce the mounting location.
- Leave sufficient space on the sides and rear of the unit to facilitate maintenance. Also, leave a foot or so of “service loop” in cables behind the unit so it can be pulled forward for servicing or easy removal of connectors.
- A magnetic compass will be affected if placed too close to the display unit. Observe the following compass safe distances to prevent deviation of a magnetic compass: Standard compass, 1.0 m, Steering compass, 0.8 m.

## Tabletop Mounting


1. Unfasten the two bolts at the front of the display unit to dismount the mounting base.
2. Using the mounting base as a template mark fixing holes in the mounting location.
3. Fasten the mounting base to the tabletop with M10 bolts or coach screws.
4. Set the display unit to the mounting base and fasten it with the bolts removed at step 1.

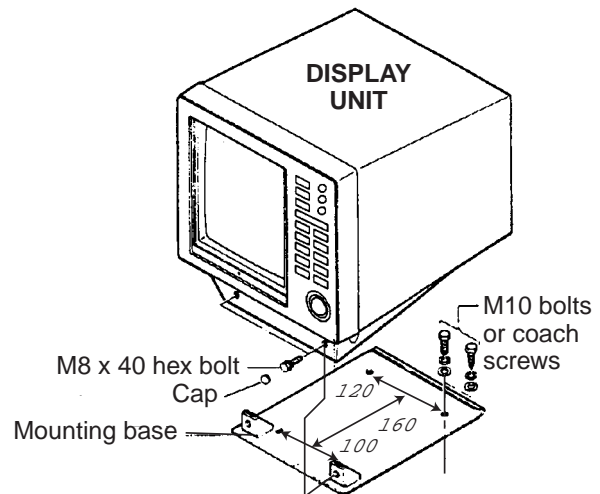

*Figure 17 Tabletop mounting of display unit*

## Bulkhead, Overhead Mounting

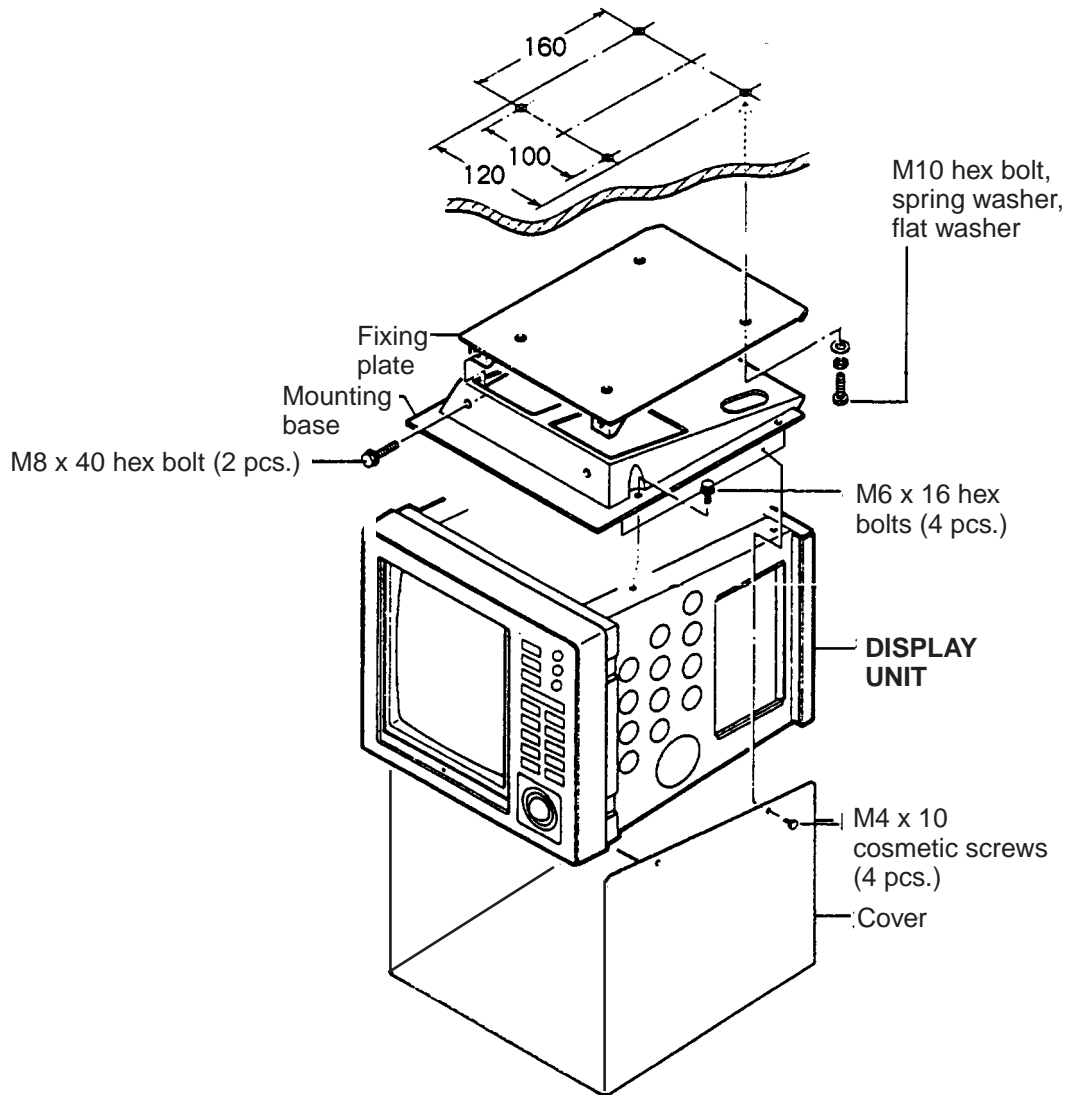

The display unit is shipped ready for mounting on a tabletop. However, it may also be mounted on a bulkhead or on the overhead, following the illustration below.



*Figure 18 Bulkhead, overhead mounting*

# WIRING

All wiring are terminated at the rear of the display unit. Connect the scanner unit, power supply and external equipment, referring to the drawing below for connector location. Be sure to ground the display unit.

 <b>CAUTION</b>	
<b>Use the power cable supplied with the radar.</b>	
	<b>Ground the equipment to prevent electrical shock and mutual interference.</b>

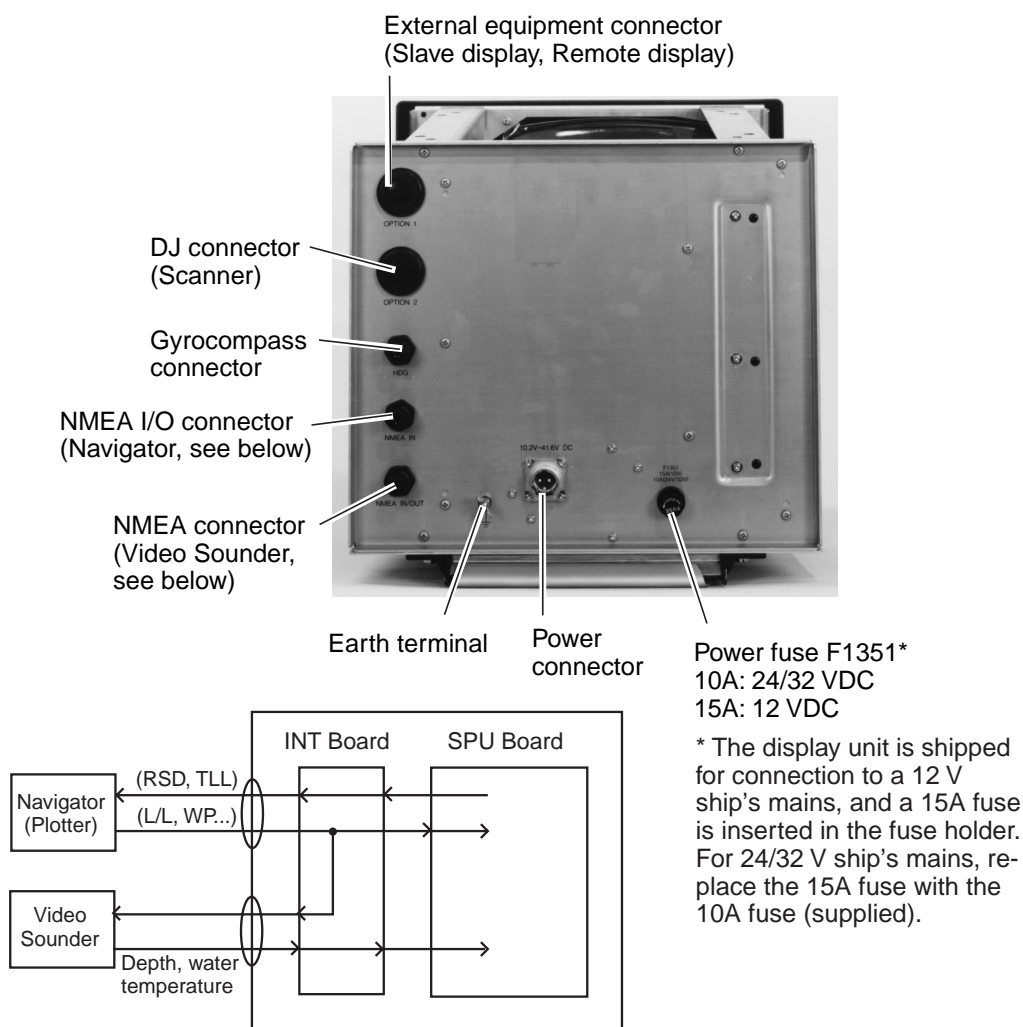


Figure 19 Display unit, rear view



# ADJUSTMENTS, INITIAL SETTINGS

## Adjustments, Initial Settings

### 1. Displaying the Installation Setup menu

Most adjustments and initial settings may be completed on the Installation Setup menu, and you can display this menu as follows:

1. Press the HM OFF control while turning on the power. Release the control when you hear a beep.
2. Press the [MENU] key. The MAIN menu appears.

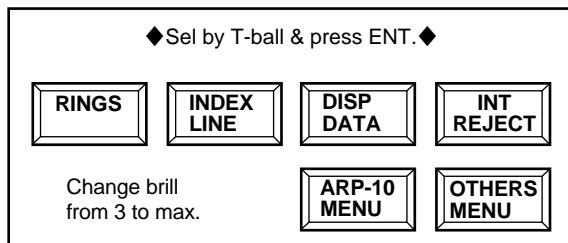


Figure 20 Main menu

3. Select OTHERS menu with the trackball and press the [ACQ/ENTER] key.
4. Select 23. Installation Setup menu with the trackball and press the [ACQ/ENTER] key.

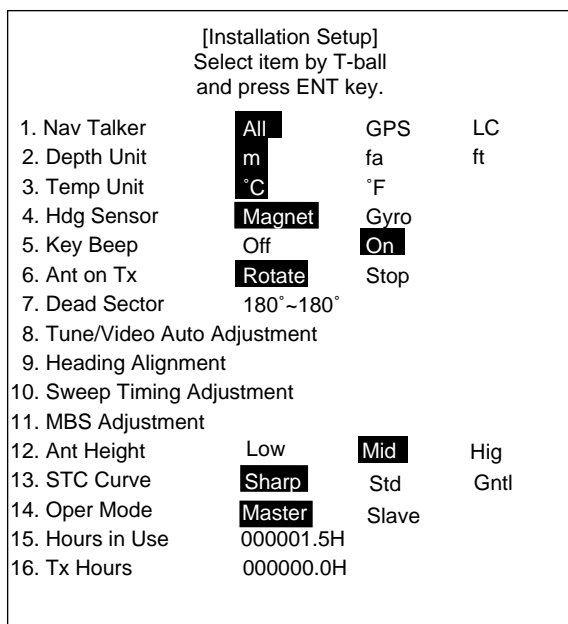


Figure 21 Installation Setup menu

5. Select menu item with the trackball and press the [ACQ/ENTER] key.
6. Select menu option with the trackball and press the [ACQ/ENTER] key to register.

### 2. Selecting a navaid

1. Select 1. Nav Talker on the Installation Setup menu and press the [ACQ/ENTER] key.
2. Select type of navaid connected to the radar; All, GPS or LC (Loran C). "All" displays GPS and Loran C position data alternately.
3. Press the [ACQ/ENTER] key.

### 3. Selecting a heading sensor

1. Select 4. Hdg Sensor on the Installation Setup menu and press the [ACQ/ENTER] key.
2. Select type of heading sensor connected to the radar; magnetic compass (for example, C-2000, PG-1000) or gyrocompass (requires AD-10 Gyro Converter).
3. Press the [ACQ/ENTER] key.

### 4. Adjusting tuning, video amplifier input level

Do the following to automatically adjust tuning and video amplifier level input.

1. Press the [STBY/TX] key to transmit.
2. Select 8. Tune/Video Adjustment on the Installation Setup menu and press the [ACQ/ENTER] key. The unit automatically adjusts tuning and video amplifier input level, displaying the following message:

[Tune/Video Auto Adjustment]

Now under correction.

Return to installation setup  
menu after the correction.

*Figure 22 Tune/video auto  
adjustment message*

3. When adjustment is completed, the message disappears.

## 5. Aligning heading

You have mounted the scanner unit facing straight ahead in the direction of the bow. Therefore, a small but conspicuous target dead ahead visually should appear on the heading marker (zero degrees).

In practice, you will probably observe some small bearing error on the display because of the difficulty in achieving accurate initial positioning of the scanner unit. The following adjustment will compensate for this error.

1. Identify a suitable target (for example, ship or buoy) at a range between 0.125 to 0.25 nautical miles, preferably near the heading marker. To lessen error, keep echoes in the outer half of the picture by changing the range. Also, be sure the zoom and off center functions are off.
2. Select 9. Heading Alignment on the Installation Setup menu and press the [ACQ/ENTER] key. The following message appears:

[Heading Alignment]  
Set EBL1 to center of target  
dead ahead and press ENTER.

Correction 0.0°

<Press MENU for inst setup>


*Figure 23 Heading alignment message*

3. Operate the trackball to bisect target selected at step 1 with the heading marker.
4. Press the [ACQ/ENTER] key.
5. As a final test, move the boat towards a small buoy and confirm that the buoy shows up dead ahead on the radar when it is visually dead ahead.

## 6. Adjusting sweep timing


This adjustment ensures proper radar performance, especially on short ranges. The radar measures the time required for a transmitted echo to travel to the target and return to the source. The received echo appears on the display based on this time. Thus, at the instant the transmitter is fired, the sweep should start from the center of the display (sometimes called sweep origin).

A trigger pulse generated in the display unit goes to the scanner unit through the signal cable to trigger the transmitter (magnetron). The time taken by the signal to travel up to the scanner unit varies, depending largely on the length of the signal cable. During this period the display unit should wait before starting the sweep. When the display unit is not adjusted correctly, the echoes from a straight local object (for example, a harbor wall or straight pier) will not appear with straight edges – they will be seen as “pushed out” or “pulled in” near the picture center. The range of objects will also be incorrectly shown.

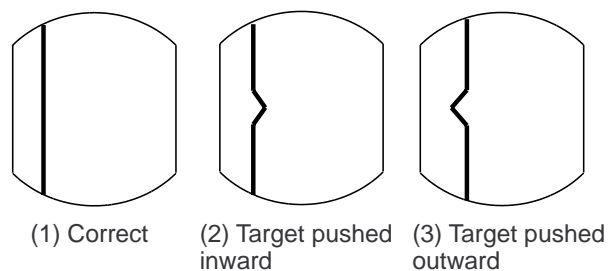

*Figure 24 Examples of improper and  
correct sweep timing*

1. Transmit on the shortest range and confirm that the [GAIN] and [A/C SEA] controls are properly adjusted.
2. Visually select a target which forms a straight line (for example, harbor wall, straight pier).
3. Select 10. Sweep Timing Adjustment on the Installation Setup menu and press the [ACQ/ENTER] key. The following message appears:

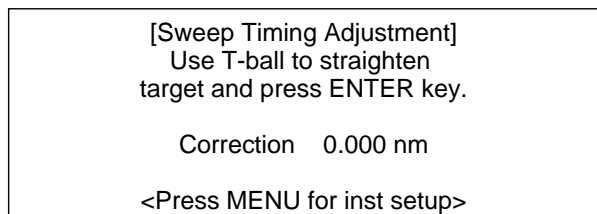


*Figure 25 Sweep timing adjustment message*

4. Operate the trackball to straighten the target selected at step 2, and then press the [ACQ/ENTER] key.

## 7. Adjusting MBS (Main Bang Suppression)

Main bang, a large filled circle which appears at the display center on short ranges, can be suppressed as follows:

1. Transmit on long range about 10 minutes.
2. Adjust the gain to show a small amount of noise on the display.
3. Change to the 0.125 nautical mile range and adjust the [A/C SEA] control.
4. Select 11. MBS Adjustment on the Installation Setup menu and press the [ACQ/ENTER] key. The following message appears:

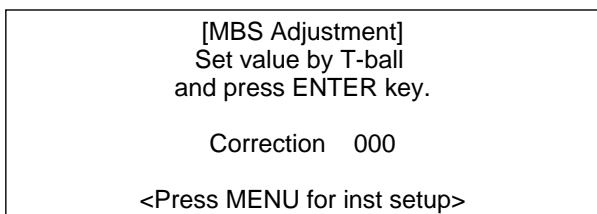

*Figure 26 MBS adjustment message*

5. Operate the trackball to suppress main bang (adjustment range: 000 to 025).
6. Press the [ACQ/ENTER] key.

## 8. Entering scanner height

The STC effect changes with respect to scanner height above the waterline. Enter scanner height above the waterline to optimize the STC effect.

1. Select 12. Ant Height on the Installation Setup menu and press the [ACQ/ENTER] key.
2. Select scanner height above the waterline; Low (3 m or less), Mid (3 to 6 m) or High (6 to 10 m).
3. Press the [ACQ/ENTER] key.

## 9. Selecting STC curve

The STC effect changes with respect to the scanner height above the waterline. The default STC curve can be maintained in most cases. If necessary the STC curve can be changed as follows:

1. Select 13. STC Curve on the Installation Setup menu and press the [ACQ/ENTER] key.
2. Select STC curve desired;
  - Sharp:** The effective range of the [A/C SEA] control is relatively short.
  - Std:** Between Sharp and Gentle.
  - Gntl (Gentle):** The effective range of the [A/C SEA] control is relatively long.
3. Press the [ACQ/ENTER] key.

## 10. Setting a dead sector

When the scanner is installed at a close distance in front of the wheelhouse, the radar should be set not to transmit within that area, to prevent microwave hazard.

1. Select 7. Dead Sector on the Installation Setup menu and press the [ACQ/ENTER] key.
2. Operate the trackball to enter starting point of sector (in figures).
3. Press the [ACQ/ENTER] key.
4. Operate the trackball to enter ending point of sector (in figures).
5. Press the [ACQ/ENTER] key.

**Note:** The dead sector graphic can be turned on/off on the OTHERS menu. For further details, see the Operator's Manual.

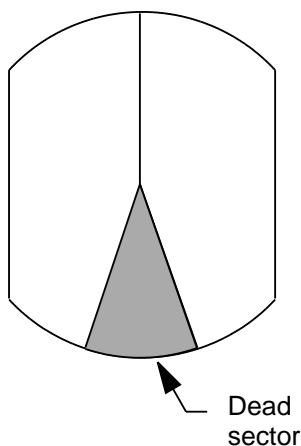


Figure 27 Dead sector

## 11. Checking magnetron heater voltage

Magnetron heater voltage is formed on the MD Board (03P9235) of the scanner unit, and is preadjusted at the factory for use with any length of signal cable. Therefore no adjustment is required. However, check magnetron heater voltage as follows:

1. Turn on the radar and leave it in stand-by.
2. Open the scanner cover.
3. Unfasten four screws to remove the RF section cover.

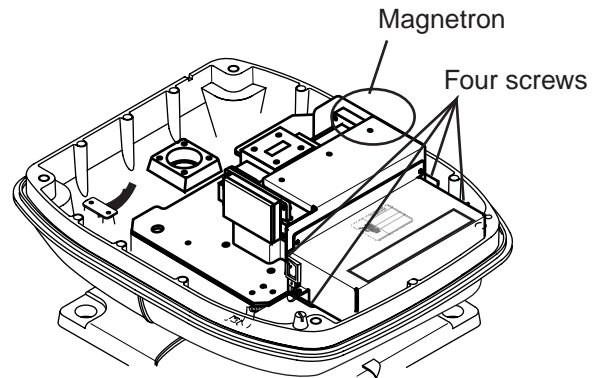
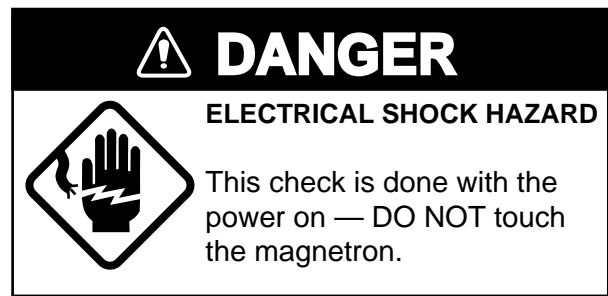


Figure 28 Scanner unit, cover opened

4. Connect a multimeter, set to 10 VDC range, between test point J825#4 and J825#6(GND) on the RTB Board (03P9249).

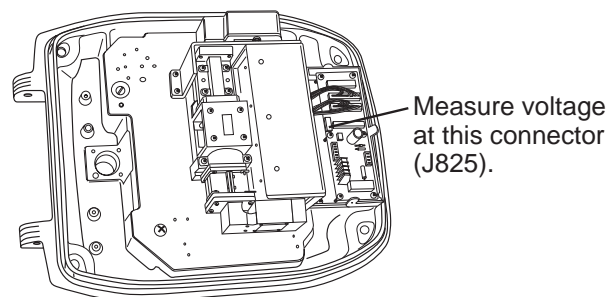


Figure 29 Scanner unit, cover removed

5. Confirm the meter reads  $7.6\text{ V} \pm 0.1\text{ V}$ .
6. Close the scanner cover and tighten the cover fixing screws.

# ARP-10 INSTALLATION

## Necessary Parts

The Auto Plotter ARP-10 is an optional circuit board which is accommodated in the display unit of the FR-7062 to provide manual or automatic acquisition of 10 radar targets.

ARP-10 Installation Kit (000-086-852)

Part	Type	Code No.	Qty
ARP-10 Board	18P9007	008-476-930	1
Spacer	SQ-20	000-801-650	3
Spring Washer	M3 C5191W	000-864-204	3
Pan Head Screw	M3 X 8 C2700W	000-881-404	3
Pan Head Screw w/washer	3 X 8 SWRM10	000-805-774	3

**Note:** Spacers, spring washers and pan head screws are not used.

In addition to the ARP-10 Board, a heading sensor which outputs heading data in AD format in 25 msec intervals (for example, FURUNO PG-1000) is required.

## Installation

1. Unfasten six screws to remove the display unit cover.
2. Mate connector J107 on the SPU Board with connector P107 on the ARP-10 Board.
3. Fix the ARP-10 Board with three pan head screws (supplied).

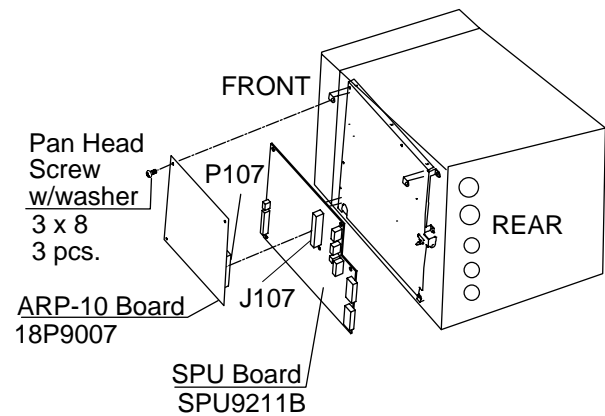


Figure 30 How to install the ARP-10

## Adjustments

1. Turn on heading and speed sensors. Turn on the radar and transmit.
2. Press the [MENU] key and select OTHERS menu.
3. Select 22. Self Test and press the [ACQ/ENTER] key. Confirm that the ARP-10 test results show OK for SPEED, COURSE, TRIGGER, VIDEO, BP and HP.
4. Adjust the GAIN, A/C and A/C RAIN controls so FE-DATA1 and FE-DATA2 indications on the ARP-10 TEST show less than 1,000. Also, raise/lower the gain while watching the FE-DATA1 and FE-DATA2 indications. Confirm that the FE-DATA1 and FE-DATA2 indications rise/lower according to GAIN control adjustment.

**[ Self Test ]**

Key test: Press each key and check on-screen indication lights.

<p>ARP-10 TEST</p> <p>ROM OK 18590271xx</p> <p>RAM OK</p> <p>SPEED OK NAV 0.0KT</p> <p>COURSE OK 167.6°</p> <p>TRIGGER OK</p> <p>VIDEO OK</p> <p>BP OK</p> <p>HP OK</p> <p>MIN-HIT 0003</p> <p>SCAN-TIME 0854</p> <p>MAN-ACQ 00</p> <p>AUTO-ACQ 00</p> <p>FE-DATA1 0000</p> <p>FE-DATA2 0000</p>	<div style="display: flex; align-items: center;"> <div style="width: 20px; height: 10px; background-color: gray; border: 1px solid black; margin-right: 5px;"></div> <div style="border: 1px solid black; width: 40px; height: 20px; margin-right: 5px;"></div> </div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 40px; height: 20px; margin-right: 5px;"></div> <div style="border: 1px solid black; width: 40px; height: 20px; margin-right: 5px;"></div> </div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 40px; height: 20px; margin-right: 5px;"></div> <div style="border: 1px solid black; width: 40px; height: 20px; margin-right: 5px;"></div> </div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 40px; height: 20px; margin-right: 5px;"></div> <div style="border: 1px solid black; width: 40px; height: 20px; margin-right: 5px;"></div> </div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 40px; height: 20px; margin-right: 5px;"></div> <div style="border: 1px solid black; width: 40px; height: 20px; margin-right: 5px;"></div> </div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 40px; height: 20px; margin-right: 5px;"></div> <div style="border: 1px solid black; width: 40px; height: 20px; margin-right: 5px;"></div> </div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 40px; height: 20px; margin-right: 5px;"></div> <div style="border: 1px solid black; width: 40px; height: 20px; margin-right: 5px;"></div> </div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 40px; height: 20px; margin-right: 5px;"></div> <div style="border: 1px solid black; width: 40px; height: 20px; margin-right: 5px;"></div> </div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 40px; height: 20px; margin-right: 5px;"></div> <div style="border: 1px solid black; width: 40px; height: 20px; margin-right: 5px;"></div> </div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 40px; height: 20px; margin-right: 5px;"></div> <div style="border: 1px solid black; width: 40px; height: 20px; margin-right: 5px;"></div> </div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 40px; height: 20px; margin-right: 5px;"></div> <div style="border: 1px solid black; width: 40px; height: 20px; margin-right: 5px;"></div> </div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 40px; height: 20px; margin-right: 5px;"></div> <div style="border: 1px solid black; width: 40px; height: 20px; margin-right: 5px;"></div> </div>
--	---

Program No. : 0359146-1XX

ROM : OK

RAM : OK

Hours in use : 000006.9H


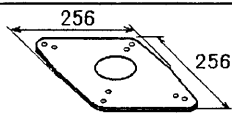
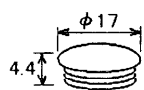
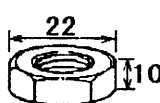
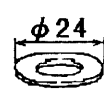
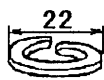
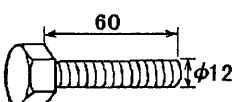
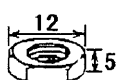


Tx hours : 000001.1H

<Press MENU for OTHERS menu.>

*Figure 31 Self test display*

**FURUNO**

CODE NO.	008-503-360	03FR-X-9401 -7 1/2
TYPE	CP03-18401	

工事材料表 INSTALLATION MATERIALS					
番号 NO.	名称 NAME	略図 OUTLINE	型名／規格 DESCRIPTIONS	数量 Q' TY	用途／備考 REMARKS
1	シールワッシャー SEAL WASHER		03-001-3002-0	4	
			CODE NO. 300-130-020		
2	防蝕ゴム CORROSION-PROOF RUBBER MAT		03-142-3001-0	1	
			CODE NO. 100-275-580		
3	キャップ CAP		040-4010	4	
			CODE NO. 000-515-332		
4	六角ナット 1種 HEX. NUT		M12 SUS304	4	
			CODE NO. 000-863-112		
5	ミガキ平座金 FLAT WASHER		M12 SUS304	4	
			CODE NO. 000-864-132		
6	バネ座金 SPRING WASHER		M12 SUS304	4	
			CODE NO. 000-864-263		
7	六角ボルト (全ネジ) HEX. BOLT		M12X60 SUS304	4	
			CODE NO. 000-862-191		
8	六角ナット 1種 HEX. NUT		M6 SUS304	1	
			CODE NO. 000-863-109		
9	ミガキ平座金 FLAT WASHER		M6 SUS304	3	
			CODE NO. 000-864-129		
10	バネ座金 SPRING WASHER		M6 SUS304	1	
			CODE NO. 000-864-260		

DWG NO.



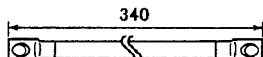
C3459-M02- G

FURUNO ELECTRIC CO., LTD.

(略図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)

**FURUNO**

CODE NO.	008-503-360	03FR-X-9401-7 2/2
TYPE	CP03-18401	

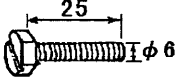工事材料表 INSTALLATION MATERIALS					
番号 NO.	名称 NAME	略図 OUTLINE	型名／規格 DESCRIPTIONS	数量 Q'TY	用途／備考 REMARKS
11	六角ボルト HEX. BOLT		M6X25 SUS304	1	
			CODE NO. 000-862-180		
12	EMIコア EMI CORE		RFC-13	3	
			CODE NO. 000-141-084		
13	7-線 GROUNDING WIRE		RW-4747-1 03S4747	1	
			CODE NO. 000-566-000		

DWG NO.

C3459-M04- G


FURUNO ELECTRIC CO., LTD.

(略図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)





**FURUNO**

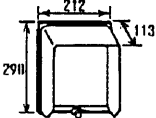
		CODE NO.		008-223-520	03CS-X-9501 -4 1/1
		TYPE		FP03-02910	
<b>付属品表</b> ACCESSORIES		FR-7000/8000 FMD-8000 SERIES 船舶用レーダ MARINE RADAR			
番号 NO.	名称 NAME	略図 OUTLINE	型名/規格 DESCRIPTIONS	数量 Q'TY	用途/備考 REMARKS
1	フード組品 HOOD ASSY.		FP03-02910	1	
			CODE NO. 008-223-520		

C3314-004- E

FURUNO ELECTRIC CO., LTD

(略図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)

**FURUNO**

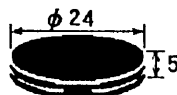		CODE NO.		008-411-810	03DV-X-9502 -0 1/1	
		TYPE		FP03-04310		
付属品表 ACCESSORIES		FR-7000/FCR-1000 SERISES レーダー RADAR				
番号 NO.	名称 NAME	略図 OUTLINE	型名／規格 DESCRIPTIONS		数量 Q'TY	用途／備考 REMARKS
1	目盛 BLIND CAP		040-5025		2	
			CODE NO.	000-117-940		
		用途／備考 REMARKS				



C3392-F04-A

FURUNO ELECTRIC CO., LTD

(略図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)

**FURUNO**

CODE NO.	000-085-692	03E0-X-9301 -3
TYPE	SP03-10200	BOX NO. P

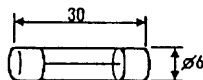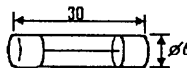

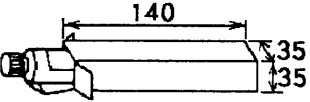
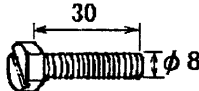


SHIP NO.		SPARE PARTS LIST FOR		U S E			SETS PER VESSEL	
		船舶用レーダー  MARINE RADAR		FR-7041/7041R/7111/7061/ 7112/7252/MODEL1941R				
ITEM NO.	NAME OF PART	OUTLINE	DWG. NO. OR TYPE NO.	QUANTITY			REMARKS/CODE NO.	
				WORKING		SPARE		
				PER SET	PER VES			
1	ヒューズ FUSE		FGBO 15A AC125V	1		2	指示部用 FOR DISPLAY UNIT 000-549-014	
2	ヒューズ FUSE		FGBO 10A AC125V	1		2	指示部用 FOR DISPLAY UNIT 000-549-065	
MFR'S NAME		FURUNO ELECTRIC CO.,LTD		DWG NO.		C3381-P01- D		1/1

(略図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)

## P A C K I N G L I S T

19AK-X-9856 -2 1/1

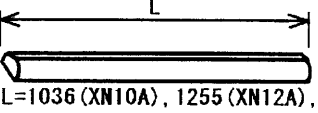XN10A, XN12A

N A M E	O U T L I N E	DESCRIPTION/CODE No.	Q' TY
ユニット	UNIT		
アンテナ ANTENNA	 L=1036 (XN10A), 1255 (XN12A),	XN10A, 12A 008-523-***	1
アンテナ工材	ANTENNA INSTALLATION MATERIALS		
Oリング O-RING	 φ 80	JISB2401-1A-G80 000-851-313	1
シーラント SEALANT	 140 35	1211 50G 000-854-118	1
六角ボルト スリワ HEX. BOLT	 30 φ 8	M8X30 SUS304 000-862-151	4
ミカキ平座金 FLAT WASHER	 φ 17	M8 SUS304 000-864-130	4
バネ座金 SPRING WASHER	 15	M8 SUS304 000-864-262	4

DWG NO.  
C3500-Z01- B

(略図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)





19AK-X-9856

- 注 記**
- 1) 装備ケーブルはサービスタブ時、本体を前方に十分引き出せるよう余裕を持たせること。
  - 2) 取付用ネジはM10ボルトまたはコーチボルト呼び径9を使用のこと。
  - 3) #印寸法は最小サービスタブ空間寸法とする。
  - 4) 指定外の寸法公差は、表1による。




- NOTE**
1. KEEP SUFFICIENT CABLE LENGTH BEHIND THE UNIT FOR MAINTENANCE.
  2. USE M10 BOLTS OR  $\phi 9$  COACH SCREWS FOR FIXING THE UNIT.
  3. #: RECOMMENDED SERVICE CLEARANCE.
  4. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS.

寸法範囲 (mm) DIMENSION	公差 (mm) TOLERANCE
0 < L ≤ 50	± 1.5 mm
50 < L ≤ 100	± 2.5 mm
100 < L ≤ 500	± 3 mm

表 1  
TABLE 1

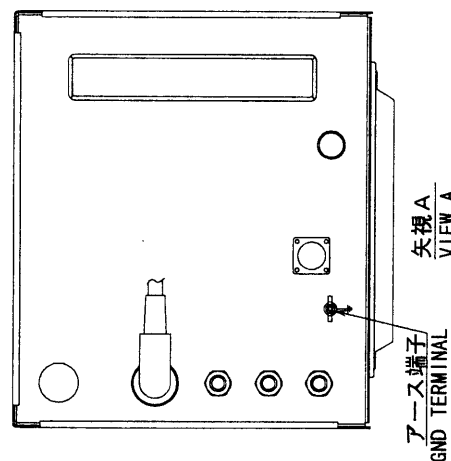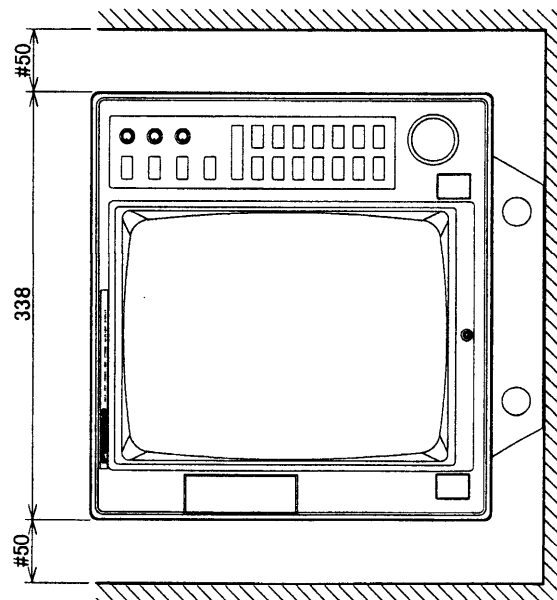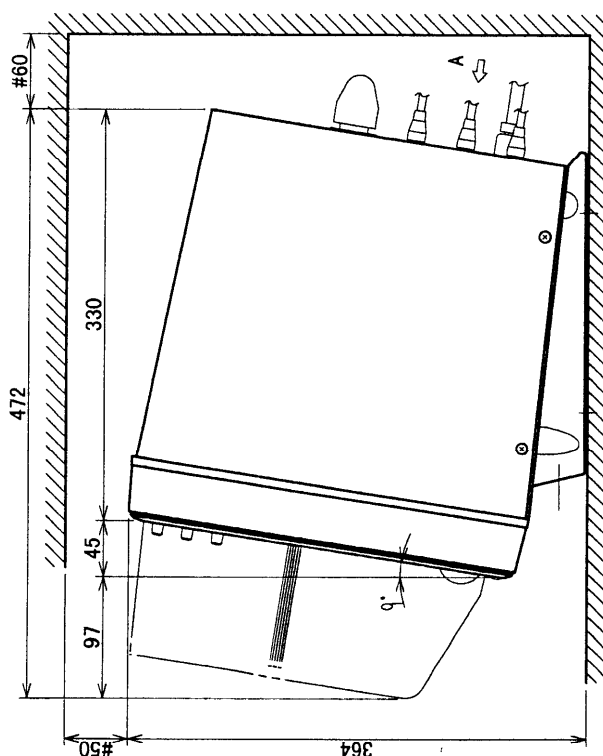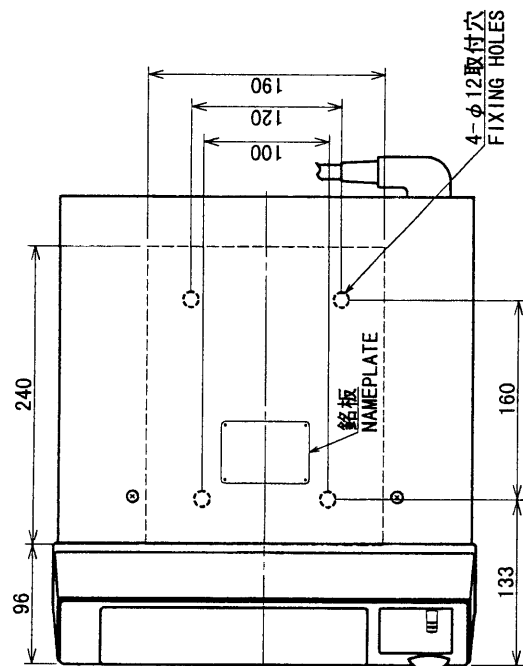

DRAWN July 4, 1980 T. YAMASAKI	TITLE RDP-122/136
CHECKED July 4, 1980 ebisu	名称 指示器
APPROVED July 6, 1980 S. Ishihara	外寸図
SCALE 1/6	CHANNEL BASE
MASS 13.0 kg	OUTLINE DRAWING
DWG. No. C3459-601-C	
	03-142-1000-G0

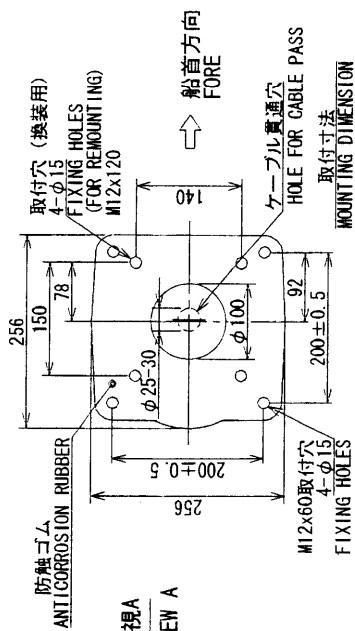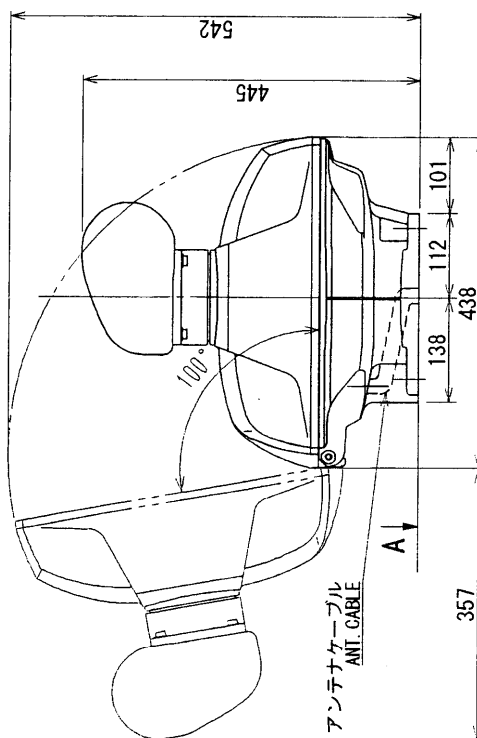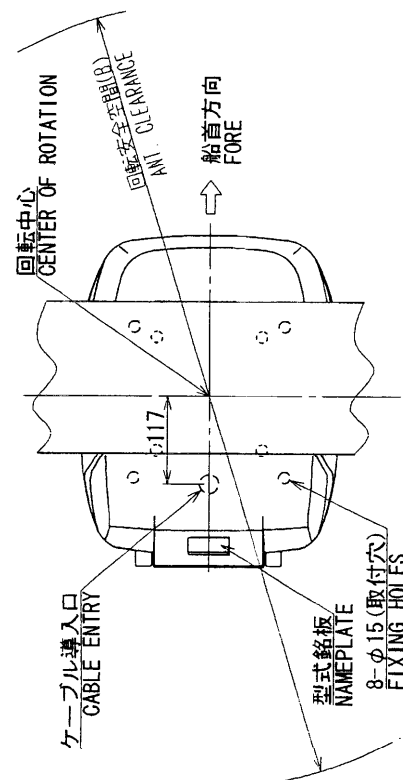

- 注記
- 1) 取付はM12ボルトを使用のこと。
  - 2) 指定外寸法公差は表1による。
  - 3) 空中線部の取付台にφ25-30のケ
  - 4) 初期製造分は取付穴寸法240x240  
換装時に注意してください。

**NOTE 1. USE M12 BOLTS FOR FIXING UNIT.**

2. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS.

3. MAKE A HOLE  $\phi$  25-30 ON MOUNTING MAST FOR CABLE ENTRY.


4. NOTE FOR REPLACEMENT: FIXING HOLE DIMENSIONS ARE CHANGED FROM 240x240 OF PREVIOUS SETS TO 200x200.

公差 (mm) TOLERANCE	寸法範圍 (mm) DIMENSION
± 1.5mm	$0 < L \leq 50$
± 2.5mm	$50 < L \leq 100$
± 3mm	$100 < L \leq 500$
± 4mm	$500 < L \leq 1000$
± 5mm	$1000 < L \leq 2000$

表 1 TABLE 1

種類	TYPE	XN12A	XN13A
空中綫長(A)	LENGTH (mm)	1255±10	1795±10
安全空間(B)	安全空間(B) CLEARANCE (mm)	1400	1940
質量	質量 MASS	23	25

表 2 TABLE 2

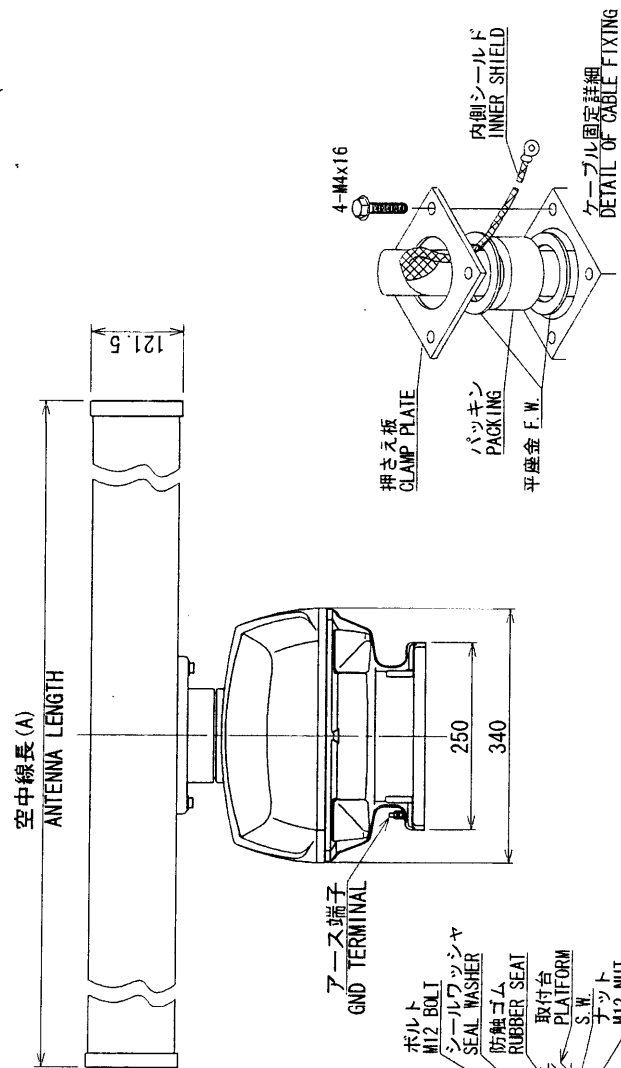

取付け部詳細  
DETAIL OF UNIT FIXING

DRAWN July 11/00 TAA/10/24/20	TITLE	RSB-0070/0072/0073 (XN12A/13A)
CHECKED 8/2/00 Y.K.	名称	空中線部
APPROVED 8/2/00 Y.K.		外寸図
SCALE 1/10	NAME	ANTENNA UNIT
MASS 案 2 に記載 SEE TABLE 2		
DWG. No. C3459-G03-C		OUTLINE DRAWING
		03-142-3000-03

**FURLUNO ELECTRIC CO., LTD.**



- 1) 工場にて取付済み。
- 2) コネクタのクランプでアースする。
- 3) 空中線部のシールドは完全にアースする。
- 4) 造船所へ支給。
- 5) 信号ケーブルにEMIコア（3個）を取り付ける。

**NOTE**

1. FITTED AT FACTORY.
2. GROUND THRU CONNECTOR CLAMP.
3. GROUND EFFECTIVELY AT SCANNER UNIT.
4. SHIPYARD SUPPLY.
5. ATTACH EMI CORES(3PCS) TO SIGNAL CABLES.


DRAWN	Jan 8 '99 T. KAMASAKI		TITLE	FR-7112
CHECKED	Jan 8 '99 K. Kusuruki		名称	船舶用レーダー
APPROVED	Jan 8 '99 K. Kusuruki			相互結線図
SCALE	MASS		NAME	MARINE RADAR
DWG. No.	C3460-C01-D		INTERCONNECTION DIAGRAM	

C3460-C01-D


## INTERCONNECTION DIAGRAM

**FURUNO ELECTRIC CO., LTD.**



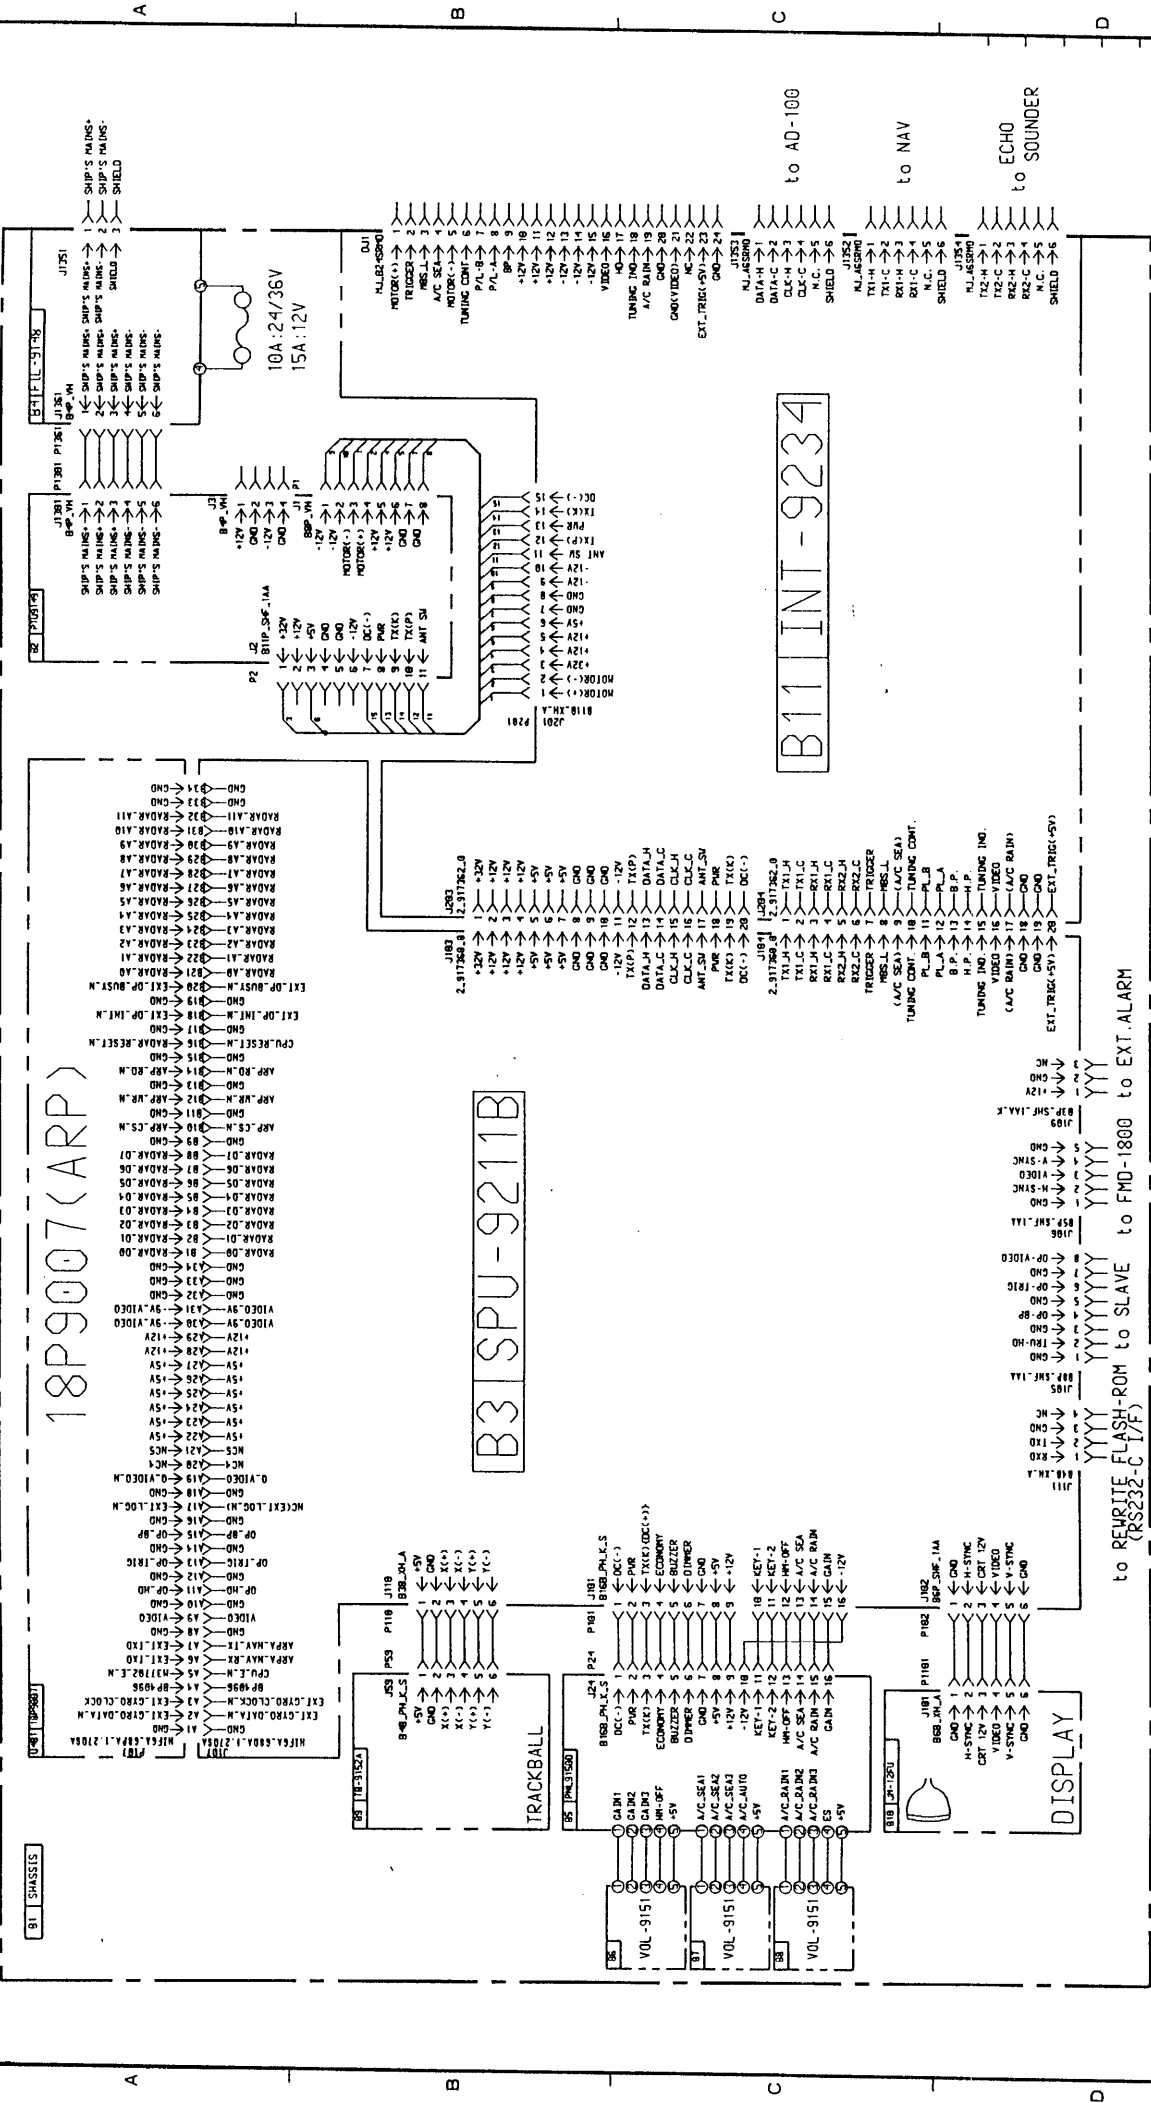


DRAWN Apr 23 '98 T. Yamashita	CHECKED Apr 24 '98 K. Kawakami	APPROVED Apr 24 '98 K. Kawakami	TYPE RDP-122	NAME 指示器 (組合)
FR-7112	FR-7062	FR-7062	NAME 回路図	NAME DISPLAY UNIT (GENERAL)
SCALE	WASS	YK	BLOCK NO.	SCHEMATIC DIAGRAM
03-142-6004-1	C3459-K01-B	03-142-6004-1		

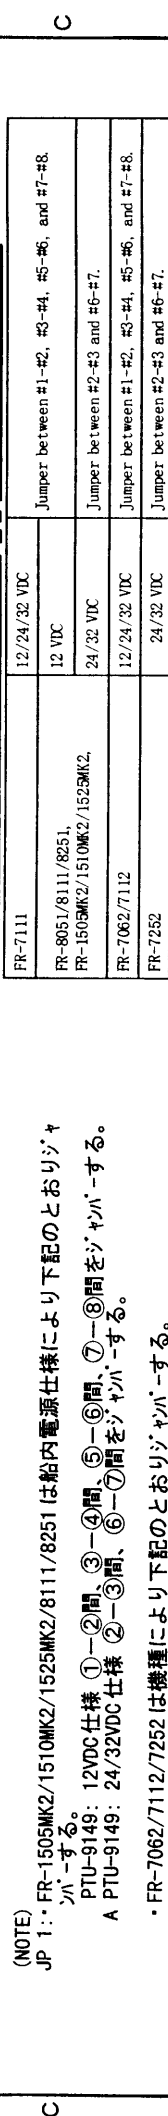


A PTU-9149: FR-7252 は ②-③間、⑥-⑦間をジャンパ-する。  
・FR-711 1 は 12V 仕様で船内電源 10.2 ~ 41.6VDC を加へ-する。  
PTU-9149: 12V 仕様のみ ①-②間、③-④間、⑤-⑥間、⑦-⑧間をジャンパ-する。

FR-1505MK2/1510MK2/1525MK2/8111/8251 は船内電源仕様により下記のとおりジヤパン-する。  
 PTU-9149: 12VDC 仕様 ①-②間、③-④間、⑤-⑥間、⑦-⑧間をジヤパン-する。  
 PTU-9149: 24/32VDC 仕様 ②-③間、⑥-⑦間をジヤパン-する。  
 FR-7062/7112/7252 は機種により下記のとおりジヤパン-する。  
 PTU-9149: FR-7062/7112 は ①-②間、③-④間、⑤-⑥間、⑦-⑧間をジヤパン-する。  
 PTU-9149: FR-7252 は ②-③間、⑥-⑦間をジヤパン-する。  
 FR-711 1 は12V 仕様で船内電源 10.2 ~ 41.6VDC を加へる。  
 PTU-9149: 12V 仕様のみ ①-②間、③-④間、⑤-⑥間、⑦-⑧間をジヤパン-する。

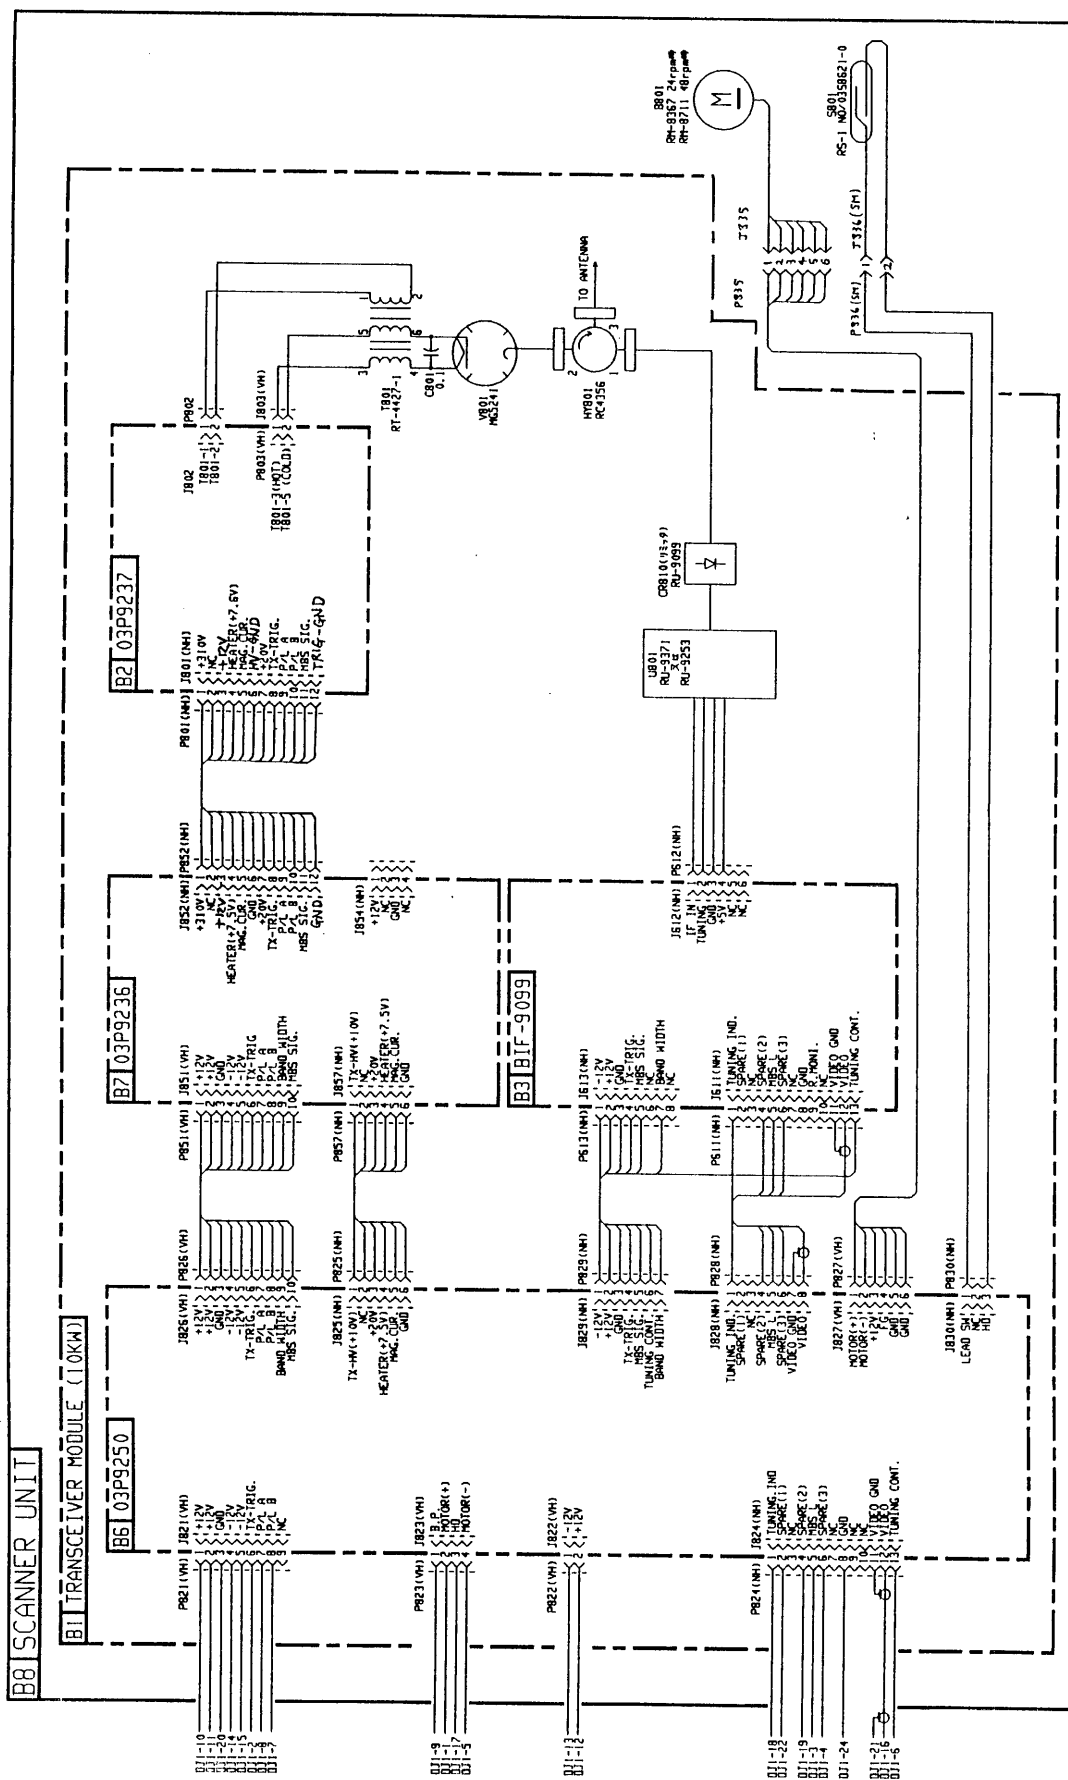

DRWN	Apr 23 9PT AHASAKI	TYPE	RSB-0072-060/RSB-0073-060
CHECKED	Apr 24 78 K Kusunagi	名称	空中線部 (総合)
APPROVED	Apr 24 78 K Kusunagi	回路図	回路図
SCALE	1/1	BLOCK NO.	SCANNER UNIT (GENERAL)
MASS	kg	NAME	SCANNER UNIT (GENERAL)
DATE	03-142-6010-2	SCHEMATIC DIAGRAM	

03p9236

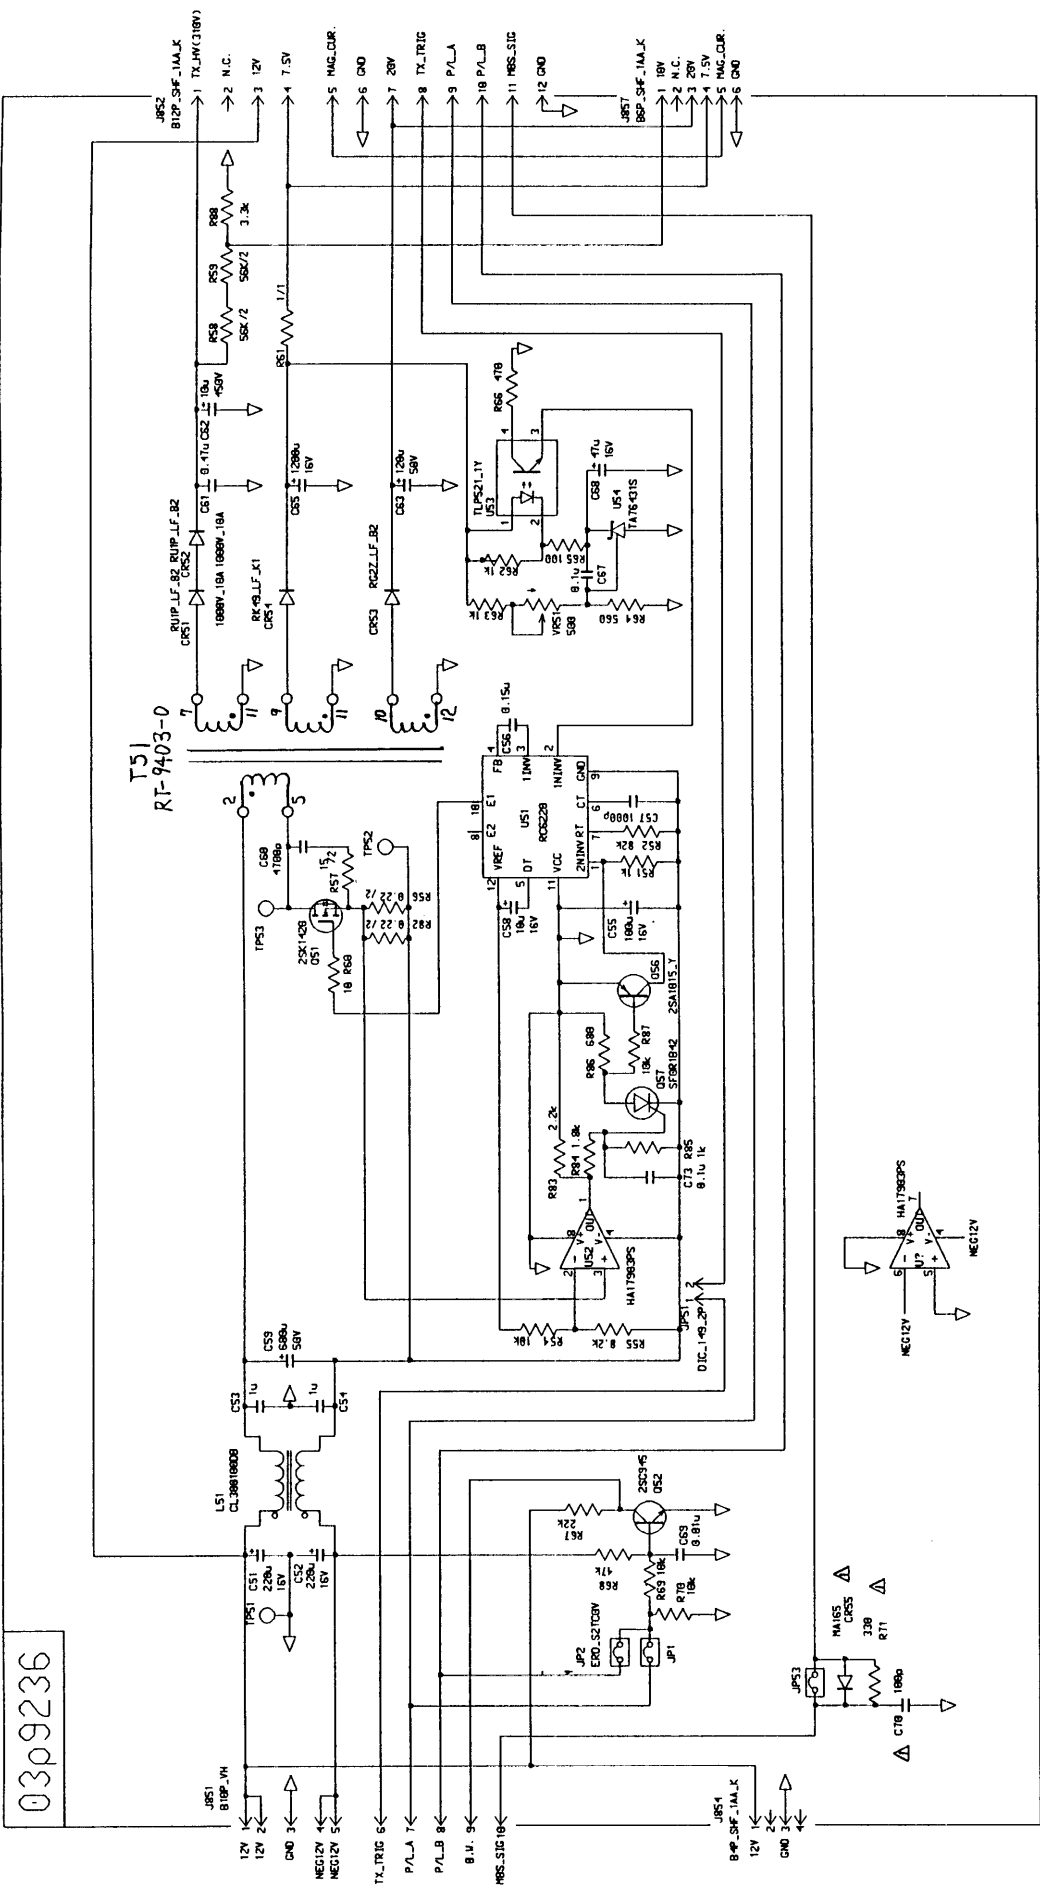

DATE	Mar. 11, '99 E. Kishin.	TYPE	03P9236
DESIGNED BY	M. C. T. 12, '98 K. O. G. m. T.	名称	電源基板
APPROVED	Mar. 11, '99 K. O. G. m. T.	回路図	回路図
SCALE	1/1	BLOCK NO.	PTUBOARD
FIG. NO.	C3460-K05- A	FIG. NO.	03-142-6007- 0
SCHEMATIC DIAGRAM			